

# VERIS H8920-5

**MANDATORY  
NETWORK  
VARIABLE**

nv2

nvoPower\_f

SNVT\_power\_f

**MANUFACTURER-  
SPECIFIC  
NETWORK  
VARIABLES**

nv1

nvoEgyWH

SNVT\_elec\_whr\_f

nv3

nviEgyClr

SNVT\_switch

nv4

nviMeterIndex

SNVT\_count

nv5

nvoMeterIndex

SNVT\_count

## CONFIGURATION PROPERTIES

nc49  
nc52  
nc88  
nc49

nciMaxSendT  
nciMinSendT  
nciMinDelta  
nciMaxSendTg

SNVT\_time\_sec  
SNVT\_time\_sec  
SNVT\_lev\_cont  
SNVT\_time\_sec

## NETWORK VARIABLE DETAILS

NAME	TYPE	RANGE	DESCRIPTION
nv1	nvoEgyWH	0-1e38kWH	kWH Consumption
nv2	nvoPower_f	0-1e38W	kW Real Power
nv3	nviEgyClr	See text	Used to reset nvoEgykWH to zero
nv4	nviMeterIndex	1-63	Used to select modbus address
nv5	nvoMeterIndex	1-63	Reports selected modbus address
nc49	nciMaxSendT	0.0-6553.4s	Maximum time between nvoPower updates. Default is 0 (disabled)
nc52	nciMinSendT	0.0-6553.4s	Minimum time between nvoPower updates. Default is 15 secs.
nc88	nciMinDelta	0.0-100%	Percent change in nvoPower which will force an nvoPower update. Default is 5%. Set to 0.0% to disable.
nc49	nciMaxSendTg	0.0-6553.4s	Maximum time between updates to all network variables. Default is 0 (disabled).