

Viconics Room Controller

TRC6500

Rooftop Unit (RTU), Heat Pump and Indoor Air Quality (IAQ)
Firmware Revision 2.0

Operating Guide




Table of Contents


Safety Information	3
Before You Begin.....	4
Section 1	
Introduction	6
User and Integrator Screens	6
BACnet Integration Guide References	7
HMI Display.....	8
Enter Setup Screen	9
Section 2	
Display Show/Hide Options.....	11
System Mode	12
Fan Mode Settings	12
Setpoint Adjustment for Automatic Mode	13
Other Functions.....	13
Optional Halo Backlight	14
Customizable Color Themes	14
Section 3	
Device Info	17
HVAC Configuration	19
Lua	34
My Profile	40
Network.....	42
Occupancy	54
Preferences.....	58
Service View	66
Setpoints	74
Terminals.....	75
User Management.....	78
Section 4	
Appendix A: Terminal Correspondence	84
Appendix B: Cybersecurity Checklist	85
Appendix C: Standby Screen.....	90
Appendix D: Notifications	91

Safety Information

Important Information

Read these instructions carefully and inspect the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

- 

The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.
- 

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER
DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
⚠ WARNING
WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
⚠ CAUTION
CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE
NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Viconics Technologies for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Before You Begin

Loss of Control

NOTICE

EQUIPMENT DAMAGE

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and over travel stop.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of anticipated transmission delays or failures of the link.¹
- Each implementation of equipment utilizing communication links must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in equipment damage.

Electrostatic Discharge

NOTICE

EQUIPMENT DAMAGE

Circuit boards and expansion modules can be damaged by static electricity. Observe the electrostatic precautions below when handling controller circuit boards or testing components.

Observe the following precautions for handling static-sensitive components:

- Keep static-producing materials such as plastic, upholstery, and carpeting out of the immediate work area.
- Store static-sensitive components in protective packaging when they are not installed.
- When handling a static-sensitive component, wear a conductive wrist strap connected to the component or ground through a minimum of 1 megohm resistance.
- Avoid touching exposed conductors and components.

Failure to follow these instructions can result in equipment damage.

¹ For additional information about anticipated transmission delays or failures of the link, refer to NEMA ICS 1.1 (latest edition), *Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control* or its equivalent.

SECTION 1

Introduction


Introduction

This guide shows the user interface instructions for the TRC6500 Viconics Room Controller (RC) firmware **revision 2.0** for users and integrators.

User and Integrator Screens

The TRC6500 Viconics Room Controller has dynamic screens that show adjustable parameters and read-only status information. Some screens and parameters only show when a corresponding parameter is selected. The Lua selection on the Setup screen only shows if a Lua script is uploaded to the Room Controller.

Refer to the following illustration for a legend of the screen details:

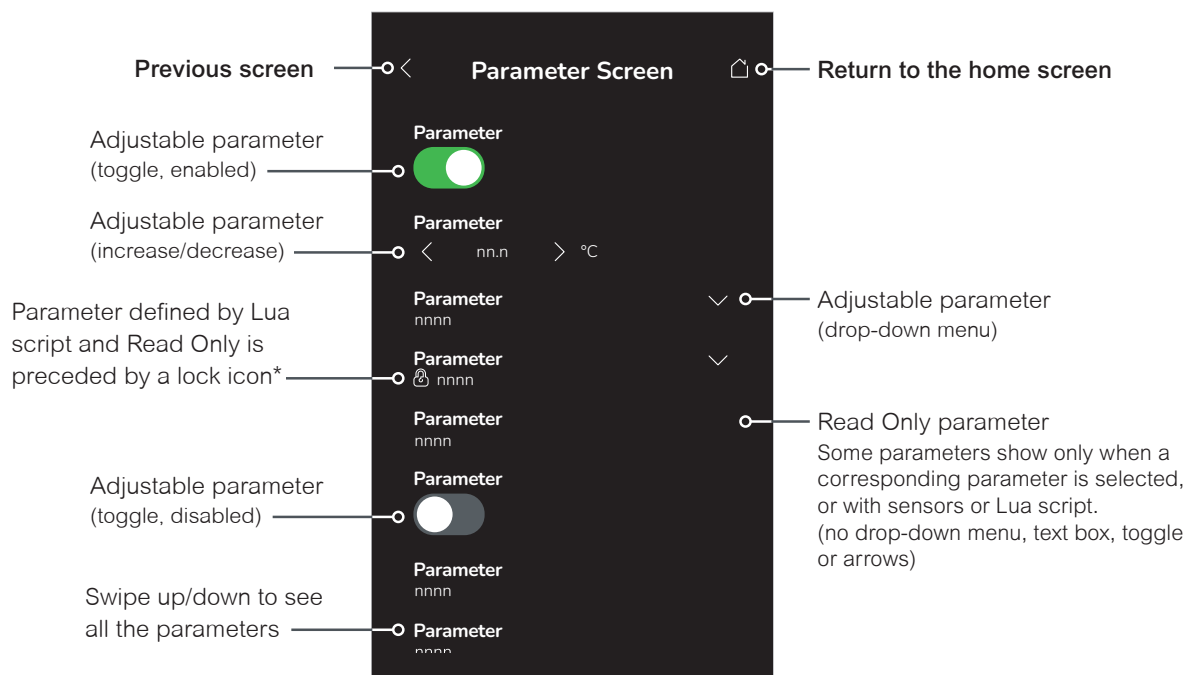

* The Lua settings include generic parameters that do not have a specific function or pre-configured functions. These parameters can be used in custom Lua scripts to store a value. They are also user configurable in their default state, but when assigned a value via a Lua script or via BACnet (Priority 1-16), they become read only (not configurable locally by the user). A lock icon will precede the parameter value to indicate this clearly.

NOTE: When a change is made to a parameter on the Home or Preferences screen and saved (by tapping OK/Save/Connect/ etc.), the value is automatically saved in memory when the next parameter is selected or another screen is opened. This event is true only if a parameter was changed locally on the Room Controller. Making changes through BACnet will not have the same outcome. If changes need to be done remotely through BACnet, use priority 1, 2 or 3, or write to relinquish default (priority 17). Refer to the BACnet Integration Guide for more details on BACnet Priorities.

BACnet Integration Guide References

To simplify cross-referencing between the Operating Guide and the BACnet Integration Guide, BACnet object properties are included in the Parameter Details tables as follows:


- **Object name.**
- **Instance number** and **object type prefix.** Object type prefixes are described as follows:
 - AI - Analog Input
 - AO - Analog Output
 - AV - Analog Value
 - BI - Binary Input
 - BO - Binary Output
 - BV - Binary Value
 - CSV - Comma-Separated Value
 - MSI - Multi-State Input
 - MV - Multi-State Value
- **Binary range values** (for BI, BO and BV) and **status enumeration** (MSI and MV) descriptions.

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Parameter Default value: Auto MV99 — Instance number	Parameter — Object name Choices: 1=On, 2=Auto, 3=Off — Range values and enumeration

HMI Display

The User Human Machine Interface (HMI) is configurable and allows display functions such as Time, Humidity, CO₂ levels, Outdoor Temperature and Setpoint to be enabled or disabled by setting various parameters.

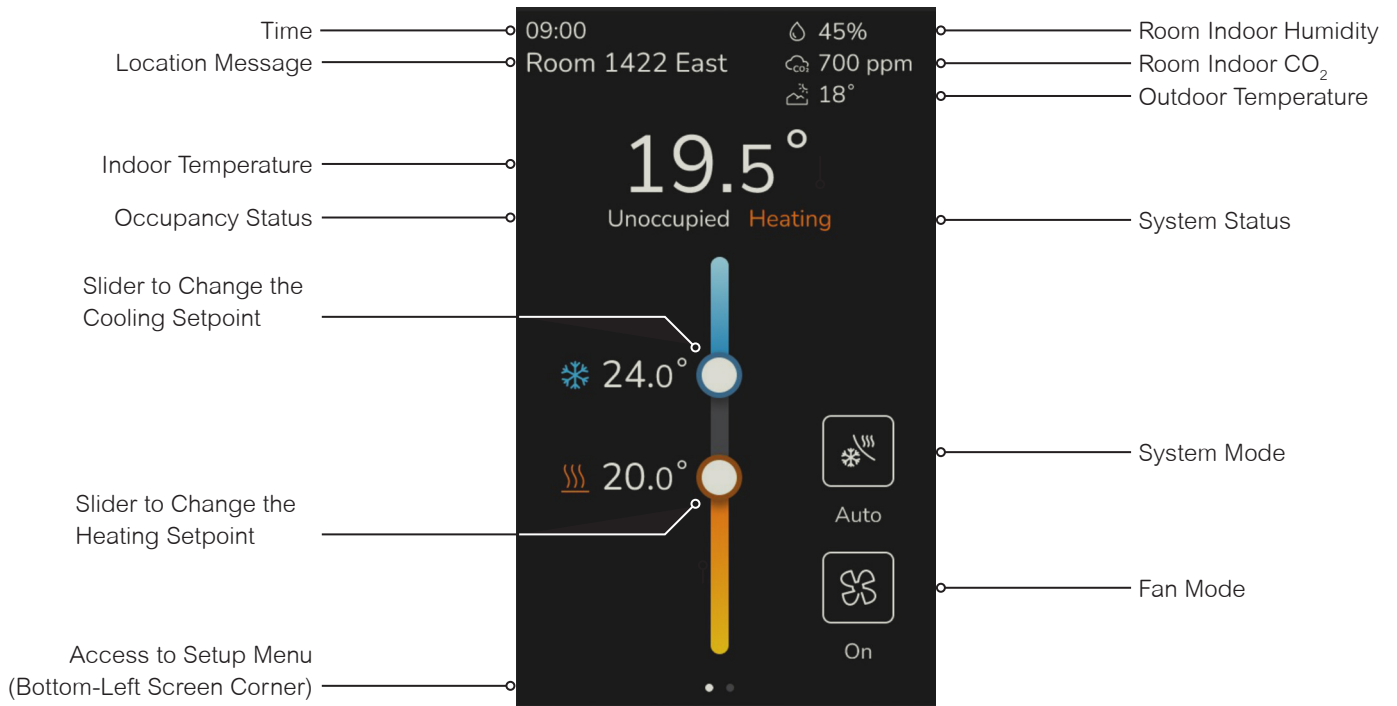

Enter Setup Screen




Tap and hold this area for 3 seconds to enter the set-up mode. When the list of users appears on the screen, tap to select the desired user, then enter the corresponding PIN code. This step is to prevent unauthorized access to the configuration menu parameters.

NOTICE

PIN CODE
If an incorrect PIN code is entered repeatedly, a user profile will be blocked for a configurable period of time.
Failure to follow these instructions may lead to an inability to configure the Room Controller.

Setup

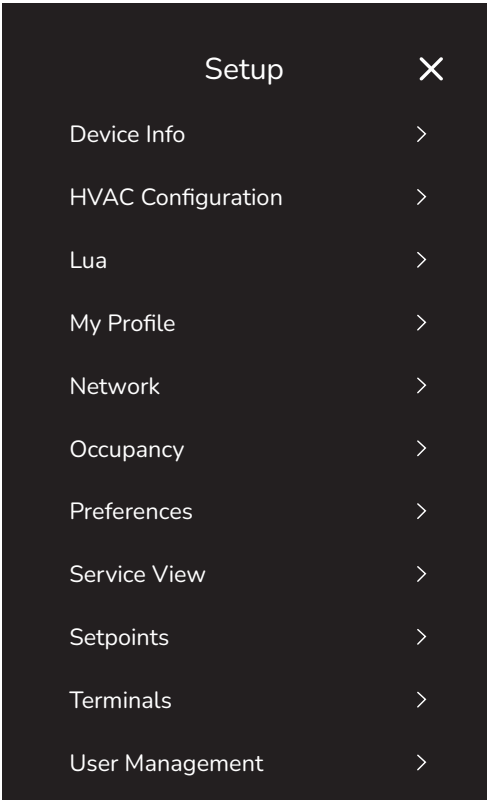



- Device name, location, model number, firmware version, serial number, and factory reset
- HVAC ADR, dehumidifier, inputs, and setpoint configuration
- Lua script, status, and variables
- User ID, display name, role, and change PIN
- BACnet MS/TP, Modbus, ZigBee and Wi-Fi network settings (ZigBee network settings appear only if ZigBee feature is available)
- Occupancy configuration and schedule
- Preferences for date and time, display, halo, language selection, and time zone
- Service view for alarms, environment, operating status, and system status
- Setpoint configuration
- Input and output terminals
- User list, add users, and settings

SECTION 2


Customized User HMI Display

Display Show/Hide Options

The display can be customized further by changing the information and configuring 2 of the buttons, or simply by hiding them entirely. To hide the option, select disabled for each display setup screen parameter. Refer to “Display” on page 60.

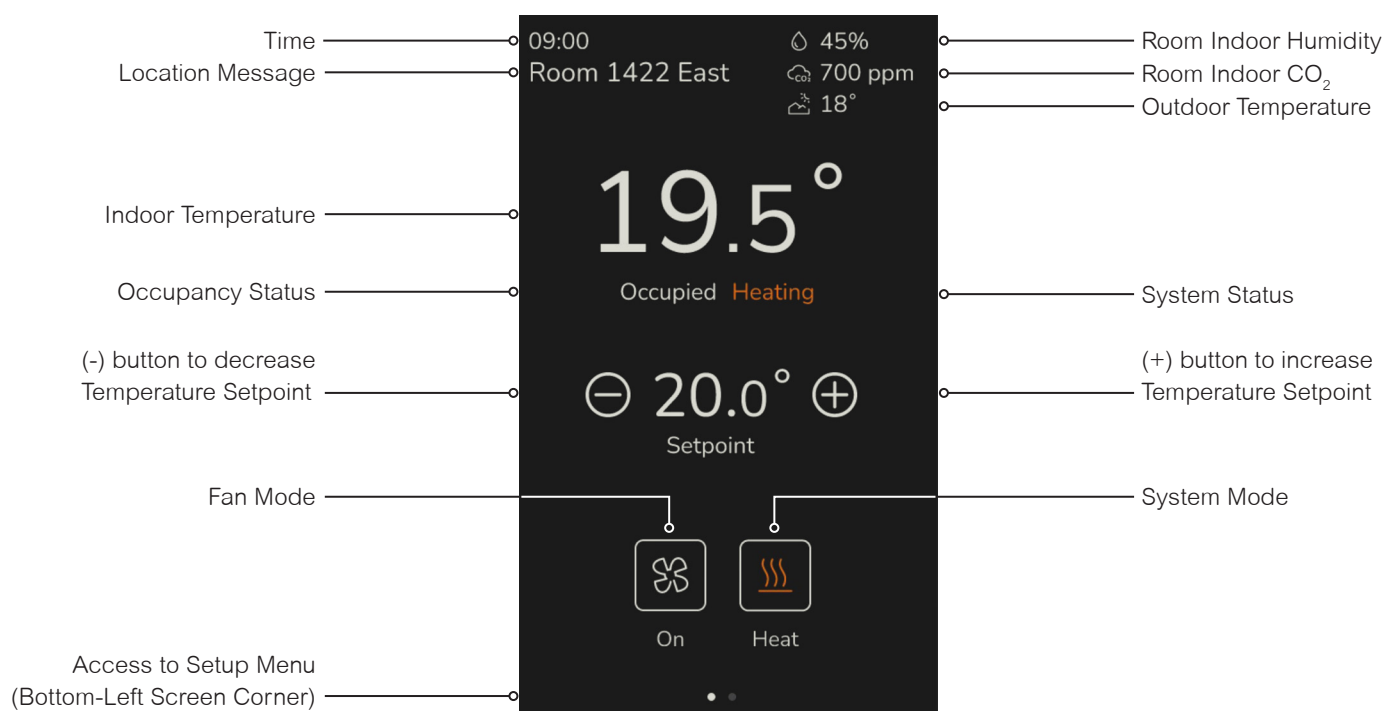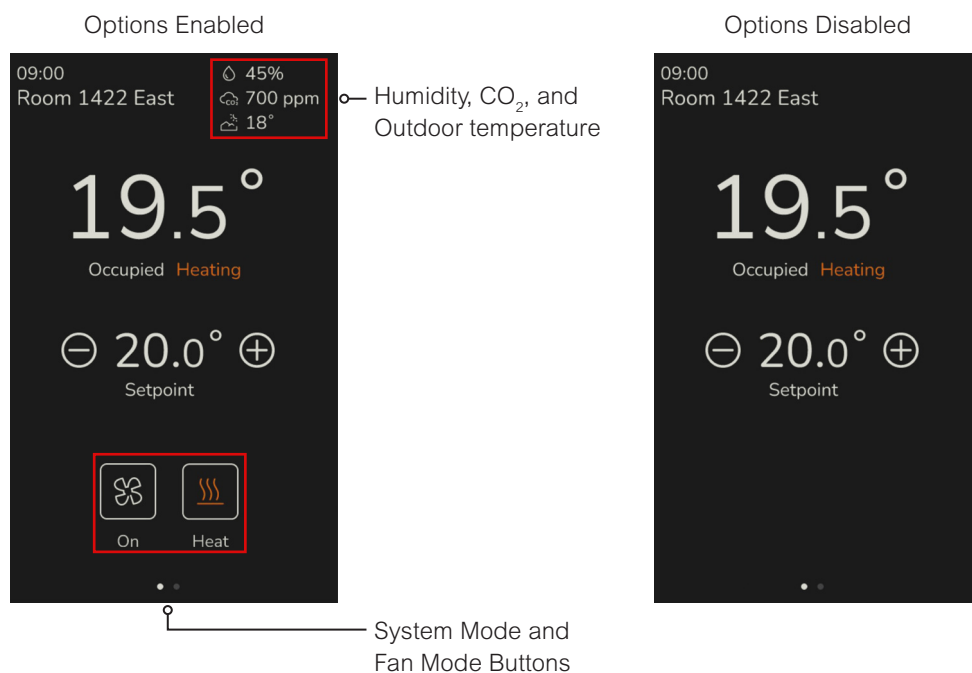


System Mode

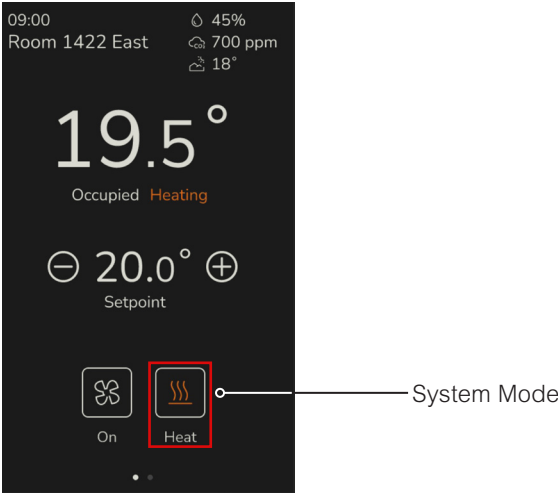

PARAMETER DETAILS

Parameter	Default Value	Significance and Adjustments
System Mode	Default value: Heat MV16	System Mode <ul style="list-style-type: none">Off: Heating, Cooling and Dehumidification demands are ignored.Auto: Room Controller automatically toggles between Heating and Cooling modes to satisfy both Heating and Cooling demands. Dehumidification is allowed.Cool: Room Controller only satisfies Cooling demands; Heating demands are ignored. Dehumidification is allowed.Heat: Room Controller only satisfies Heating demands; Cooling demands are ignored. Dehumidification is allowed. Choices: 1=Off, 2=Auto, 3=Cool, 4=Heat

Fan Mode Settings

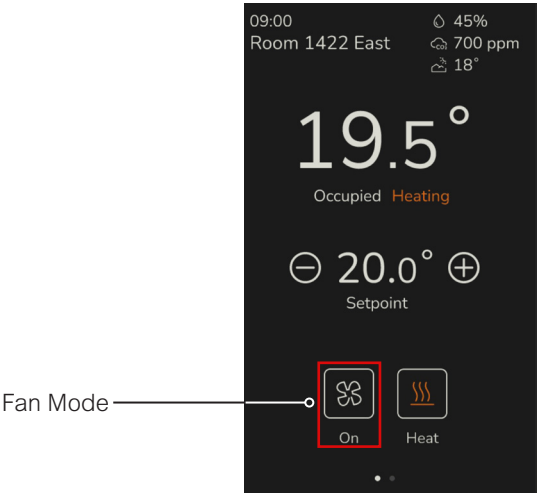

The Fan mode settings displayed on the home screen must be configured in the Fan menu tab of the Configuration menu.


PARAMETER DETAILS

Parameter	Default Value	Significance and Adjustments
Fan Mode	Default value: Smart MV17	Fan Mode Choices: 1=On, 2=Auto, 3=Smart, 4=Low, 5=Medium, 6=High

Setpoint Adjustment for Automatic Mode

In automatic mode, setpoint showing at the top of the set point bar located directly under the blue line represents the actual occupied cooling setpoint.

The actual setpoint is dependent on the last effective demand (heating or cooling). The setpoint on top of the orange line represents the actual occupied heating setpoint. The differential between the occupied heating and cooling setpoint is defined by the minimum deadband configuration parameter.

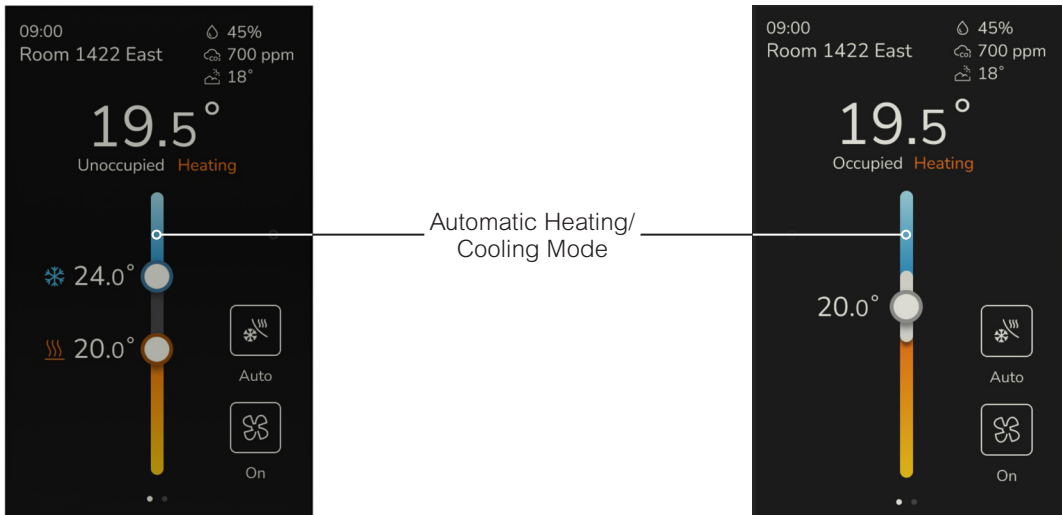

Other Functions

Local humidity shows when RH display is enabled on the setup display screen, from the internal onboard sensor selected by the RH sensor parameter on the setup configuration screen.

CO2 shows when CO2 display is enabled on the setup display screen, from the optional CO2 detection sensor module selected by the CO2 source parameter on the setup configuration screen.

Outdoor temperature shows when receiving a valid networked outdoor temperature value.




Optional Halo Backlight

The Viconics Room Controller offers the possibility of projecting a halo light onto the wall behind the device. The halo color will fade in to orange when heating, blue when cooling, and off when on standby. To select the halo option, refer to “Halo” on page 62.




Customizable Color Themes

The Viconics Room Controller offers two main color themes: Light and Dark. To select the color option, refer to “Preferences (Main)” on page 15.

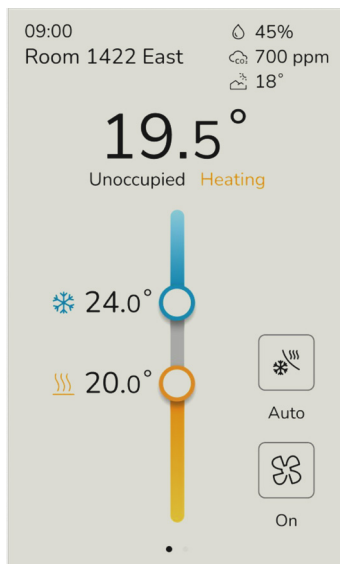


Light

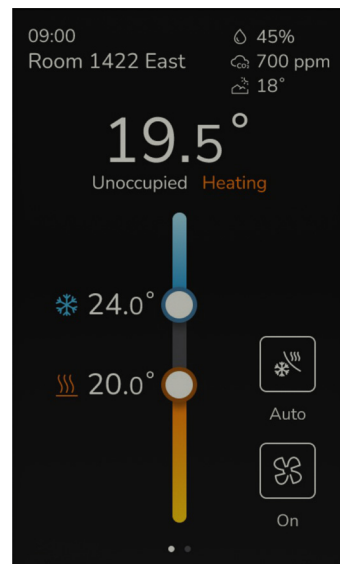

Dark

Preferences (Main)

To see the main device Preferences screen, swipe right on the home screen.

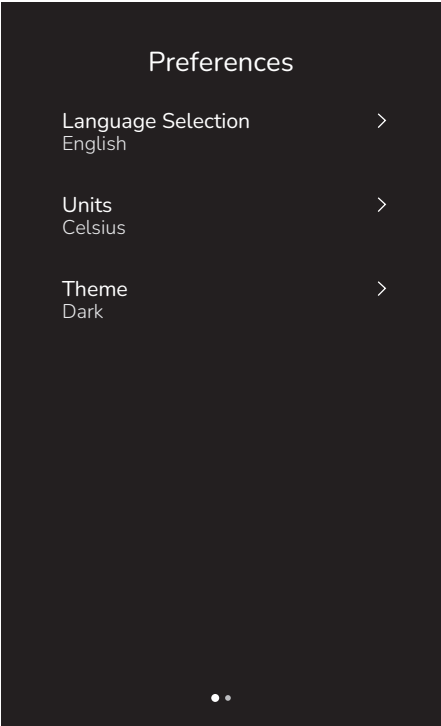


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Language Selection Default value: English MV4	Display Language Allows the user to choose the main device language. While the default is English and always available, the listed options are defined on the Setup Preferences screen. Refer to “Language Selection” on page 63 for more information. Choices: 1=English, and the rest of the selected options
Units Default value: Celsius MV6	Network Units <ul style="list-style-type: none">CelsiusFahrenheit Choices: 1=Celsius, 2=Fahrenheit
Theme Default value: Dark MV2	Color Theme Allows the user to choose a Light or Dark color theme, which will be applied across all screens. This selection is kept in memory throughout power cycles. Choices: 1=Light, 2=Dark

SECTION 3

Integrator Setup Screens

Device Info

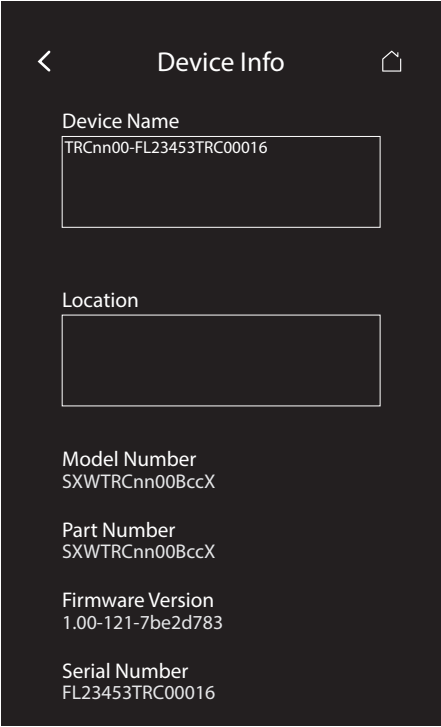


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Device Name Default value: ShortSKU- SerialNumber CSV4	Device Name The Device Name (BACnet name) is a combination of the short SKU and the serial number. The BACnet name can be changed via the BACnet front end, and the new name appears on the above screen. Example: TRCnn00-MT-2023-W28-1-FL23453TRC00016 Range: 5 to 49 characters (a-z, A-Z, 0-9, @_ -~+=^<> ,.1/2:,*` , and spaces)
Location CSV35	Location Read/write value shows the location of the device as configured in BACnet, Lua, on screen via the keyboard, etc. NOTE: The information is kept across power cycles. It is also important to note that there is no text wrapping on the Home screen; the Room Controller displays the characters that fit on one line. Range: 0 to 49 characters (a-z, A-Z, 0-9, @_ -~+=^<> ,.1/2:,*` , and spaces)
Model Number Read Only	Model Number Read Only value shows the device SKU: <ul style="list-style-type: none">• TRC6500BccX-VC: Viconics Room Controller for Rooftop Unit (RTU), Heat Pump and Indoor Air Quality (IAQ) Systems with Passive Infrared (PIR).• TRC6500BccW-VC: Viconics Room Controller for Rooftop Unit (RTU), Heat Pump and Indoor Air Quality (IAQ) Systems with Passive Infrared (PIR), ZigBee and Wi-Fi.

Parameter Default Value	Significance and Adjustments																																																																																											
Part Number Read Only	Part Number																																																																																											
	Read Only value shows the device variant:																																																																																											
	<table><thead><tr><th>Part Number</th><th>BACnet/ MSTP</th><th>RF (Wi-Fi + Zigbee)</th><th>RH Sensor</th><th>Passive IR Sensor</th><th>Color</th><th>Region</th></tr></thead><tbody><tr><td>TRC3500B11X-VC</td><td>●</td><td></td><td>●</td><td>●</td><td>White</td><td>Global</td></tr><tr><td>TRC3500B11W-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>White</td><td>Global</td></tr><tr><td>TRC3500B11WA-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>White</td><td>North America</td></tr><tr><td>TRC3500B00X-VC</td><td>●</td><td></td><td>●</td><td>●</td><td>Black</td><td>Global</td></tr><tr><td>TRC3500B00W-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>Black</td><td>Global</td></tr><tr><td>TRC3500B00WA-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>Black</td><td>North America</td></tr><tr><td>TRC6500B11X-VC</td><td>●</td><td></td><td>●</td><td>●</td><td>White</td><td>Global</td></tr><tr><td>TRC6500B11W-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>White</td><td>Global</td></tr><tr><td>TRC6500B11WA-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>White</td><td>North America</td></tr><tr><td>TRC6500B00X-VC</td><td>●</td><td></td><td>●</td><td>●</td><td>Black</td><td>Global</td></tr><tr><td>TRC6500B00W-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>Black</td><td>Global</td></tr><tr><td>TRC6500B00WA-VC</td><td>●</td><td>●</td><td>●</td><td>●</td><td>Black</td><td>North America</td></tr></tbody></table>	Part Number	BACnet/ MSTP	RF (Wi-Fi + Zigbee)	RH Sensor	Passive IR Sensor	Color	Region	TRC3500B11X-VC	●		●	●	White	Global	TRC3500B11W-VC	●	●	●	●	White	Global	TRC3500B11WA-VC	●	●	●	●	White	North America	TRC3500B00X-VC	●		●	●	Black	Global	TRC3500B00W-VC	●	●	●	●	Black	Global	TRC3500B00WA-VC	●	●	●	●	Black	North America	TRC6500B11X-VC	●		●	●	White	Global	TRC6500B11W-VC	●	●	●	●	White	Global	TRC6500B11WA-VC	●	●	●	●	White	North America	TRC6500B00X-VC	●		●	●	Black	Global	TRC6500B00W-VC	●	●	●	●	Black	Global	TRC6500B00WA-VC	●	●	●	●	Black	North America
	Part Number	BACnet/ MSTP	RF (Wi-Fi + Zigbee)	RH Sensor	Passive IR Sensor	Color	Region																																																																																					
	TRC3500B11X-VC	●		●	●	White	Global																																																																																					
	TRC3500B11W-VC	●	●	●	●	White	Global																																																																																					
	TRC3500B11WA-VC	●	●	●	●	White	North America																																																																																					
	TRC3500B00X-VC	●		●	●	Black	Global																																																																																					
	TRC3500B00W-VC	●	●	●	●	Black	Global																																																																																					
	TRC3500B00WA-VC	●	●	●	●	Black	North America																																																																																					
	TRC6500B11X-VC	●		●	●	White	Global																																																																																					
	TRC6500B11W-VC	●	●	●	●	White	Global																																																																																					
	TRC6500B11WA-VC	●	●	●	●	White	North America																																																																																					
	TRC6500B00X-VC	●		●	●	Black	Global																																																																																					
	TRC6500B00W-VC	●	●	●	●	Black	Global																																																																																					
TRC6500B00WA-VC	●	●	●	●	Black	North America																																																																																						
Firmware Version Read Only CSV5	Firmware Version																																																																																											
	Read Only value shows the firmware version currently installed on the Room Controller. Upgrading to a newer Firmware version deletes the previous Firmware version.																																																																																											
Serial Number Read Only	Serial Number																																																																																											
	Read Only value shows a string of characters that identifies a single specimen of product.																																																																																											
Factory Reset	Factory Reset																																																																																											
	Used to perform a software factory reset, which clears the configuration of the Room Controller and reverts back to factory default values for: <ul style="list-style-type: none">• HVAC configuration• Log files• LUA script and variables• Network configuration• Users and passwords• System configuration																																																																																											
	NOTE: The device may restart during this process.																																																																																											

HVAC Configuration


Refer to “Setup” on page 9 to see the accessible menus for the configuration screens.

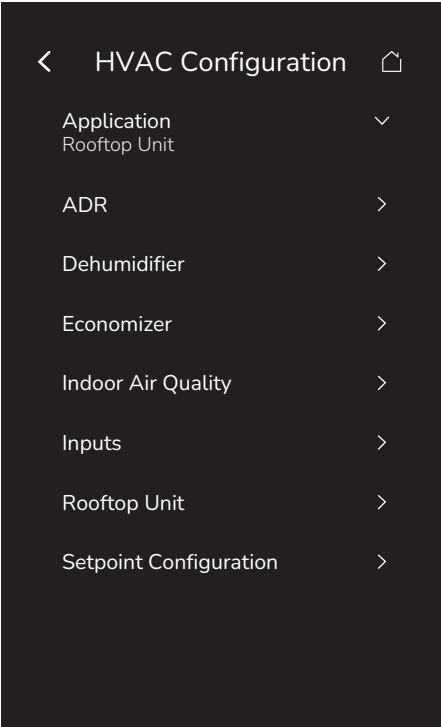

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Application Default value: Rooftop Unit MV119	Application Used to indicate the HVAC application of this device. Choice: 1=Rooftop Unit, 2=Heat Pump
ADR	Refer to “ADR (Automated Demand Response)” on page 20 for more information.
Dehumidifier	Refer to “Dehumidifier” on page 22 for more information.
Economizer	Refer to “Economizer” on page 23 for more information.
Indoor Air Quality	Refer to “Indoor Air Quality” on page 25 for more information.
Inputs	Refer to “Inputs” on page 26 for more information.
Rooftop Unit	Refer to “Rooftop Unit” on page 29 for more information.
Setpoint Configuration	Refer to “Setpoint Configuration” on page 32 for more information.

ADR (Automated Demand Response)

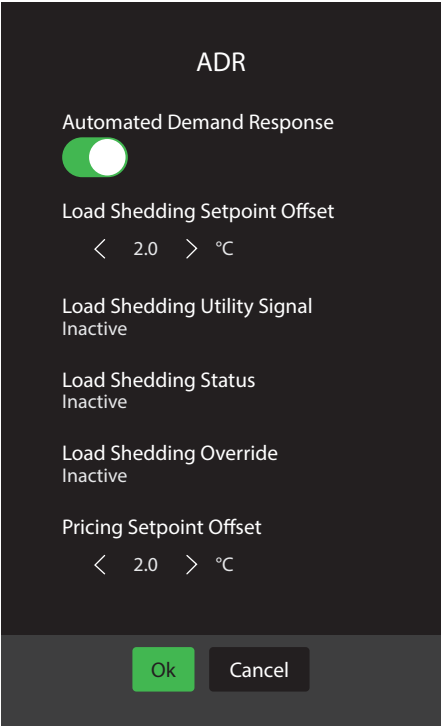


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Automated Demand Response Default value: Disabled MV157	ADR Permission Indicates if this feature is enabled or disabled. Choices: 1=Disabled, 2=Enabled
Load Shedding Setpoint Offset Default value: 4°F (2°C) AV280	ADR Setpoint Offset - Load Shedding Used to change the effective setpoints in occupied, standby and unoccupied modes. For example, when Load Shedding Status is active and Room Controller is in occupied mode: The cooling setpoint is calculated as follows: Occupied cooling setpoint = occupied cooling setpoint + Load shedding offset. The heating setpoint is calculated as follows: Occupied heating setpoint = occupied heating setpoint - Load shedding offset. Range: 1°F to 10°F (0.5°C to 5.5°C)
Load Shedding Utility Signal Default value: Inactive Read Only BV80	ADR Utility Signal - Load Shedding Sets the request to initiate Load Shedding. This demand can only be set through BACnet by the local Utility company. <ul style="list-style-type: none">Inactive (off): No Load Shedding Demand is received or the Shedding demand is disabled.Active (on): Received the Load Shedding Demand or received the signal to activate Load shedding. This parameter resets to its default value after a power cycle. Display Readings: Inactive, Active

Parameter Default Value	Significance and Adjustments
Load Shedding Status Default value: Inactive Read Only BV81	ADR Status - Load Shedding <p>Displays the status of the Load Shedding Demand, whether it is active (On) or not (Off).</p> <p>The Load Shedding status is On when the Permission is On, Shed demand is On, and the Shed Override is Off.</p> <ul style="list-style-type: none"> Inactive (off): Load Shedding Demand is not activated. Active (on): Load Shedding Demand is activated. <p>This parameter resets to its default value after a power cycle.</p> <p>Display Readings: Inactive, Active</p>
Load Shedding Override Default value: Inactive Read Only BV82	ADR Override - Load Shedding <p>Displays whether the user disabled the ADR request by the utility company. When the demand shed is applied, the user can override the ADR settings from its original setpoints settings.</p> <ul style="list-style-type: none"> Inactive (off): Allows shed load demand request from utility company (setpoint will change according to shed offset) Active (on): Rejects or cancels shed load demand request from utility company (setpoints remain the same). <p>Display Readings: Inactive, Active</p>
Pricing Setpoint Offset Default value: 4°F (2°C) AV281	ADR Setpoint Offset - Pricing <p>Used to configure the difference between the pricing setpoint and the actual measurement.</p> <p>Range: 1°F to 10°F (0.5°C to 5.5°C)</p>
Pricing Utility Signal Default value: Inactive Read Only BV83	ADR Utility Signal - Pricing <p>Indicates the grid is approaching its limit, dynamic pricing is high, and it is recommended to reduce energy usage to save money and reduce the load on the grid.</p> <p>This feature is configurable via BACnet and Modbus.</p> <p>Display Readings: Inactive, Active</p>
Pricing Status Default value: Inactive Read Only BV84	ADR Status - Pricing <p>Indicates if there is an ADR Status Pricing point. This feature resets to its default inactive on power cycle.</p> <p>It is active when:</p> <ul style="list-style-type: none"> ADR is enabled Pricing Utility Signal is active Pricing Override is inactive <p>Display Readings: Inactive, Active</p>
Pricing Override Default value: Inactive Read Only BV85	ADR Override - Pricing <p>Indicates if the ADR Pricing Override is active or not. This feature resets to its default inactive on power cycle.</p> <p>Configurable via the home screen interface when ADR is enabled, and ADR Pricing Utility Signal is active. Reverts to its default value when ADR Pricing Utility Signal changes from active to inactive.</p> <p>Display Readings: Inactive, Active</p>

Dehumidifier

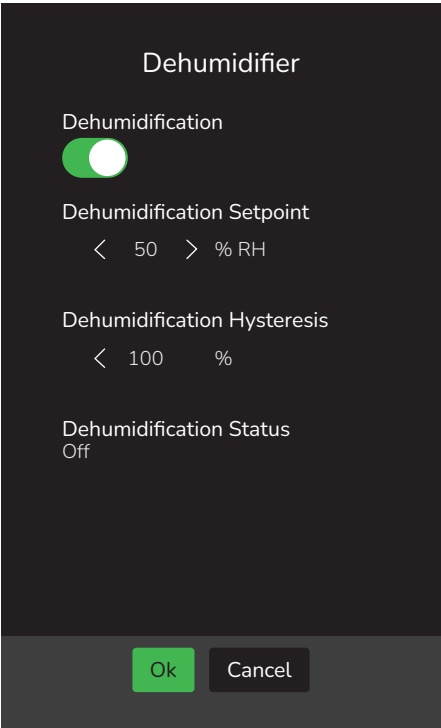

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Dehumidification Default value: Disabled MV13	Dehumidification Enabled Indicates if this feature is enabled or disabled. Choices: 1=Disabled, 2=Enabled
Dehumidification Setpoint Default value: 50% AV71	Dehumidification Setpoint Used when Dehumidification is enabled. Used to define the target humidity level for the dehumidification sequence. Range: 30% to 95%
Dehumidification Hysteresis Default value: 5% RH AV72	Dehumidification Hysteresis Used as a hysteresis around the Dehumidification Setpoint to avoid fast toggling of the equipment when the humidity is around the setpoint. Example: If setpoint is 50% and hysteresis is 5%, the dehumidifier will: <ul style="list-style-type: none">• Turn on when the humidity rises above 50%• Turn off when the humidity falls below 45% Range: 2% to 20% RH
Dehumidification Status Default value: Off Read Only BV38	Dehumidification Status Used when Dehumidification is enabled. Defines whether dehumidification is currently active or inactive. This can be used to balance smaller reheat loads installed in regard to the capacity of the cooling coil. Display Readings: Off, On

Economizer

Economizer

Economizer

Economizer Minimum Position

0 > %

Economizer Maximum Position

< 100 %

Changeover Setpoint

< 13.0 > °C

Supply Air Temperature Setpoint

< 13.0 > °C

Ok

Cancel

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Economizer Default value: Off MV72	Economizer Configuration Enables or disables the economizer functionality. <ul style="list-style-type: none">Off: Economizer deactivatedOn: Economizer activated Choices: 1=Off, 2=On
Economizer Minimum Position Default value: 0% AV78	Economizer Minimum Position Minimum Outside Air damper position when Room Controller is in Occupied, Standby or Override mode and Fan status is ON. If Room Controller is Unoccupied mode and/or the Fan is Off, Outside Air damper position goes to 0%. Range: 0% to 100%
Economizer Maximum Position Default value: 100% AV81	Economizer Maximum Position Maximum Outside Air damper position when Room Controller is in Occupied, Standby or Override mode and Fan status is ON. This is valid only for Economizer, CO2 and Airflow functions. Range: 0% to 100%
Changeover Setpoint Default value: 55°F (13°C) AV95	Changeover Setpoint In Cooling mode, the outside air temperature value at which the cooling gets switched over from mechanical (compressor) to free cooling (economizer). Range: 14°F to 70°F (-10°C to 21°C)
Supply Air Temperature Setpoint Default value: 55°F (12°C) AV94	Supply Air Temperature Setpoint Free cooling supply air setpoint when economizer mode is enabled. Range: 50 to 90°F (10.0 to 32.0°C)

Parameter Default Value	Significance and Adjustments
Mechanical Cooling Allowed Default value: Off MV79	Mechanical Cooling Allowed Allows operation of mechanical cooling if free cooling (economizer) cannot maintain the cooling setpoint. <ul style="list-style-type: none"> Off: Applies when the mixed air temperature sensor is installed after the mechanical cooling refrigeration coils. In this case, mechanical cooling never operates at the same time as free cooling. On: Applies when the mixed air temperature sensor is installed before the mechanical cooling refrigeration coils in the mixing plenum. In this case, mechanical cooling is allowed when the free cooling (economizer operation) cannot maintain the cooling setpoint. Choices: 1=Off, 2=On


Indoor Air Quality



PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Minimum CO2 Level Default value: Off MV72	Minimum CO2 Level Defines the minimum comfort level for CO ₂ . When the CO ₂ level is above this value, the fresh air damper will be (progressively) opened to reduce the CO ₂ level. Range: 0 to 4800
Maximum CO2 Level Default value: 0% AV78	Maximum CO2 Level Defines the maximum comfort level for CO ₂ . When the CO ₂ level is above this value, the fresh air damper will be opened to the maximum position to reduce the CO ₂ level. Range: 200 to 5000
Fresh Air Range Default value: 0 AV96	Fresh Air Range Upper Limit Sets the upper limit (reading range) of the “airflow measuring station” (e.g., for 0~1,000 CFM station, setting “FA Range” to 1,000). Range: 0 to 20000

Inputs

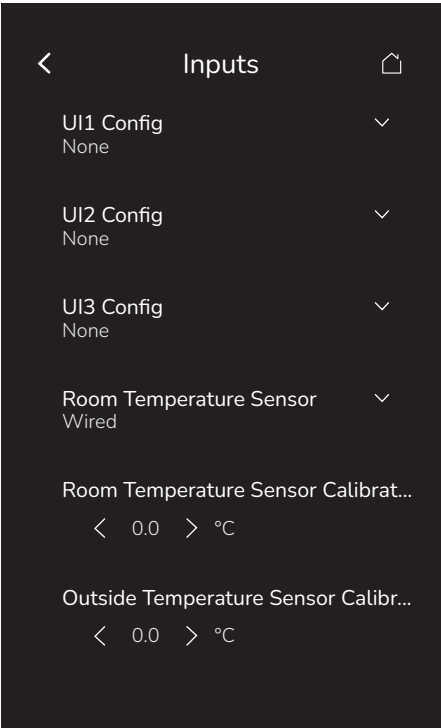

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
UI1 Config Default value: None MV46	UI1 Configuration <ul style="list-style-type: none"> None: No function will be associated with the input. Input can be used for remote network monitoring. Rem NSB: Remote night setback (NSB) timer clock input. The scheduling gets set as per the binary input and provides low-cost setback operation via a dry contact. Motion NO and Motion NC: Advanced PIR occupancy functions using a Normally Open (NO) or Normally Closed (NC) remote PIR motion sensor. Window: Forces the system to disable any current heating or cooling action by the Room Controller when the window is open. Fan Lock: Forces the system to disable any current heating or cooling action by the Room Controller when the (G) Fan output is activated, but the Fan Lock input is not activated after 10 seconds. Choices: 1=None, 2=Rem NSB, 3=Motion NO, 4=Motion NC, 5=Window, 6=Fan Lock
UI2 Config Default value: None MV47	UI2 Configuration <ul style="list-style-type: none"> None: No function associated with input. Door Dry: Room Controller goes to standby mode when door is opened then closed followed by no presence detection for the next 10 seconds if the local PIR is used in this application. The Occupancy command must be set to Local Occupancy and Occupancy Source must be set to Motion. Override: A closed contact forces the Room Controller to go in occupied mode. An open contact keeps the current occupancy mode. Filter: backlit flashing filter alarm shows on the Room Controller screen when input is energized. Service: backlit flashing Service alarm shows on Room Controller screen when input is energized. NOTE: When the Room Controller is in unoccupied mode, touching the screen sets the Room Controller to Override mode for defined time period, and uses the Occupied Cooling and Heating setpoints. Choices: 1=None, 2=Door Dry, 3=Override, 4=Filter, 5=Service

Parameter Default Value	Significance and Adjustments
UI3 Config Default value: None MV49	UI3 Configuration <ul style="list-style-type: none"> None: No function associated with input; however, input can be used for remote network monitoring. CO₂: Using the CO₂ level measured by a wired CO₂ sensor (0~2000 ppm = 0~10 Vdc), the Outside Air damper (Econo) will modulate between "Economizer Minimum Position" to "Economizer Maximum Position" following the "Minimum CO₂" and "Maximum CO₂" setpoints. COC/NH: Change over dry contact normally heat. Used for hot/cold water or air change over switching in 2-pipe systems. COC/NC: Change over dry contact normally cool. Used for hot/cold water or air change over switching in 2-pipe systems. COS: Change over sensor. Used for hot/cold water or air changeover switching in 2 pipe systems. Choices: 1=None, 2=CO ₂ , 3=COC/NH, 4=COC/NC, 5=COS
Room Temperature Sensor Default value: Wired MV150	Room Temperature Sensor <p>Sets the source of the indoor room temperature for Room Controller. Then user can designate either the Room Controller itself, a wired remote sensor, or any of the paired wireless devices* that support temperature to function as the source for the room temperature.</p> <ul style="list-style-type: none"> Wired: Sets the thermistor connected to U4 (RS) as the source to report room temperature. Internal: Sets the Room Controller as the source for the room temperature. WL 1 to WL 20: Sets the selected Zigbee wireless device as the source for the room temperature. Only one device can be selected. <p>NOTE: If a wired or wireless sensor is selected while it is offline, then the Room Controller internal sensor will be the source for the temperature measurement.</p> Choices: 1=Wired, 2=Internal, 3=Wireless Sensor 1, 4=Wireless Sensor 2, 5=Wireless Sensor 3, 6=Wireless Sensor 4, 7=Wireless Sensor 5, 8=Wireless Sensor 6, 9=Wireless Sensor 7, 10=Wireless Sensor 8, 11=Wireless Sensor 9, 12=Wireless Sensor 10, 13=Wireless Sensor 11, 14=Wireless Sensor 12, 15=Wireless Sensor 13, 16=Wireless Sensor 14, 17=Wireless Sensor 15, 18=Wireless Sensor 16, 19=Wireless Sensor 17, 20=Wireless Sensor 18, 21=Wireless Sensor 19, 22=Wireless Sensor 20
Room Temperature Sensor Calibration Default value: 0 °F (-17.8°C) AV7	Calibrate Room Temperature Sensor <p>Room temperature sensor calibration. Offset can be added or subtracted to actual displayed room temperature.</p> <p>Range: -5°F to 5°F (-2.5°C to +2.5°C) – Resolution: 1°F/0.5°C</p>
Outside Temperature Sensor Calibration Default value: 0 °F (-17.8°C) AV74	Calibrate Outside Temperature Sensor <p>Calibrates the temperature value.</p> <p>Range: -5°F to 5°F (-2.5°C to +2.5°C) – Resolution: 1°F/0.5°C</p>
Relative Humidity Sensor Default value: Internal MV154	Relative Humidity Sensor <p>Sets the source of the indoor room humidity. This parameter allows the user to designate either the Room Controller or any of the paired wireless devices* that support humidity to function as the source for the room humidity.</p> <ul style="list-style-type: none"> None: Relative Humidity source disabled. Internal: Sets the Room Controller as the source for the room humidity. WL 1 to WL 20: Sets the selected ZigBee wireless device as the source for the room humidity. Only one device can be selected. <p>NOTE: None is kept as an option here to allow humidity to be supplied via BACnet, Modbus or Lua.</p> Choices: 1=None, 2=Internal, 3=Wireless Sensor 1, 4=Wireless Sensor 2, 5=Wireless Sensor 3, 6=Wireless Sensor 4, 7=Wireless Sensor 5, 8=Wireless Sensor 6, 9=Wireless Sensor 7, 10=Wireless Sensor 8, 11=Wireless Sensor 9, 12=Wireless Sensor 10, 13=Wireless Sensor 11, 14=Wireless Sensor 12, 15=Wireless Sensor 13, 16=Wireless Sensor 14, 17=Wireless Sensor 15, 18=Wireless Sensor 16, 19=Wireless Sensor 17, 20=Wireless Sensor 18, 21=Wireless Sensor 19, 22=Wireless Sensor 20

Parameter Default Value	Significance and Adjustments
Relative Humidity Sensor Calibration Default value: 0% AV8	Calibrate Humidity Sensor Offset that can be added or subtracted to actual displayed humidity. Range: -15% to 15% (Resolution: 1%)
CO₂ Sensor Source Default value: Local MV155	CO₂ Source Sets the source of the indoor CO ₂ . This parameter allows the user to select the embedded CO ₂ detection sensor or to disable the feature. <ul style="list-style-type: none"> • None: CO₂ source disabled. • Local: Sets the embedded CO₂ detection sensor as the source for the room CO₂. Choices: 1=None, 2=Local, 3=Wireless Sensor 1, 4=Wireless Sensor 2, 5=Wireless Sensor 3, 6=Wireless Sensor 4, 7=Wireless Sensor 5, 8=Wireless Sensor 6, 9=Wireless Sensor 7, 10=Wireless Sensor 8, 11=Wireless Sensor 9, 12=Wireless Sensor 10, 13=Wireless Sensor 11, 14=Wireless Sensor 12, 15=Wireless Sensor 13, 16=Wireless Sensor 14, 17=Wireless Sensor 15, 18=Wireless Sensor 16, 19=Wireless Sensor 17, 20=Wireless Sensor 18, 21=Wireless Sensor 19, 22=Wireless Sensor 20

Rooftop Unit

Rooftop

Number of Heating Stages

2

▼

Number of Cooling Stages

2

▼

Anti Short Cycle Time

<

2

>

Minutes

Cooling Cycles Per Hour

<

4

>

CPH

Heating Cycles Per Hour

<

4

>

CPH

Ok

Cancel


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Number of Heating Stages Default value: 2 stages AV87	Number of Heating Stages Sets number of Heating Stages applicable to 2 stage models only. <ul style="list-style-type: none">0 Stages: Only (UO11) modulating 0-10Vdc output is used for Heating. W1 & W2 are disabled.1 Stage: Only W1 (D5) terminal is used. W2 is disabled.2 Stages: Both W1 (D5) and W2 (A1/D6) terminals are used in sequence. Choices: 0, 1 or 2 stages
Number of Cooling Stages Default value: 2 stages AV75	Number of Cooling Stages Sets number of Cooling Stages. <ul style="list-style-type: none">1 Stage: Only Y1 (D3) terminal is used. Y2 is disabled.2 Stages: Both Y1 (D3) and Y2 (D2) terminals are used in sequence. Choices: 1 or 2 stages
Anti Short Cycle Time Default value: 2 min AV86	Anti Short Cycle Time Minimum On time and minimum Off time of operation time for stages. IMPORTANT: anti-short cycling can be set to 0 minutes for equipment that possess their own anti cycling timer. Do not use this value unless the equipment is equipped with an internal timer. Failure to do so can damage the equipment. Range: 0 to 5 minutes
Cooling Cycles Per Hour Default value: 4 CPH AV85	Cooling Cycles Per Hour CPH is used to “modulate” On/Off outputs controlling equipment such as compressors. When the Room Temperature is within the Proportional Band, the output performs 3 or 4 CPH. A higher CPH represents a higher accuracy of control at the expense of wearing mechanical components faster. NOTE: The CPH does not limit the number of Cycles Per Hour. It is limited by the “Anti short cycle” parameter. 4 CPH is typical for Rooftop applications. Range: 3 to 4 CPH

Parameter Default Value	Significance and Adjustments
Heating Cycles Per Hour Default value: 4 CPH AV84	Heating Cycles Per Hour <p>CPH is used to “modulate” On/Off outputs controlling equipment such as compressors. When the Room Temperature is within the Proportional Band, the output performs 3 to 8 CPH. A higher CPH represents a higher accuracy of control at the expense of wearing mechanical components faster.</p> <p>For multi-stage models, heat cph applies to W1 & W2. A CPH value between 6 - 8 is recommended for applications with electric heating. For gas applications set CPH to 4 and for oil applications set CPH to 3.</p> <p>Range: 3 to 8 CPH</p>
Room Frost Protection Default value: Off MV55	Room Frost Protection <p>If the Room Temperature drops below 42°F (5.6°C), the Fan and the Heat will be activated until the Room Temperature rises over 42°F (5.6°C).</p> <ul style="list-style-type: none"> Off: No room frost protection On: Room frost protection enabled in all system modes at 42°F (5.6°C). <p>Frost protection is enabled even if System mode is ‘Off’.</p> <p>Choices: 1=Off, 2=On</p>
Heating Lockout from Outside Air Temperature Default value: 120°F (49°C) AV91	Heating Lockout from Outside Air Temperature <p>Disables mechanical heating operation when Outdoor Temperature is higher than the “Heating Lockout” value. The Outdoor Temperature value could be received from a sensor connected directly to the Room Controller (UI23) or via a BACnet front end (network).</p> <p>Range: -15°F to 120°F (-26°C to 49°C)</p>
Cooling Lockout from Outside Air Temperature Default value: -40°F (-40°C) AV93	Cooling Lockout from Outside Air Temperature <p>Disables mechanical cooling operation when Outdoor Temperature is lower than the “Cool Lockout” value. The Outdoor Temperature value could be received from a sensor connected directly to the Room Controller (UI23) or via a BACnet front end (network).</p> <p>The Economizer functionality (Free-cooling) can still be enabled during the Cooling Lockout.</p> <p>Range: -40°F to 95°F (-40°C to 35°C)</p>
Supply Temperature High Limit Default value: 120°F (49°C) AV99	Supply Temperature High Limit <p>Supply air high temperature value at which the heating stages get locked out.</p> <p>Range: 70°F to 150°F (21°C to 65°C)</p>
Supply Temperature Low Limit Default value: 45°F (7°C) AV20	Supply Temperature Low Limit <p>Supply air low temperature value at which the cooling stages get locked out.</p> <p>Range: 35°F to 65°F (2.0°C to 19.0°C)</p>
Fan Control in Heating Mode Default value: On MV95	Fan Control in Heating Mode <ul style="list-style-type: none"> Off: Fan (terminal G), when heating stages (terminals W1 & W2) are solicited, will not be energized. The fan is controlled by the equipment fan limit control. Valid only for Auto fan mode. On fan mode leaves the fan always on. On: Room Controller always controls the fan (terminal G). Valid for On or Auto fan mode. <p>For multi-stage models, fan control applies to W1 & W2.</p> <p>Choices: 1=Off, 2=On</p>
Fan Delay Default value: On MV12	Fan Delay <ul style="list-style-type: none"> On: Fan mode will leave the fan always on and extends fan operation by 60 seconds after the call for heating or cooling ends. Valid only for Auto fan mode. Off: Fan delay not operational. <p>Choices: 1=Off, 2=On</p>

Parameter Default Value	Significance and Adjustments																															
Proportional Band Default value: 3.0 AV65	Proportional Band Adjusts proportional band used by Room Controller PI control loop. NOTE: Default value of 3 gives satisfactory operation in most normal installation cases. The use of a superior proportional band different than the factory value is normally warranted in applications where Room Controller location is problematic and leads to unwanted cycling of the unit. A typical example is a wall mounted Room Controller installed between return and supply air feeds and is directly influenced by the supply air stream of unit. Range: 3 to 10 <table><tr><th>Value</th><th colspan="2">Effective Proportional Band</th></tr><tr><th></th><th>Fahrenheit</th><th>Celsius</th></tr><tr><td>3.0</td><td>3</td><td>1.2</td></tr><tr><td>4.0</td><td>4</td><td>1.7</td></tr><tr><td>5.0</td><td>5</td><td>2.2</td></tr><tr><td>6.0</td><td>6</td><td>2.8</td></tr><tr><td>7.0</td><td>7</td><td>3.3</td></tr><tr><td>8.0</td><td>8</td><td>3.9</td></tr><tr><td>9.0</td><td>9</td><td>5.0</td></tr><tr><td>10.0</td><td>10</td><td>5.6</td></tr></table>		Value	Effective Proportional Band			Fahrenheit	Celsius	3.0	3	1.2	4.0	4	1.7	5.0	5	2.2	6.0	6	2.8	7.0	7	3.3	8.0	8	3.9	9.0	9	5.0	10.0	10	5.6
Value	Effective Proportional Band																															
	Fahrenheit	Celsius																														
3.0	3	1.2																														
4.0	4	1.7																														
5.0	5	2.2																														
6.0	6	2.8																														
7.0	7	3.3																														
8.0	8	3.9																														
9.0	9	5.0																														
10.0	10	5.6																														
Power-up Delay Default value: 10 Sec. AV76	Power-up Delay On initial power up of the Room Controller there is a delay before any operation is authorized (fan, cooling or heating). This can be used to sequence the start up of multiple Room Controllers in one location. Range: 10 to 120 seconds																															

Setpoint Configuration

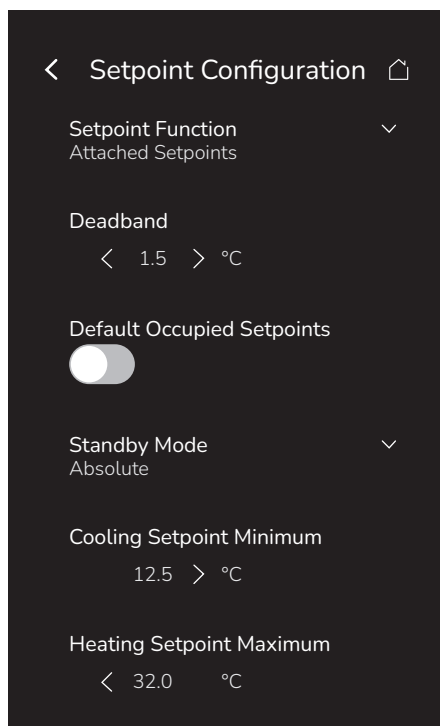


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Setpoint Function Default value: Attached Setpoints MV58	Setpoint Function Local setpoint settings to set the local setpoint interface for the User. <ul style="list-style-type: none"> Dual Setpoints: "Minimum" Deadband, Heat and Cool Setpoints can be adjusted independently. Attached Setpoints: Fixed Deadband in occupied mode, Heat and Cool setpoints always follow each other, separated by Deadband value (acts like a single setpoint). Choices: 1=Dual Setpoints, 2=Attached Setpoints
Deadband Default value: 3.0°F (-16.0°C) AV63	Deadband Temperature offset between the Cooling and Heating setpoints to ensure that Cooling setpoint is always warmer than the Heating setpoint. Cooling setpoint \geq (Heating setpoint + Deadband) Range: 2.0°F to 5.0°F (1.0°C to 2.5°C)
Default Occupied Setpoints Default value: Disabled MV205	Default Setpoints Indicates whether the Room Controller follows Default Occupied Setpoints. Choices: 1=Disabled, 2=Enabled
Standby Mode Default value: Absolute MV11	Standby Mode Configuration <ul style="list-style-type: none"> Absolute: Standby setpoints are individually configurable Offset – Standby setpoints are automatically managed by the Room Controller with: <ul style="list-style-type: none"> Standby Cooling Setpoint = Occupied Cooling Setpoint + Standby Differential Standby Heating Setpoint = Occupied Heating Setpoint - Standby Differential Choices: 1=Absolute, 2=Offset
Cooling Setpoint Minimum Default value: 54.0°F (12.0°C) AV59	Minimum Cooling Setpoint Limit <ul style="list-style-type: none"> Cooling Setpoint Minimum is applied to all setpoints, as it is the physical limit of how cold we want to allow the space to be chilled too. There is no reason an Unoccupied or Standby setpoint would want to be colder than the user allowed Cooling Setpoint Minimum. Cooling Setpoint Minimum cannot be more than the deadband above Heating Setpoint Maximum, otherwise it is not possible to respect the attached setpoints and deadband. Range: 54.0°F to 100.0°F (12.0°C to 38.0°C)

Parameter Default Value	Significance and Adjustments
Heating Setpoint Maximum Default value: 90.0°F (32.0°C) AV58	Maximum Heating Setpoint Limit Heating Setpoint Maximum is applied to all setpoints, as it is the physical limits of how hot we want to allow the space to be heated too. There is no reason an Unoccupied or Standby setpoint would want to be hotter than the user allowed Heating Setpoint Maximum. Range: 40.0°F to 90.0°F (4.5°C to 32.0°C)


Lua

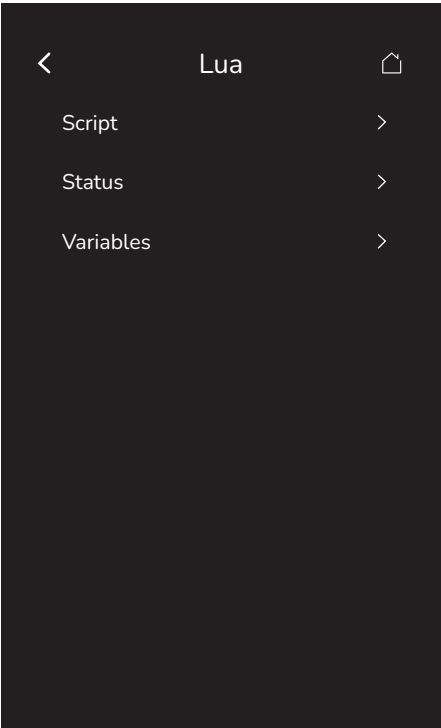

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Script	Refer to “Script” on page 35 for more information.
Status	Refer to “Status” on page 36 for more information.
Variables	Refer to “Variables” on page 38 for more information.


Script

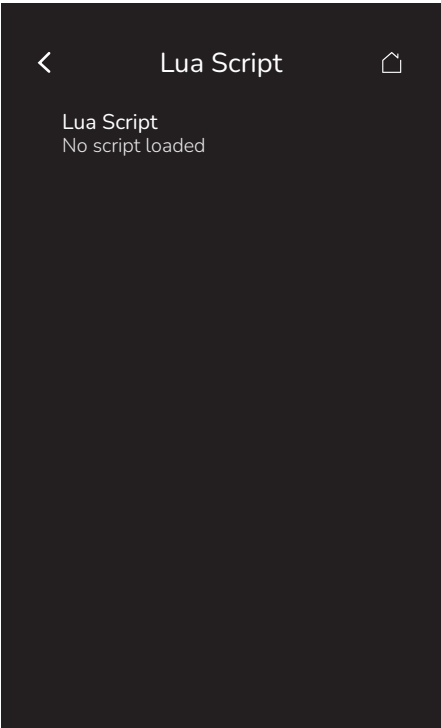

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Lua Script Default value: No script loaded Read Only	Lua Script If a Lua script has been loaded onto the Room Controller, this screen displays of the first lines, truncating scripts that are longer than ~22 lines with an ellipsis. If a script line exceeds the screen width, it will be wrapped, causing it to span two (or more) of the displayed lines. Tabs are displayed as 4 spaces, to ensure consistency of indented data. NOTE: This is just to allow the first lines to be viewed to help identify the loaded script.

Status

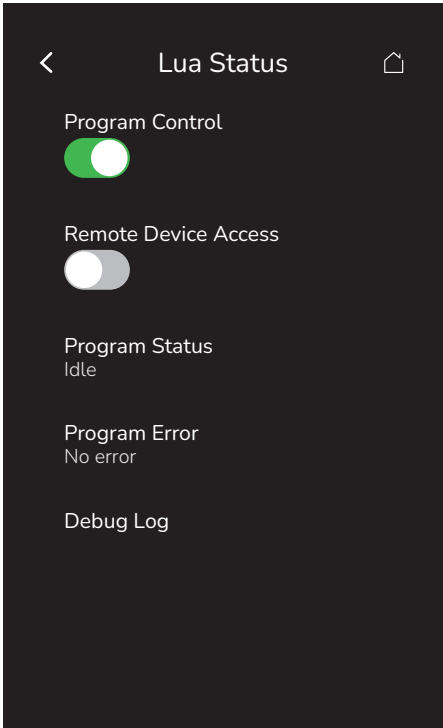


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Program Control Default value: Run	Program Control Allows the user to enable/disable the execution of the script. <ul style="list-style-type: none">Run: Lua script activated and runs continuously until deactivated.Stop: Lua script deactivated. Choices: Run or Stop
Remote Device Access Default value: Disabled Read Only (on BACnet) MV193	Remote Device Access This feature is only editable by an Administrator user. It is used to indicate whether it is possible to access this Room Controller remotely. Display Readings: Disabled, Enabled
Program Status Default value: Disabled Read Only	Program Status Displays the execution status of the Lua script, with values such as: <ul style="list-style-type: none">Running: Program is running normally.Halted: Program has been halted (via BACnet) or unloaded.Idle: Program is idle, not present or not yet running.Loading: Script is being loaded from disk. Display Readings: Disabled or Enabled
Program Error Default value: No error Read Only	Program Error Displays errors related to the execution of the Lua script, with values such as: <ul style="list-style-type: none">No errorSyntax: Syntax error detected in the script.Runtime: Runtime error occurred when running the script.Memory: Device has run out of memory for the script. Display Readings: No error, Syntax, Runtime, Memory

Parameter Default Value	Significance and Adjustments
Debug Log Read Only	Debug Log Displays a debug log related to the execution of the Lua script, with the following information: <ul style="list-style-type: none">• Messages printed from the Lua script.• Error-related information, such as:<ul style="list-style-type: none">▪ Date and time of the error▪ Line number (for syntax errors)▪ Error message

Variables

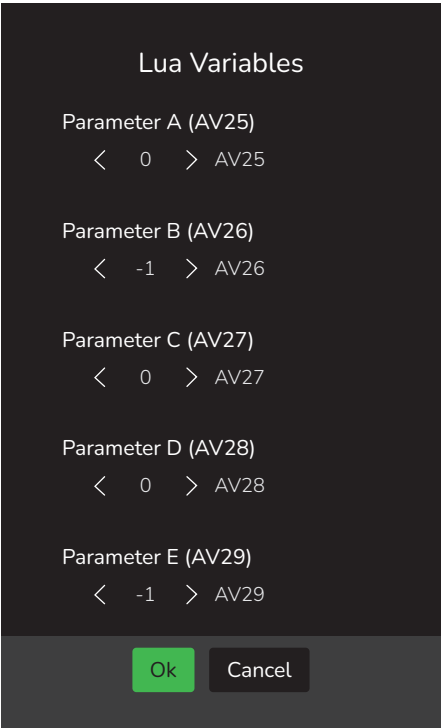


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Parameter A (AV25) Default value: 0 AV25	Lua Parameter A (AV25) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter B (AV26) Default value: 0 AV26	Lua Parameter B (AV26) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter C (AV27) Default value: 0 AV27	Lua Parameter C (AV27) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter D (AV28) Default value: 0 AV28	Lua Parameter D (AV28) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter E (AV29) Default value: 0 AV29	Lua Parameter E (AV29) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter F (AV30) Default value: 0 AV30	Lua Parameter F (AV30) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter G (AV31) Default value: 0 AV31	Lua Parameter G (AV31) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter H (AV32) Default value: 0 AV32	Lua Parameter H (AV32) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter I (AV33) Default value: 0 AV33	Lua Parameter I (AV33) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter J (AV34) Default value: 0 AV34	Lua Parameter J (AV34) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter K (AV35) Default value: 0 AV35	Lua Parameter K (AV35) The value of this parameter depends on what is assigned to it from a BAS or Lua script.

Parameter Default Value	Significance and Adjustments
Parameter L (AV36) Default value: 0 AV36	Lua Parameter L (AV36) The value of this parameter depends on what is assigned to it from a BAS or Lua script.


My Profile

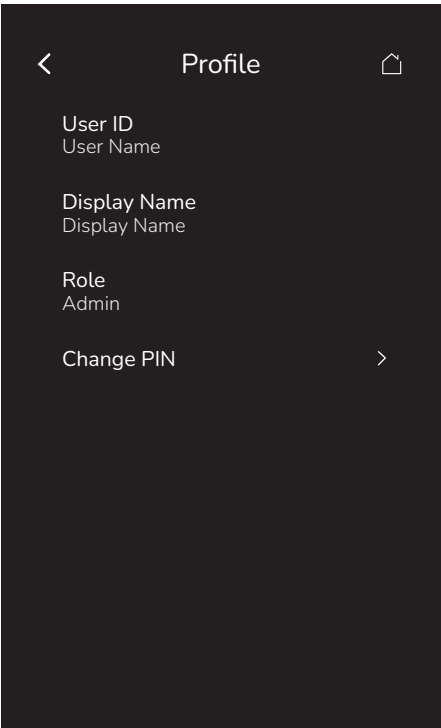

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
User ID Read Only CSV31	Active User Id Displays the user name of this profile, unique on this device. Display Readings: 3 to 32 characters (a-z, A-Z, 0-9, @_~+=^<>,.1/2:,*'`, and spaces)
Display Name Read Only	Display Name Displays the official name of the profile, shown on the screens throughout the device. Display Readings: 3 to 32 characters (a-z, A-Z, 0-9, @_~+=^<>,.1/2:,*'`, and spaces)
Role Read Only	Role Displays the user role attached to this profile: <ul style="list-style-type: none">Administrator: Full accessTechnician: Access to HVAC and local Room Controller-related configuration, but not to IP, FWU, etc. Display Readings: Administrator or Technician
Change PIN	Refer to “Change PIN” on page 41 for more information.

Change PIN

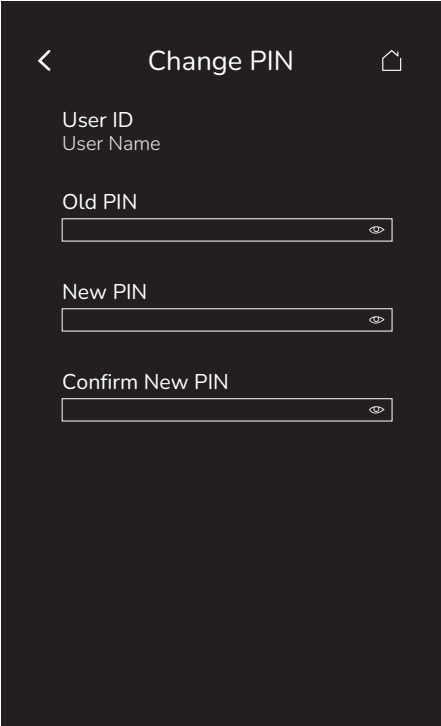


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
User ID Read Only CSV31	Active User Id Displays the user name of this profile, unique on this device. Display Readings: 3 to 32 characters (a-z, A-Z, 0-9, @_~+=^<>,.1/2:;*` , and spaces)
Old PIN	Old PIN Enter the current PIN for this profile. Range: 0 to 9999
New PIN	New PIN Enter the new PIN for this profile. Range: 0 to 9999
Confirm New PIN	Confirm New PIN Enter the new PIN once again for this profile. Range: 0 to 9999

Network

The user can select the wired protocol:

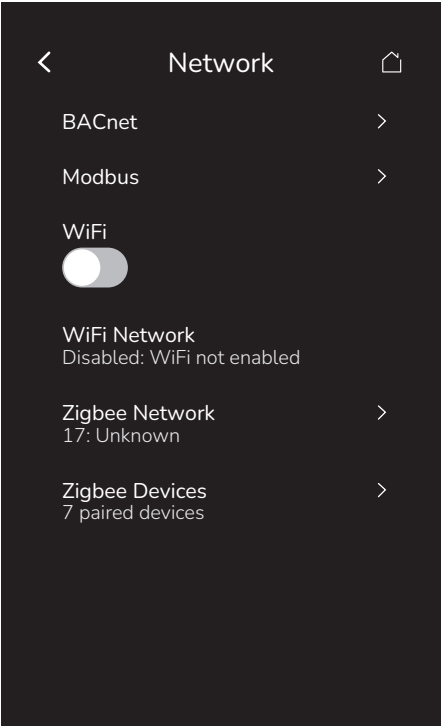

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
BACnet	Refer to “BACnet” on page 43 for more information.
Modbus	Refer to “Modbus” on page 45 for more information.
WiFi Default value: Disabled MV184	Enable WIFI Used to disable/enable the Wi-Fi network. Choices: Disabled, Enabled
WiFi Network	WiFi Network If the WiFi toggle switch is set to Disabled, this field will be uneditable and will indicate: Disabled: WiFi not enabled Otherwise, tapping this option will open the screen where a Wi-Fi network can be added or selected. Refer to “WiFi Network” on page 46 for more information.
Zigbee Network Read Only MSI2	Zigbee Network Status Displays the current status of the Zigbee network. Tap to display Zigbee Network screen where more features can be configured. Refer to “Zigbee Network” on page 51 for more information. Display Readings: Disabled, Initializing, Upgrading, Searching, Joining, Forming, Resuming, Online, Failed
Zigbee Devices Read Only AI330	Paired Zibgee Devices Displays the number of Zigbee devices paired with the Room Controller. Tap to display Zigbee Devices screen where 20 devices can be configured. Refer to “Zigbee Devices” on page 53 for more information. Display Readings: 0 to 20

BACnet

BACnet network screen shows when BACnet MS/TP is selected in wired protocol parameter.

BACnet

Network Type

MSTP

Status

Offline

Instance Number

93001

Network Units

Imperial

COM Address

< 254 >

Baud Rate

Auto

Ok

Cancel


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Network Type Default value: Disabled	Network Type <ul style="list-style-type: none">MSTP: Only available if the Modbus Network Type is set to RTU.IP: Only available if IP is present on the device. Choices: 1=Disabled, 2=MSTP, 3=IP
Status Read Only MSI318	BACnet Server Status <p>Read Only value shows if a BACnet Network is detected or not.</p> <p>MSTP – Online when:</p> <ul style="list-style-type: none">BACnet/MSTP is enabledRS-485 communicated is detected online <p>IP – Online when:</p> <ul style="list-style-type: none">BACnet/MSTP is enabledWi-Fi network is onlineIP address is valid Display Readings: Unknown, Disabled, Offline, Online
Instance Number Default value: Last 4 digits of serial number	Instance Number <p>Configurable number that identifies a device uniquely on the entire interconnected BACnet network.</p> Range: 0 to 4194302 (22-bit)
Network Units Default value: Imperial MV6	Network Units <p>Network units transmitted over the BACnet network.</p> <p>NOTE: Use the Temperature scale parameter to change the display units locally on the Room Controller.</p> <ul style="list-style-type: none">SI: Network units shown as International Metric units.Imperial: Network units shown as Imperial units. Choices: 1=SI, 2=Imperial

Parameter Default Value	Significance and Adjustments
COM Address Default value: 254 AV10	COM Address Room Controller networking address. Default value of 254 disables BACnet communication for the Room Controller. Note: This field only appears when the MSTP Network Type is selected. Range: 0 to 254
Baud Rate Default value: Auto MV8	BACnet Baud Rate Leave the value at Auto unless instructed otherwise as this automatically detects BACnet baud rate. Note: This field only appears when the MSTP Network Type is selected. Choices: 1=9600, 2=19200, 3=38400, 4=57600, 5=76800, 6=115200, 7=Auto
Port	Port Port number for the IP Network. Note: This field only appears when the IP Network Type is selected. Range: 5 to 25
Foreign Device Registration Default value: Disabled	Foreign Device Registration A “foreign” device in the context of BACnet refers to a device that operates on a different IP subnet than the BACnet/IP network it is trying to communicate with. These devices require a process known as “foreign device registration” to join the BACnet network, allowing them to communicate with other BACnet devices despite being on a different subnet. Note: This field only appears when the IP Network Type is selected. Choices: Disabled, Enabled
BBMD Status Default value: Offline Read Only MV207	BBMD Status A BBMD (BACnet Broadcast Management Device) is essential for handling broadcasts across different IP subnets. The BBMD helps ensure that broadcast messages can be communicated effectively between devices on different subnets. Display Readings: Offline, DNS Lookup, DNS Fail, Registering, Registered, Registration Failed
BBMD Address	BBMD Address BACnet Broadcast Management Device address.
BBMD Port Default value: 47808	BBMD Port BACnet Broadcast Management Device port number. Range: 1024 to 65534
BBMD TTL (seconds) Default value: 300	BBMD TTL (seconds) Time to Live delay in seconds. Range: 0 to 65535

Modbus


Modbus network screen shows when Modbus is selected in wired protocol parameter.

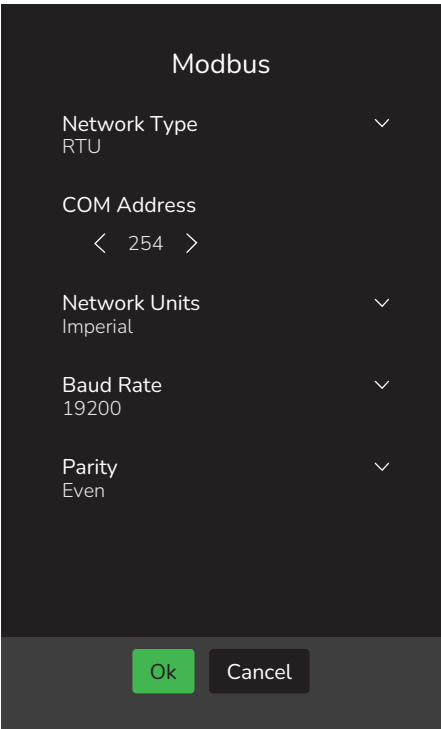

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Network Type Default value: Disabled	Network Type RTU: Only available if the BACnet Network Type is set to MSTP. Choices: Disabled or RTU
COM Address Default value: 254	COM Address Room Controller networking address. NOTE: A COM Address may be shared between Modbus and BACnet/MSTP. Range: 0 to 254
Network Units Default value: Imperial	Network Units Network units transmitted over the Modbus network. NOTE: Use the Temperature scale parameter to change the display units locally on the Room Controller. <ul style="list-style-type: none">• SI: Network units shown as International Metric units.• Imperial: Network units shown as Imperial units. Choices: 1=SI, 2=Imperial
Baud Rate Default value: 19200	Baud Rate Automatically detects Modbus baud rate. Choices: 1=4800, 2=9600, 3=19200, 4=38400, 5=57600
Parity Default value: Even	Parity Determines how the parity bit of the character's data frame is set to detect any errors in the sent/receives frame. Choices: 1=None, 2=Odd, 3=Even

WiFi Network

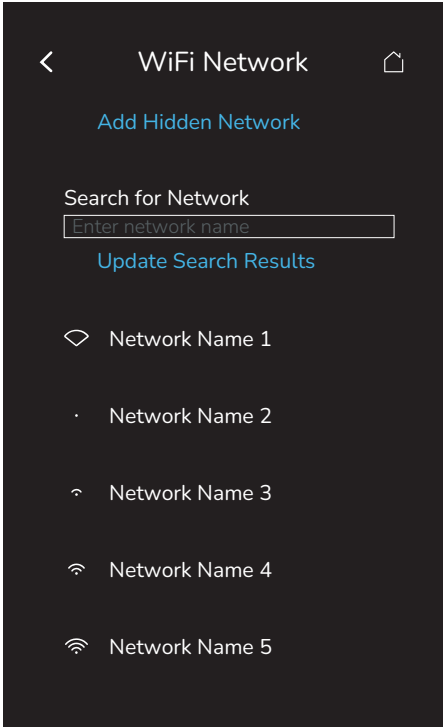

PARAMETER DETAILS

Parameter	Default Value	Significance and Adjustments
Add Hidden Network		Tap to open the screen and add a hidden Wi-Fi network. Refer to “Hidden Network” on page 47 for more information.
Search for Network		Tap and enter a Service Set Identifier (SSID), tap Update Search Results, then tap on the desired network name. Refer to “Connect to a Wi-Fi Network” on page 49 for more information.

Hidden Network

<

Hidden Network

Network Name

Enter network name

Must be 1-32 characters long.

Security

WPA2 PSK (AES)

Password

Enter password

Must be 8-63 characters long.

Show Advanced Settings

IP Settings

Static

IP Address

192.168.2.3


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Network Name CSV7	WiFi Network SSID Service Set Identifier (SSID), the Wi-Fi network name. Range: 1 to 32 characters (a-z, A-Z, 0-9, @_~+=^<>.,½:;*, and spaces)
Security Default value: UNKNOWN SECURITY MV206	WiFi Security Type Security protocol used for this Wi-Fi network. Choices: 1=WPA2 AES PSK, 2=WPA2 TKIP PSK, 3=WPA2 MIXED PSK, 4=WPA3 SAE, 5=WPA3 WPA2 PSK, 6=UNKNOWN SECURITY
Password	Password Unique password linked to this Wi-Fi network. Range: 8 to 63 characters (a-z, A-Z, 0-9, @_~+=^<>.,½:;*, and spaces)
Show Advanced Settings Default value: Disabled	Show Advanced Settings Used to display more settings related to the configuration of this Wi-Fi network. Choices: Disabled, Enabled
IP Settings Default value: Dynamic MV183	Enable Static IP <ul style="list-style-type: none">Dynamic (DHCP): If this option is selected, a field requiring the Domain Name System (DNS) server is displayed.Static: If this option is selected, refer to the following rows for the required information. Choices: 1=Dynamic (DHCP), 2=Static
IP Address Default value: Empty	IP Address Internet Protocol (IP) address that is assigned to the device. Range: 0 to 255 characters

Parameter Default Value	Significance and Adjustments
Mask Default value: Empty	Mask Mask address that is assigned to the device. Range: 0 to 255 characters
Gateway Default value: Empty	Gateway Gateway address that is assigned to the device. Range: 0 to 255 characters
DNS Default value: Empty	DNS Domain Name System (DNS) address that is assigned to the device. Range: 0 to 255 characters

Connect to a Wi-Fi Network

The name appearing at the top of the screen will be the name of the network that was selected. Refer to “WiFi Network” on page 46.

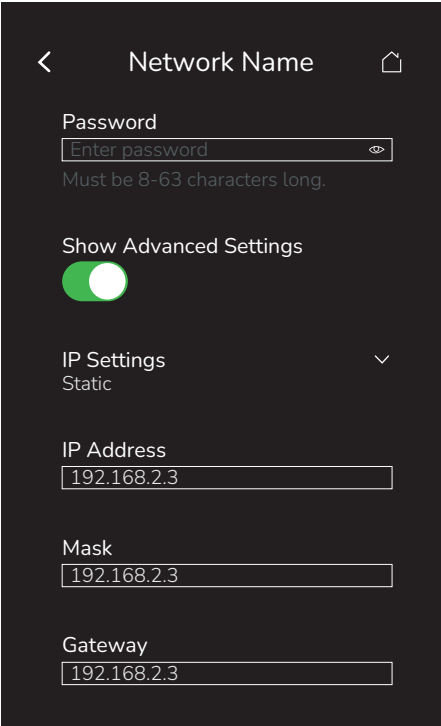

PARAMETER DETAILS

Parameter	Default Value	Significance and Adjustments
Password		<p>Password</p> <p>Unique password linked to this Wi-Fi network.</p> <p>Range: 8 to 63 characters (a-z, A-Z, 0-9, @_~+=^<>.,½;*, and spaces)</p>
Show Advanced Settings	Default value: Disabled	<p>Show Advanced Settings</p> <p>Used to display more settings related to the configuration of this Wi-Fi network.</p> <p>Choices: Disabled, Enabled</p>
IP Settings	Default value: Dynamic MV183	<p>Enable Static IP</p> <ul style="list-style-type: none">Dynamic (DHCP): If this option is selected, a field requiring the Domain Name System (DNS) server is displayed.Static: If this option is selected, refer to the following rows for the required information. <p>Choices: 1=Dynamic (DHCP), 2=Static</p>
IP Address	Default value: Empty	<p>IP Address</p> <p>Internet Protocol (IP) address that is assigned to the device.</p> <p>Range: 0 to 255 characters</p>
Mask	Default value: Empty	<p>Mask</p> <p>Mask address that is assigned to the device.</p> <p>Range: 0 to 255 characters</p>
Gateway	Default value: Empty	<p>Gateway</p> <p>Gateway address that is assigned to the device.</p> <p>Range: 0 to 255 characters</p>

Parameter Default Value	Significance and Adjustments
DNS Default value: Empty	DNS Domain Name System (DNS) address that is assigned to the device. Range: 0 to 255 characters

Zigbee Network

Zigbee Network

Node Type

Coordinator

Network Status

17: Unknown

PAN ID

< 17 >

Channel

< 17 >

Security

Normal

IEEE Address

192.168.2.3

Ok


Cancel

PARAMETER DETAILS

Parameter	Default Value	Significance and Adjustments
Node Type	Default value: Disabled	<div>Node Type</div> <p>A Zigbee network is made up of entities called nodes:</p> <ul style="list-style-type: none">Disabled: No Zigbee network.Coordinator: Zigbee Coordinator (ZC) is responsible for forming the network. A coordinator can be seen as a router with additional functionality. There can be only one coordinator in a single network. <div>Choices: Disabled or Coordinator</div>
Network Status	Default value: Disabled Read Only MSI2	<div>Zigbee Network Status</div> <p>Current status of the Zigbee network.</p> <div>Display Readings: Disabled, Initializing, Upgrading, Searching, Joining, Forming, Resuming, Online, Failed</div>
PAN ID	Default value: Imperial	<div>PAN ID</div> <p>Zigbee networks are called personal area networks (PANs). Each network is defined with a unique PAN identifier (PAN ID).</p> <div>Range: 5 to 25</div>
Channel	Default value: 19200	<div>Channel</div> <p>A Zigbee channel is a narrow band of radio frequency used by Zigbee devices to communicate wirelessly.</p> <div>Range: 5 to 25</div>
Security	Read Only	<div>Security</div> <div>Display Readings: Normal</div>

Parameter Default Value	Significance and Adjustments
Permit Join Default value: Disabled	Permit Join Enables the coordinator to send the link key (required to join the network) to devices. Choices: Disabled, Enabled
Network Address Read Only	Network Address A 16-bit address that a device receives when it joins a Zigbee network Choices: 1=None, 2=Odd, 3=Even
IEEE Address Read Only CSV10	ZigBee IEEE Address A unique 64-bit identifier assigned to each ZigBee device by the manufacturer. Range: 0 to 18 characters


Zigbee Devices

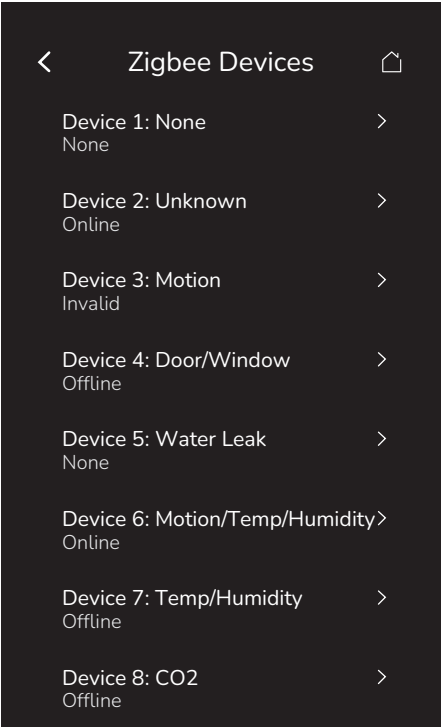

PARAMETER DETAILS

Parameter	Default Value	Significance and Adjustments
Device n: Name	Ready Only	Device #: Name Tapping on a device will display its information and offer the possibility of removing the device.


Occupancy

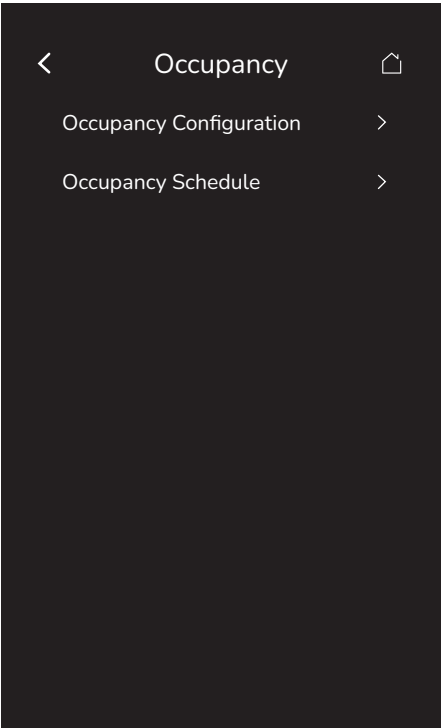

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Occupancy Configuration	Refer to “Occupancy Configuration” on page 55 for more information.
Occupancy Schedule	Refer to “Occupancy Schedule” on page 57 for more information.

Occupancy Configuration

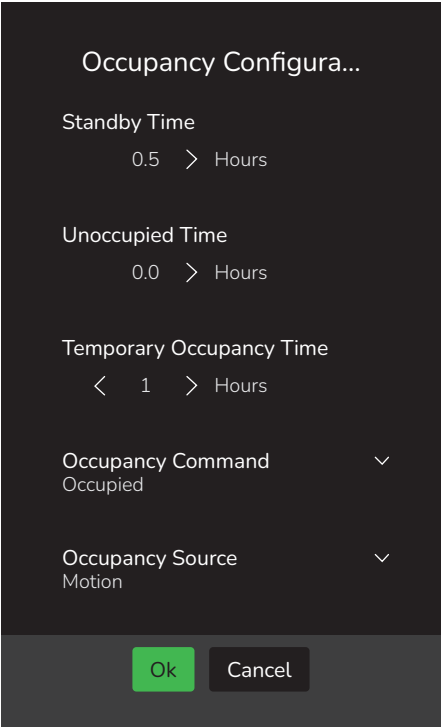


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Standby Time Default value: 0.5 Hours AV67	Standby Time Time between the moment where the PIR cover detects last movement in the area, and the time which the Room Controller stand-by setpoints become active. NOTE: This parameter is not active when the Door function is used (wired or wireless). Range: 0.5 to 24 Hours (Resolution: 0.5 Hours)
Unoccupied Time Default value: 0.0 Hours AV68	Unoccupied Time Time between the moment where the Room Controller toggles to stand-by mode, and the time which the Room Controller unoccupied mode and setpoints become active. NOTE: Default value of 0.0 hours disables the unoccupied timer. This prevents the Room Controller from being able to switch from stand-by mode to unoccupied mode when PIR functions are used. Range: 0.5 to 24 Hours (Resolution: 0.5 Hours)
Temporary Occupancy Time Default value: 2 Hours AV62	Temporary Occupancy Time The time the Room Controller stays in override mode before reverting back to unoccupied mode. When the Room Controller is in unoccupied mode, pressing the on-screen Override icon or closing the contact on UI17, configured as Remote Override, sets the Room Controller to Override mode for defined time period, and uses the Occupied Cooling and Heating setpoints. Range: 0 to 24 Hours (Resolution: 1 Hour)
Occupancy Command Default value: Occupied MV10	Occupancy Command Allows quick workaround of faults in motion sensors, etc. <ul style="list-style-type: none"> Local Occupancy: Occupancy is determined by local sequences (either PIR or schedule, as configured under Occupancy Source). Occupied: Forces occupied mode. Unoccupied: Forces unoccupied mode. Choices: 1=Local Occupancy, 2=Occupied, 3=Unoccupied

Parameter Default Value	Significance and Adjustments
Occupancy Source Default value: Motion MV110	Occupancy Source <ul style="list-style-type: none"> • Motion: Occupancy status is received from a motion sensor. • Schedule: Occupancy status is determined by the schedule. • Motion during Schedule: Occupied when scheduled occupied AND when motion is detected. • Motion or Schedule: Occupied when scheduled occupied OR when motion is detected. Choices: 1=Motion, 2=Schedule, 3=Motion during Schedule, 4=Motion or Schedule
Occupancy Sensor Default value: High MV188	Occupancy Sensor <p>The Room Controller uses a PIR for Occupancy sensing that can be configured with sensitivities. When enabled, this feature sets the Local Motion point to active upon detection of occupancy.</p> <p>The target ranges for occupancy modes are:</p> <ul style="list-style-type: none"> • Off: No sensibilities • Low: 1 meter (3.28 feet) • Medium: 4 meter (13.12 feet) • High: 8 meter (26.25 feet) Choices: 1=Off, 2=Low, 3=Medium, 4=High
Smart Recovery Default value: Off Read Only BV40	Smart Recovery Status <ul style="list-style-type: none"> • Off: No smart recovery. The occupied schedule time is the time at which the system will restart. • On: Smart recovery active. The occupied schedule time is the time at which the desired occupied temperature will be attained. The Room Controller automatically optimizes the equipment start time. In any case, the latest a system will restart is 10 minutes prior to the occupied period time. <p>Smart recovery is automatically disabled if U1 is configured to remote NSB.</p> Display Readings: Off, On
Binary Aux. Output Configuration Default value: Normally Open Read Only MV92	Auxiliary Output <ul style="list-style-type: none"> • Normally Open: • Normally Closed: Display Readings: Normally Open, Normally Closed

Occupancy Schedule

There are seven different schedule setting screens, one for each day of the week. Each day can have different scheduled events where the Room Controller is set to Occupied status or back to Unoccupied status. The Room Controller can use the appropriate setpoints (back and forth) up to three times per day.

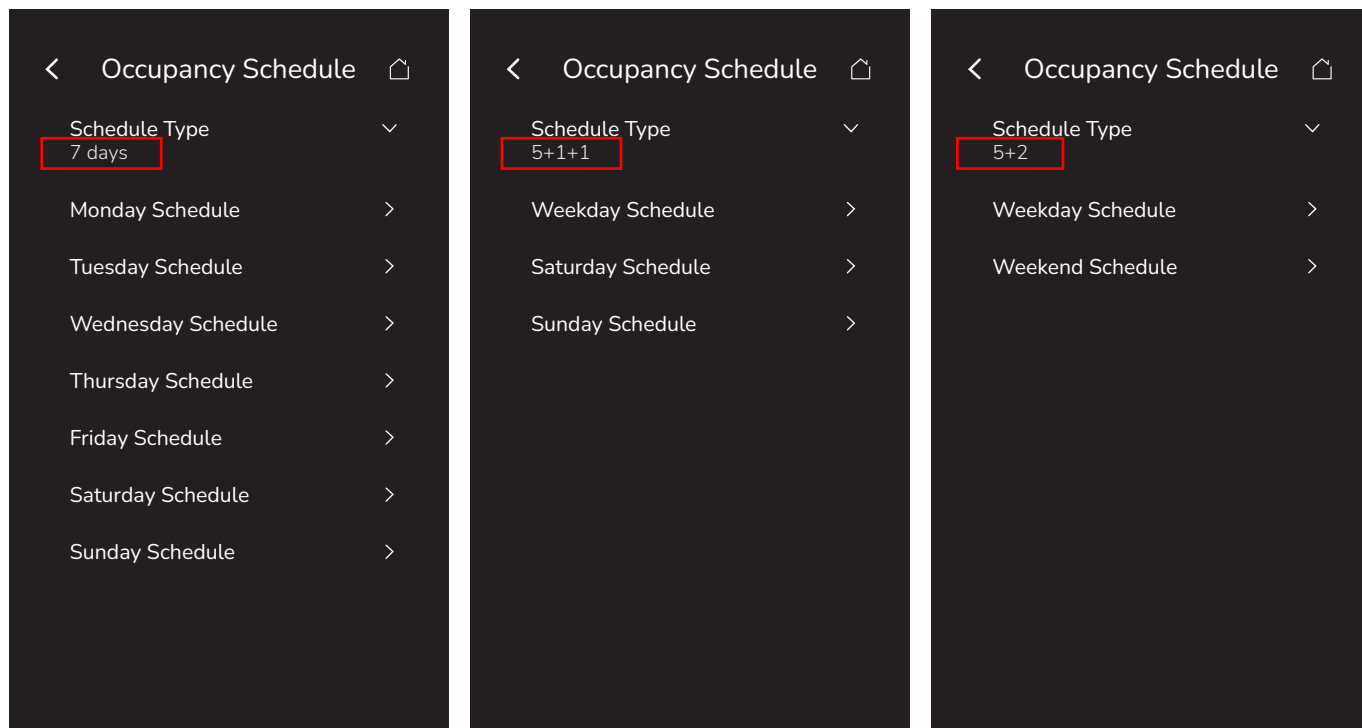


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Schedule Type Default value: 7 days MV136	Schedule Type <ul style="list-style-type: none"> 7 days: Independent scheduling identified by day of the week (Sunday - Saturday). 5+1+1 days: Weekdays scheduling and Independent Weekend scheduling identified as Weekdays, Saturday and Sunday. 5+2 days: Weekdays scheduling and Weekend scheduling identified as Weekdays and Weekend. Choices: 1=7 days, 2=5+1+1, 3=5+2
Occupied 1 – 3 Default value: None	Occupied 1 – 3 Defines a time when the Room Controller is automatically set to use the Occupied setpoint. --:-- indicates no time is set for the Occupied setpoint. NOTE: There are 3 separate Occupied parameter entries. Range: 00:00 - 23:59, or --:--
Unoccupied 1 – 3 Default value: None	Unoccupied 1 – 3 Defines a time when the Room Controller is automatically set to use the Unoccupied setpoint. --:-- indicates no time is set for the Unoccupied setpoint. NOTE: There are 3 separate Unoccupied parameter entries. Range: 00:00 - 23:59, or --:--

Preferences

This Preferences screen is available via the Setup.

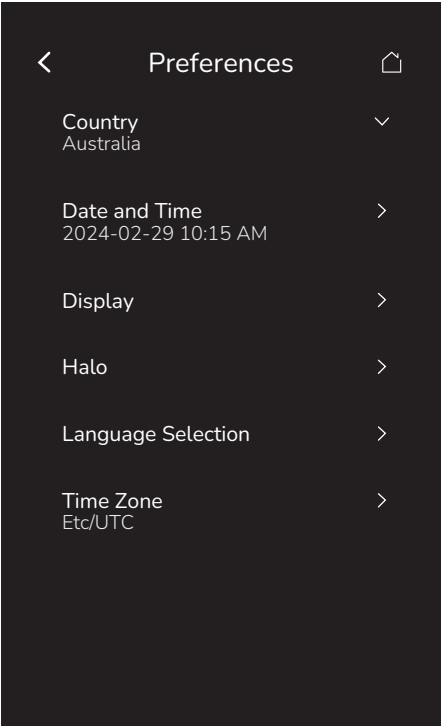

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Country	<p>Country</p> <p>Offers the possibility of conditionally configuring the country of operation based on the factory-locked country code of the Room Controller.</p> <p>If the manufacturing region of the Room Controller is:</p> <ul style="list-style-type: none">• Defined: This field will use the same value and will not be editable.• Not defined: This field will be a drop-down list of available countries to choose from. <p>Note: This feature is not available on the North American Room Controller model.</p>
Date and Time	<p>Date and Time</p> <p>Defines the current date and time: Year-Month-Day + 12 hour AM-PM or 24 hour format.</p> <p>The latter is determined by the Time Format parameter value. Refer to “Display” on page 60 for more information.</p>
Display	Refer to “Display” on page 60 for more information.
Halo	Refer to “Halo” on page 62 for more information.
Language Selection	Refer to “Language Selection” on page 63 for more information.
Time Zone	Refer to “Time Zone” on page 65 for more information.

Date and Time

Date and Time

Date

Year / Month / Day

^

2024

^

/

2

/

29

^

↓

Time

Hours : Minutes

^

10

↓

:

^

15

↓


Ok

Cancel

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Date Default value: Current date at power up	Date Standard date display, Year/Month/Day.
Time Default value: Current time at power up	Time Standard time display, 12 hour AM-PM or 24 hour format determined by the Time Format parameter value. Refer to “Display” on page 60 for more information.

Display

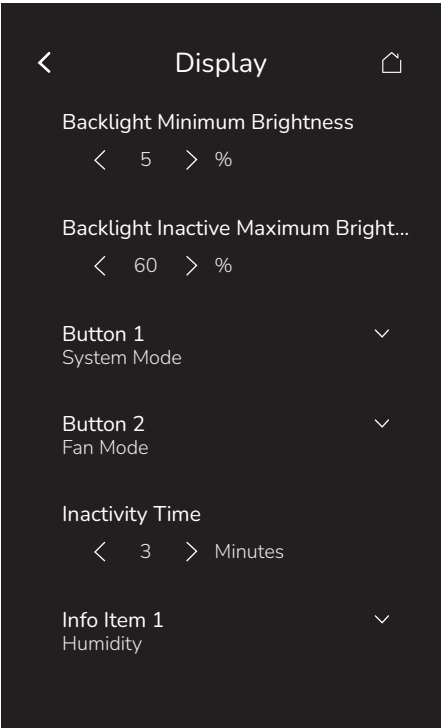

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Backlight Minimum Brightness Default value: 5% AV4	Night Backlight Sets the lowest display backlight intensity. Range: 0% to Value of Backlight Inactive Maximum Brightness (e.g., 60%) (Resolution: 1%)
Backlight Inactive Maximum Brightness Default value: 60% AV3	Low Backlight Sets the display backlight intensity. This feature is activated (screen dims) after 150 seconds of no activity on the Room Controller. Range: Value of Backlight Minimum Brightness (e.g., 5%) to 100% (Resolution: 1%)
Button 1 Default value: System Mode MV195	Button 1 Used to configure the feature controlled by the first of two buttons on the home screen. Choices: 1=Disabled, 2=System Mode, 3=Fan Mode
Button 2 Default value: Fan Mode MV196	Button 2 Used to configure the feature controlled by the second of two buttons on the home screen. Choices: 1=Disabled, 2=System Mode, 3=Fan Mode
Inactivity Time Default value: 3 Minutes AV231	Inactivity Time Used for: <ul style="list-style-type: none">Standby screen activationBacklight inactivity timeout Range: 1 to 10 Minutes (Resolution: 1 Minute)
Info Item 1 Default value: Humidity MV200	Info Item 1 Used to configure the information shown on the first of three lines on the home screen. Each information can only be shown on one Info Item. If one is selected on a second Info Item, the first item will be set to Disabled. Choices: 1=Disabled, 2=Humidity, 3=CO ₂ Level, 4=Outdoor Air Temperature

Parameter Default Value	Significance and Adjustments
Info Item 2 Default value: CO₂ Level MV201	Info Item 2 Used to configure the information shown on the second of three lines on the home screen. Each information can only be shown on one Info Item. If one is selected on a second Info Item, the first item will be set to Disabled. Choices: 1=Disabled, 2=Outdoor Air Temperature, 3=Humidity, 4=CO ₂ Level
Info Item 3 Default value: Outdoor Air Temperature MV202	Info Item 3 Used to configure the information shown on the third of three lines on the main display. Each information can only be shown on one Info Item. If one is selected on a second Info Item, the first item will be set to Disabled. Choices: 1=Disabled, 2=Outdoor Air Temperature, 3=Humidity, 4=CO ₂ Level
Notifications Default value: All MV187	Notification Display Type Used to configure the display of notifications on screen: <ul style="list-style-type: none"> • Disabled: No notifications shown. • Custom Only: Custom notifications shown, but no In-built notifications. • All: Custom and in built notifications shown. Choices: 1=Disabled, 2=Custom Only, 3=All
Setpoint Control Default value: Slider MV192	HMI Setpoint Used to configure the temperate setpoint control type on the home screen. Choices: 1=None, 2=Slider, 3=Buttons (Attached SP Only)
Standby Screen Default value: Disable MV32	Use Standby Screen Used to choose whether to display a custom image or not when the Room Controller switches to Standby Mode after a configurable amount of inactive time. Choices: 1=Disabled, 2=Custom Image
Time Format Default value: 12 Hour (AM-PM) MV5	Time Format Used to configure the user's preferred display time format. For example: <ul style="list-style-type: none"> • 12 Hour (AM-PM): 5:41 PM • 24 Hour: 17:41 or 01:23 Choices: 1=12 Hour (AM-PM), 2=24 Hour

Halo



PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Halo Mode Default value: Heat/Cool MV194	Halo Mode <ul style="list-style-type: none">Disabled: Halo remains offHeat/Cool:<ul style="list-style-type: none">Orange: HeatingBlue: CoolingOff: On standby (room temperature at setpoint) Choices: 1=Disabled, 2=Heat/Cool
Halo Maximum Brightness Default value: 100% AV236	Halo Maximum Brightness <p>Controls the maximum brightness of the halo LED.</p> Range: 0% to 100%

Language Selection

Only English, French, Spanish, Chinese, and Russian are enabled by default and are accessible to users cycling through languages on the main Preferences screen. To change the language selection settings, tap a language on the screen and then use the arrow buttons to disable or enable it.

NOTE: English is always enabled.




PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Arabic Default value: Disabled MV120	Arabic Choices: 1=Disabled, 2=Enabled
Chinese Default value: Enabled MV103	Chinese Choices: 1=Disabled, 2=Enabled
Czech Default value: Disabled MV122	Czech Choices: 1=Disabled, 2=Enabled
Danish Default value: Disabled MV123	Danish Choices: 1=Disabled, 2=Enabled
Dutch Default value: Disabled MV124	Dutch Choices: 1=Disabled, 2=Enabled
Finnish Default value: Disabled MV125	Finnish Choices: 1=Disabled, 2=Enabled
French Default value: Enabled MV101	French Choices: 1=Disabled, 2=Enabled
German Default value: Disabled MV126	German Choices: 1=Disabled, 2=Enabled
Hebrew Default value: Disabled MV156	Hebrew Choices: 1=Disabled, 2=Enabled

Parameter Default Value	Significance and Adjustments
Hungarian Default value: Disabled MV127	Hungarian Choices: 1=Disabled, 2=Enabled
Indonesian Default value: Disabled MV128	Indonesian Choices: 1=Disabled, 2=Enabled
Italian Default value: Disabled MV129	Italian Choices: 1=Disabled, 2=Enabled
Japanese Default value: Disabled MV155	Japanese Choices: 1=Disabled, 2=Enabled
Norwegian Default value: Disabled MV130	Norwegian Choices: 1=Disabled, 2=Enabled
Polish Default value: Disabled MV131	Polish Choices: 1=Disabled, 2=Enabled
Portuguese Default value: Disabled MV132	Portuguese Choices: 1=Disabled, 2=Enabled
Russian Default value: Enabled MV104	Russian Choices: 1=Disabled, 2=Enabled
Slovak Default value: Disabled MV133	Slovak Choices: 1=Disabled, 2=Enabled
Swedish Default value: Disabled MV134	Swedish Choices: 1=Disabled, 2=Enabled
Turkish Default value: Disabled MV135	Turkish Choices: 1=Disabled, 2=Enabled


Time Zone

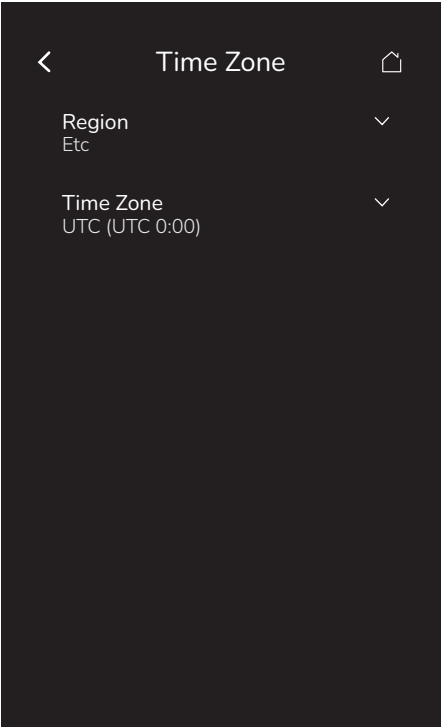

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Region Default value: Etc	Region Allows the user to configure their local time zone via the local interface. Choices: 1=Africa, 2=America, 3=Asia, 4=Australia, 5=Etc., 6=Europe, 7=Pacific
Time Zone Default value: UTC CSV40	Timezone <div><div><ul style="list-style-type: none">Africa<ul style="list-style-type: none">Brazzaville (UTC 1:00)Cairo (UTC 2:00)Harare (UTC 2:00)Nairobi (UTC 3:00)America<ul style="list-style-type: none">Anchorage (UTC -8:00)Buenos Aires (UTC -3:00)Chicago (UTC -5:00)Denver (UTC -6:00)Godthab (UTC -3:00)Halifax (UTC -3:00)Los Angeles (UTC -7:00)Manaus (UTC -4:00)Mexico City (UTC -6:00)New York (UTC -4:00)Phoenix (UTC -7:00)Regina (UTC -6:00)Santiago (UTC -4:00)Sao Paulo (UTC -3:00)St Johns (UTC -1:30)Tijuana (UTC -7:00)</div><div><ul style="list-style-type: none">Asia<ul style="list-style-type: none">Bangkok (UTC 7:00)Chongqing (UTC 8:00)Dubai (UTC 4:00)Hong Kong (UTC 8:00)Jerusalem (UTC 2:00)Katmandu (UTC 5:45)Kolkata (UTC 5:30)Kuala Lumpur (UTC 8:00)Kuwait (UTC 3:00)Rangoon (UTC 6:30)Seoul (UTC 9:00)Shanghai (UTC 8:00)Taipei (UTC 8:00)Tehran (UTC 4:30)Tokyo (UTC 9:00)Australia<ul style="list-style-type: none">Adelaide (UTC 10:30)Brisbane (UTC 10:00)Darwin (UTC 9:30)Hobart (UTC 11:00)Perth (UTC 8:00)Sydney (UTC 11:00)</div><div><ul style="list-style-type: none">Etc.<ul style="list-style-type: none">UTCEurope<ul style="list-style-type: none">Amsterdam (UTC 1:00)Belgrade (UTC 1:00)Berlin (UTC 1:00)Brussels (UTC 1:00)Helsinki (UTC 2:00)Istanbul (UTC 3:00)London (UTC 0:00)Moscow (UTC 3:00)Rome (UTC 1:00)Sarajevo (UTC 1:00)Pacific<ul style="list-style-type: none">Auckland (UTC 12:00)Guam (UTC 10:00)Honolulu (UTC -10:00)Majuro (UTC 12:00)Midway (UTC -11:00)</div></div> Choices: Choices depends on the selected Region

Service View

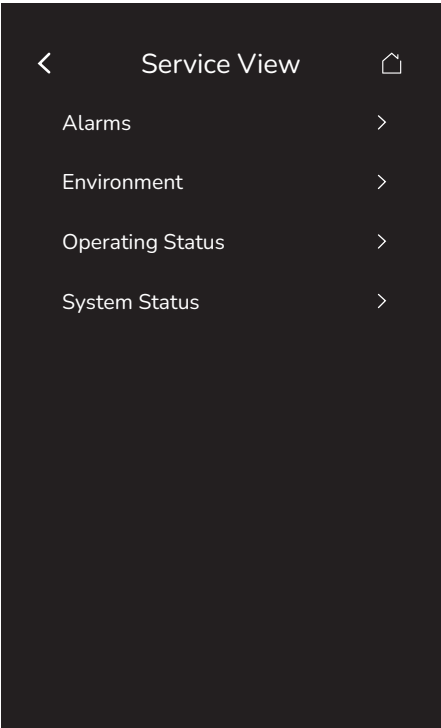


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Alarms	Refer to “Alarms” on page 67 for more information.
Environment	Refer to “Environment” on page 69 for more information.
Operating Status	Refer to “Operating status” on page 71 for more information.
System Status	Refer to “System Status” on page 72 for more information.

Alarms

The information displayed on this screen depends on the Room Controller configuration and the installed sensors.

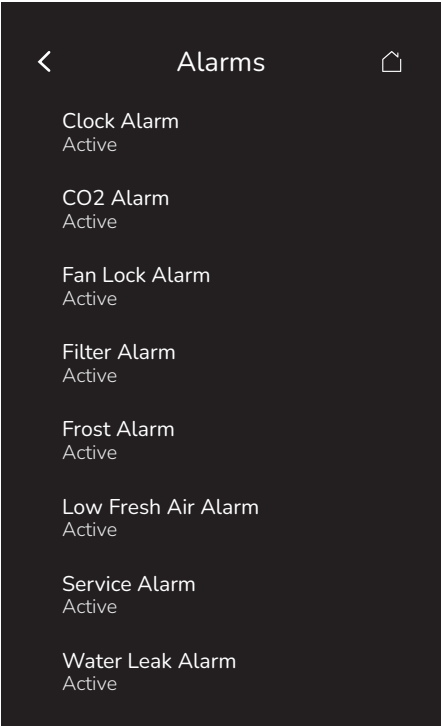


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Clock Alarm Default value: Inactive Read Only BV8	Clock Alarm The Room Controller activates a Clock Alarm upon startup when: <ul style="list-style-type: none">• Occupancy Command is set to Local Occupancy.• Occupancy Source is set to a value involving schedules.• The Room Controller time is invalid, resulting in scheduled occupancy not functioning. Upon startup when Clock Alarm is active, the occupancy status will be Unoccupied. Display Readings: Inactive, Active
CO₂ Alarm Default value: Inactive Read Only BV41	CO₂ Alarm The Room Controller activates a CO ₂ Alarm when: The CO ₂ level is greater than the configured “Maximum CO ₂ ” for 30 minutes or more. Display Readings: Inactive, Active
Fan Lock Alarm Default value: Inactive Read Only BV39	Fan Lock Alarm The Room Controller supports Fan Lock Alarms: When the (G) Fan Output is activated, if this input is not activated after 10 seconds, the Room Controller disables Heat and Cool outputs and enables the “Fan Lock” alarm. The alarm is cleared when: <ul style="list-style-type: none">• Fan Lock input is activated, or• (G) Fan is deactivated Display Readings: Inactive, Active

Parameter Default Value	Significance and Adjustments
Filter Alarm Default value: Inactive Read Only BV36	Filter Alarm The Room Controller supports Filter Alarms. <ul style="list-style-type: none"> Active when: <ul style="list-style-type: none"> Configurable input U2 is configured as Filter Alarm, AND Input is active Inactive when: <ul style="list-style-type: none"> Configurable input U2 is not configured as Filter Alarm, OR Input is inactive Display Readings: Inactive, Active
Frost Alarm Default value: Inactive Read Only BV43	Frost Alarm The Room Controller supports Frost Alarms: <ul style="list-style-type: none"> The room frost protection operates in all system modes, even 'Off'. When room temperature is less than 42°F (5.6°C): <ul style="list-style-type: none"> Frost Protection alarm is activated. Pressure-Independent Heating Demand is forced to 100%. Display Readings: Inactive, Active
Low Fresh Air Alarm Default value: Inactive Read Only BV42	Low Fresh Air Alarm The Room Controller supports Low Fresh Air Alarms. <ul style="list-style-type: none"> Enabled when: The "Fresh Air Range Upper Limit" is greater than zero. Active when: The fresh air flow is 15% or more below the configured "Minimum Fresh Air" for 30 minutes or more. Display Readings: Inactive, Active
Service Alarm Default value: Inactive Read Only BV37	Service Alarm The Room Controller supports Service Alarms. <ul style="list-style-type: none"> Active when: <ul style="list-style-type: none"> Configurable input U2 is configured as Service Alarm, AND Input is active Inactive when: <ul style="list-style-type: none"> Configurable input U2 is not configured as Service Alarm, OR Input is inactive Display Readings: Inactive, Active
Water Leak Alarm Default value: Inactive Read Only BV44	Water Leak Alarm The Room Controller activates a Water Leak Alarm when: <ul style="list-style-type: none"> Active when any connected water leak sensor reports a leak. Inactive when all connected water leak sensors report no leak. Display Readings: Inactive, Active
Window Alarm Default value: Inactive Read Only BV35	Window Alarm The Room Controller supports Window Alarms. <ul style="list-style-type: none"> Active when: Any connected wired or wireless window sensor reports an open window. Inactive when: All connected wired and wireless window sensors report closed windows. Display Readings: Inactive, Active

Environment

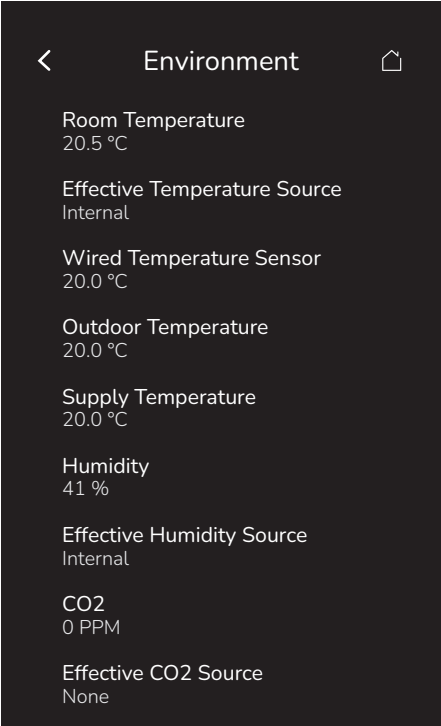


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Room Temperature Read Only AV100	Room Temperature Displays the current room temperature. Display Readings: -40°F to 122°F (-40.0°C to 50.0°C)
Effective Temperature Source Default value: Wired Read Only MSI309	Effective Temperature Sensor Sets the source of the indoor room temperature. This parameter allows the user to designate either the Room Controller or any of the paired wireless devices that support temperature to function as the source for the room temperature. <ul style="list-style-type: none">• Wired: Sets the thermistor connected to U4 (RS) as the source to report room temperature.• Internal: Sets the Room Controller as the source for the room temperature.• Wireless Sensor 1 to 20: Sets the selected Zigbee wireless device as the source for the room temperature. Only one device can be selected. <p>NOTE: The Room Controller uses the internal temperature sensor only if the U4 (RS) terminal is empty. If a valid temperature sensor is connected to the U4 terminal, the Room Controller will use the sensor as the control point. Disconnecting the sensor, or if the sensor is faulty, the Room Controller will automatically revert to its internal temperature sensor.</p> Display Readings: Wired, Internal, Wireless Sensor 1, Wireless Sensor 2, Wireless Sensor 3, Wireless Sensor 4, Wireless Sensor 5, Wireless Sensor 6, Wireless Sensor 7, Wireless Sensor 8, Wireless Sensor 9, Wireless Sensor 10, Wireless Sensor 11, Wireless Sensor 12, Wireless Sensor 13, Wireless Sensor 14, Wireless Sensor 15, Wireless Sensor 16, Wireless Sensor 17, Wireless Sensor 18, Wireless Sensor 19, Wireless Sensor 20
Wired Temperature Sensor Default value: -40.0°F (-40.0°C) Read Only AV105	Wired Temperature Sensor Displays the current room temperature, as recorded by the Wired Temperature Sensor. All wired temperature sensors are 10,000 ohm Type 2 NTC thermistor. Display Readings: -40.0°F to 180.0°F (-40.0°C to 82.0°C)
Outdoor Temperature Default value: -40.0°F (-40.0°C) Read Only AV101	Outdoor Temperature Displays the outdoor temperature on the main screen. All wired temperature sensors are 10,000 ohm Type 2 NTC thermistor. Display Readings: -40.0°F to 180.0°F (-40.0°C to 82.0°C)

Parameter Default Value	Significance and Adjustments
Supply Temperature Default value: -40.0°F (-40.0°C) Read Only AV102	Supply Temperature Displays the supply air temperature, as measured by the sensor. All wired temperature sensors are 10,000 ohm Type 2 NTC thermistor. Display Readings: -40.0°F to 180.0°F (-40.0°C to 82.0°C)
Humidity Read Only AV103	Room Humidity Indicates the current level of humidity inside this room. Display Readings: 0% to 100%
Effective Humidity Source Default value: None Read Only MSI313	Effective Relative Humidity Sensor Indicates the type of relative humidity sensor used with this Room Controller. Display Readings: Wired, Internal, Wireless Sensor 1, Wireless Sensor 2, Wireless Sensor 3, Wireless Sensor 4, Wireless Sensor 5, Wireless Sensor 6, Wireless Sensor 7, Wireless Sensor 8, Wireless Sensor 9, Wireless Sensor 10, Wireless Sensor 11, Wireless Sensor 12, Wireless Sensor 13, Wireless Sensor 14, Wireless Sensor 15, Wireless Sensor 16, Wireless Sensor 17, Wireless Sensor 18, Wireless Sensor 19, Wireless Sensor 20
CO2 Default value: 0 PPM Read Only AV106	CO2 Level Indicates the current level of CO ₂ in parts per million (PPM). Display Readings: 0 PPM to 5000 PPM
Effective CO2 Source Default value: None Read Only MSI324	CO2 Effective Source Indicates the type of CO ₂ sensor used with this Room Controller. Display Readings: None, Internal, Error, Wired, Wireless Sensor 1, Wireless Sensor 2, Wireless Sensor 3, Wireless Sensor 4, Wireless Sensor 5, Wireless Sensor 6, Wireless Sensor 7, Wireless Sensor 8, Wireless Sensor 9, Wireless Sensor 10, Wireless Sensor 11, Wireless Sensor 12, Wireless Sensor 13, Wireless Sensor 14, Wireless Sensor 15, Wireless Sensor 16, Wireless Sensor 17, Wireless Sensor 18, Wireless Sensor 19, Wireless Sensor 20
Door Switch Used Default value: No Read Only BV1	Door Contact Status Used to indicate that a Zigbee or wired door sensor is in use. Display Readings: No, Yes
Window Switch Used Default value: No Read Only BV3	Window Contact Status Used to indicate that a Zigbee or wired window sensor is in use. Display Readings: No, Yes


Operating status

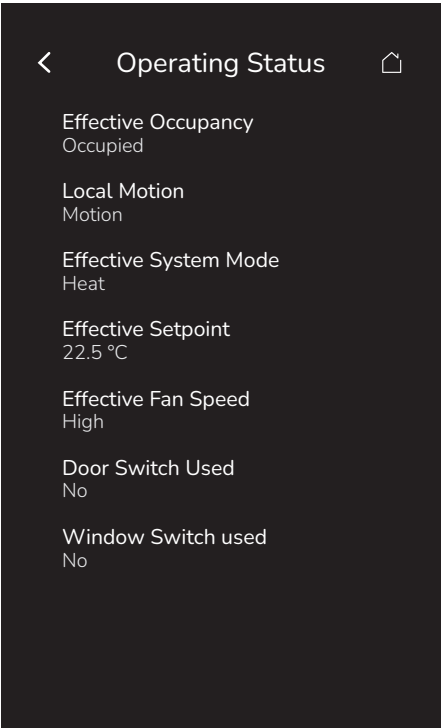

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Effective Occupancy Default value: Occupied Read Only MSI33	Effective Occupancy Displays the occupancy mode currently in operation. Display Readings: Occupied, Unoccupied, Override, Standby
Local Motion Default value: No Motion Read Only BV32	PIR Local Motion Indicates whether the Motion alarm is active or not. Display Readings: No Motion, Motion
Effective System Mode Default value: Cool Read Only MSI314	Effective System Mode Displays the current operating mode of the system. For example, when the system is in Auto mode, this parameter shows whether it is currently heating or cooling. Display Readings: Cool, Heat
Effective Setpoint Default value: 0.0°F (-18.0°C) Read Only AI329	Effective Setpoint Displays the value of the temperature setpoint currently in operation. Display Readings: 40.0°F to 100.0°F (4.5°C to 38.0°C)
Effective Fan Speed Default value: Off Read Only MSI326	Fan Speed Status Displays the fan speed currently in operation. Display Readings: Off, Low, Medium, High
Door Switch Used Default value: No Read Only BV2	Door Contact Installed Used to indicate that a Zigbee or wired door sensor is in use. Display Readings: No, Yes
Window Switch Used Default value: No Read Only BV3	Window Contact Status Used to indicate that a Zigbee or wired window sensor is in use. Display Readings: No, Yes

System Status

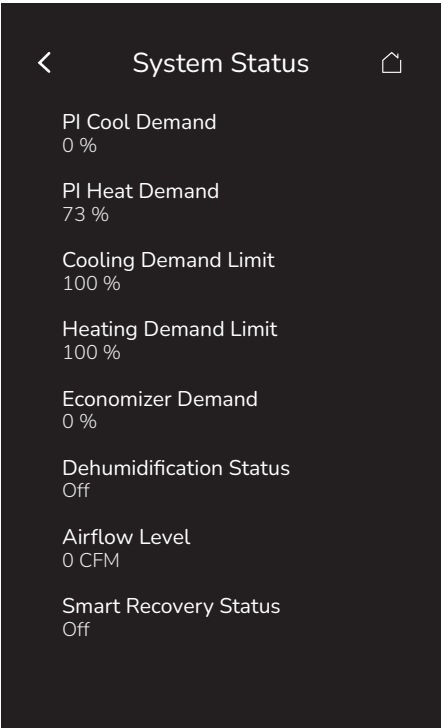


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
PI Cool Demand Default value: 0% Read Only AO22	PI Cooling Demand Displays the percentage of demand for cooling in the zone, using a Proportional-Integral control loop. Display Readings: 0% to 100% (Resolution: 1%)
PI Heat Demand Read Only AO21	PI Heating Demand Displays the percentage of demand for heating in the zone, using a Proportional-Integral control loop. Display Readings: 0% to 100% (Resolution: 1%)
Cooling Demand Limit Default value: 100% Read Only AV89	Cooling Demand Limit Displays the configurable maximum limits for cooling. It is configurable via the BACnet and Modbus interfaces. Display Readings: 0% to 100% (Resolution: 1%)
Heating Demand Limit Default value: 100% Read Only AV88	Heating Demand Limit Displays the configurable maximum limits for heating. It is configurable via the BACnet and Modbus interfaces. Display Readings: 0% to 100% (Resolution: 1%)
Economizer Demand Read Only AO23	Economizer Demand Display Readings: 0-100%
Dehumidification Status Default value: Off Read Only BV38	Dehumidification Status Indicates whether dehumidification is currently active or inactive. Used when Dehumidification is enabled. Display Readings: Off, On

Parameter Default Value	Significance and Adjustments
Airflow Level Default value: 0 CFM Read Only AV107	Airflow Level Displays the amount of air (in cubic feet/minute or liters/second) that flows through a particular device. Display Readings: 0 to 20,000 CFM (0 to 9440 l/s)
Smart Recovery Status Default value: Off Read Only BV40	Smart Recovery Status <ul style="list-style-type: none">• Off: No smart recovery. The occupied schedule time is the time at which the system will restart.• On: Smart recovery active. The occupied schedule time is the time at which the desired occupied temperature will be attained. The Room Controller automatically optimizes the equipment start time. In any case, the latest a system will restart is 10 minutes prior to the occupied period time. <p>Smart recovery is automatically disabled if U1 is configured to remote NSB.</p> Display Readings: Off, On


Setpoints

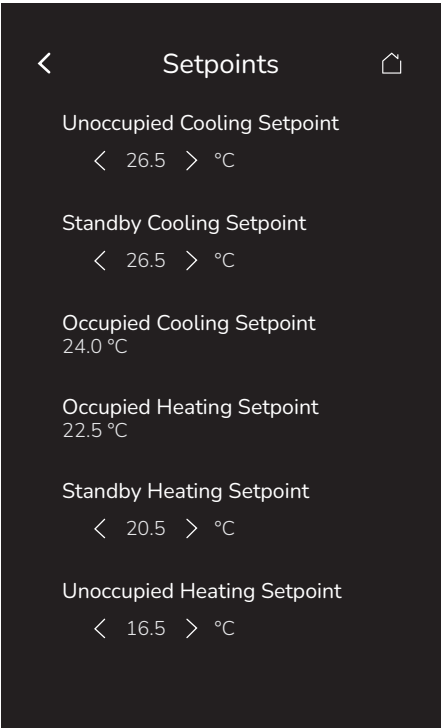

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Unoccupied Cooling Setpoint Default value: 80.0°F (26.5°C) AV44	Unoccupied Cool Setpoint Displays the Cooling Temperature setpoint used when in Unoccupied mode. Range: 54.0°F to 100.0°F (12.0°C to 37.5°C)
Standby Cooling Setpoint Default value: 78.0°F (25.5°C) AV42	Standby Cool Setpoint Displays the Cooling Temperature setpoint used when in Standby mode. Range: 54.0°F to 100.0°F (12.0°C to 37.5°C)
Occupied Cooling Setpoint Default value: 75.0°F (24.0°C) Read Only AV40	Occupied Cool Setpoint Displays the Cooling Temperature setpoint used when in Occupied or Override mode. Display Readings: 54.0°F to 100.0°F (12.0°C to 37.5°C)
Occupied Heating Setpoint Default value: 72.0°F (22.0°C) Read Only AV39	Occupied Heat Setpoint Displays the Heating Temperature setpoint used when in Occupied or Override mode. Display Readings: 40.0°F to 90.0°F (4.5°C to 32.0°C)
Standby Heating Setpoint Default value: 69.0°F (20.5°C) AV41	Standby Heat Setpoint Displays the Heating Temperature setpoint used when in Unoccupied mode. Range: 40.0°F to 90.0°F (4.5°C to 32.0°C)
Unoccupied Heating Setpoint Default value: 62.0°F (16.5°C) AV43	Unoccupied Heat Setpoint Displays the Heating Temperature setpoint used when in Unoccupied mode. Range: 40.0°F to 90.0°F (4.5°C to 32.0°C)
Dehumidification Setpoint Default value: 50% AV71	Dehumidification Setpoint Displays the Dehumidification setpoint used when dehumidification is enabled. Range: 30% to 95%


Terminals

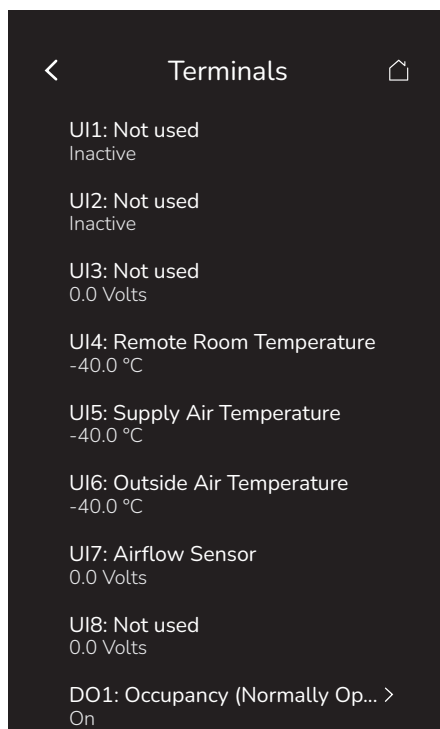

PARAMETER DETAILS

- Terminals will be shown with their usage, based on their configuration.
- Inputs will show the binary state, analog voltage or temperature based on their configuration.
- Outputs can be binary or analog outputs, and can be controlled by clicking on the output to access the corresponding Test Output page.

Digital Output

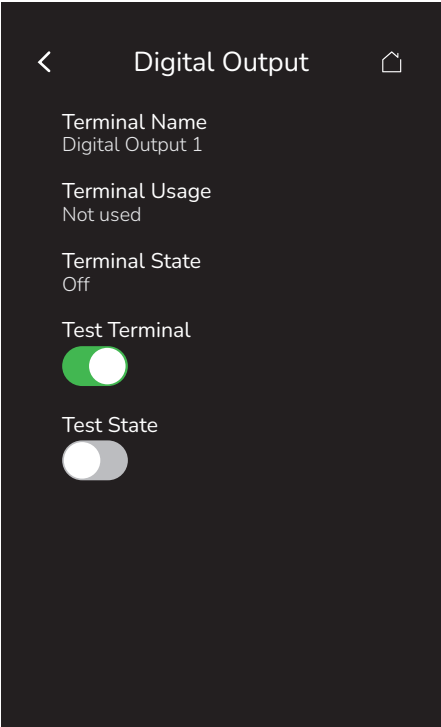


PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
Terminal Name Read Only	Terminal Name Displays the full name of this Digital Output. Display Readings: Active, Inactive
Terminal Usage Read Only	Terminal Usage The Terminal Usage is based on the current configuration of the Room Controller: <ul style="list-style-type: none">Native features include:<ul style="list-style-type: none">DO1Y1 CoolY2 CoolW1 HeatW2 HeatLow Speed FanMedium Speed FanHigh Speed FanSupply Temperature SensorFilter AlarmTerminals under the control of BACnet/Lua can be customized
Terminal State Read Only	Terminal State Displays the status of this Digital Output relay: <ul style="list-style-type: none">On: Relay closedOff: Relay open NOTE: For D6, the relay will be selected by the configured output type. Display Readings: Off, On

Parameter Default Value	Significance and Adjustments
Test Terminal Default value: Disabled	Test Terminal Used to disable/enable the verification of this Digital Output terminal. If enabled, it allows the user to see the Test State feature. NOTES: <ul style="list-style-type: none">• The test must be disabled when the user disables Test Terminal or when the Terminals screen is exited (user exit, timeout).• The test is disabled when the (parent) Terminals screen is exited rather than the individual output page, to allow the test of two terminals in combination. In the case of an ECM fan, for example, it has a Digital Output to enable it, then an Analog Output to control the speed. Choices: Disabled, Enabled
Test State Default value: Disabled	Test State Used to disable/enable the verification of this Digital Output status. Test State is only visible if Test Terminal is set to enabled. Choices: Disabled, Enabled

User Management

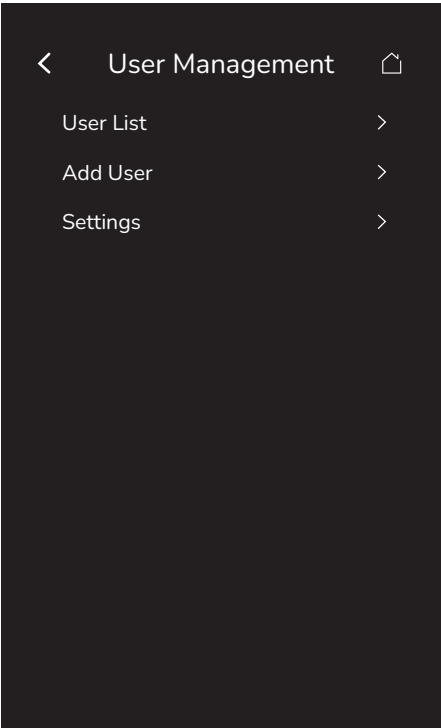

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
User List	Refer to “User List” on page 79 for more information.
Add User	Refer to “Add User” on page 81 for more information.
Settings	Refer to “Settings” on page 82 for more information.


User List



PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
User List	Displays the list of available users on this Room Controller. Tapping on a name will open the User Info screen. Refer to "User Info" on page 80 for more information.

User Info

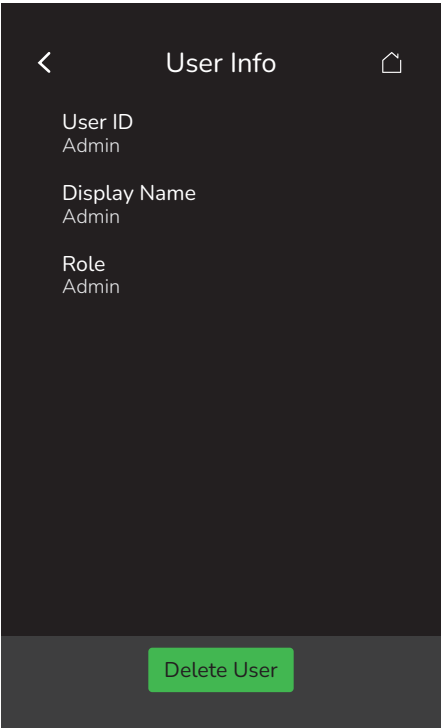

PARAMETER DETAILS

NOTE: The Delete User button is only visible to Admin users.

Parameter Default Value	Significance and Adjustments
User ID Read Only CSV31	Active User Id Displays the user name that is unique on this Room Controller. Display Readings: 3 to 32 characters (a-z, A-Z, 0-9, @_~+=^<>,.1/2:;*`', and spaces)
Display Name Read Only	Display Name Displays the user screen name. Display Readings: 3 to 32 characters (a-z, A-Z, 0-9, @_~+=^<>,.1/2:;*`', and spaces)
Role Read Only	Role <ul style="list-style-type: none">Technician: Access to HVAC and local Room Controller-related configuration, but not to IP, FWU etc.Admin: Full access to all screens and features. Display Readings: Technician, Admin

Add User

<

Add User

User ID

Display Name

Role

Admin

▼

PIN

👁


Confirm PIN

👁

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
User ID CSV31	Active User Id Allows the user to enter a user name that is unique on this Room Controller. Range: 3 to 32 characters (a-z, A-Z, 0-9, @_ -~+=^<> ,.1/2.:,*'`, and spaces)
Display Name	Display Name Allows the user to enter a screen name. Range: 3 to 32 characters (a-z, A-Z, 0-9, @_ -~+=^<> ,.1/2.:,*'`, and spaces)
Role Default value: Technician	Role <ul style="list-style-type: none">Technician: Access to HVAC and local Room Controller-related configuration, but not to IP, FWU etc.Admin: Full access to all screens and features. Choices: Technician, Admin
PIN	PIN Allows the user to create a unique protective access PIN. The PIN can be up to a configurable number of 16 digits (PIN Minimum Length). Refer to "Settings" on page 82 for more information. Range: 0 to 9999 (0-9)
Confirm PIN	Confirm PIN Allows the user to reenter the protective access PIN to confirm and complete the process. The PIN can be up to a configurable number of 16 digits (PIN Minimum Length). Refer to "Settings" on page 82 for more information. Range: 0 to 9999 (0-9)

Settings

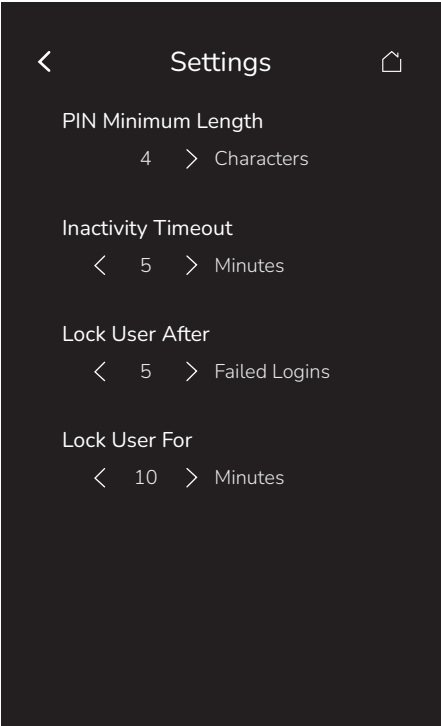

PARAMETER DETAILS

Parameter Default Value	Significance and Adjustments
PIN Minimum Length Default value: 4	PIN Minimum Length Sets the minimum number of characters required for user PINs. Range: 4 to 16 characters
Inactivity Timeout Default value: 5 Minutes	Inactivity Timeout Sets the configurable period of inactivity (no touches of the screen) before the Room Controller automatically signs a user out. Range: 1 to 60 Minutes
Lock User After Default value: 5 Failed Logins	Lock User After Sets the configurable number of consecutive unsuccessful login attempts before the Room Controller: <ul style="list-style-type: none">• Locks the user out for a configurable number of minutes defined in Lock User For.• Notifies the user that they have been locked out and for how long. Range: 1 to 10 Failed Logins
Lock User For Default value: 10 Minutes	Lock User For Sets the configurable number of minutes during which a user is locked out after the number of consecutive unsuccessful login attempts defined in Lock User After. The Room Controller will notify the user when they have been locked out and for how long. Range: 1 to 60 Minutes

SECTION 4

Appendix A: Terminal Correspondence

The terminals of a TRC6500 are identified differently and have a wider range of possible functions compared to those of any of the VT8350 Room Controllers. Nonetheless, there is a direct correspondence of functions between the terminals of the VT8350 and the TRC6500. Consult the table below to verify the appropriate terminal when replacing a VT8350 Room Controller with a TRC6500 Room Controller.

VT8650	VRC6500
Terminal ID	Terminal ID
BO1	D1
Y2	D2
Y1	D3
G	D4
RC	RC
C	C
RH	RH
W1	D5
W2-O/B	A1/D6
Economizer	A2/D7
Auxiliary Heat	A3/D8
Dehumidifier	A4/D9
RS485 +	RS485 +
RS485 -	RS485 -
RS485 REF	RS485 REF
UI16	U1
UI17	U2
COM	COM
UI19	U3
UI20 (RS)	U4
COM	COM
UI22 (SAT)	U5
UI23 (OAT)	U6
UI24	U7
--	U8

Appendix B: Cybersecurity Checklist

Physical Security

Security Screw

☐

It is important to install the security screw on the bottom of the unit.

If this screw is not installed:

- The device could be stolen.
- An attacker could potentially access the RS-485 communication bus and perform unauthorized actions on the communication network.
- The device could be factory reset by an unauthorized person.

RS-485 Wiring (BACnet/MSTP and Modbus RTU)

☐

BACnet/MSTP and Modbus RTU networks rely on the physical security of RS-485 wiring. It must therefore be installed behind physical barriers, so it is only accessible to authorized personnel.

An attacker with access to the RS-485 communication bus could potentially perform unauthorized actions on the communication network.

RS-485 wiring is present on the base board, so access must be limited to authorized personnel only. Install the security screw, as described in the previous section.

NOTICE

ACCESS TO RS-485 WIRING

Access to the RS-485 wiring of the BACnet/MSTP or Modbus/RTU network gives access to configure, upgrade, read logs or write files to the Touchscreen Room Controller. This must be restricted to authorized personnel only.

Failure to follow these instructions may lead to unauthorized users modifying the firmware or the configuration of the Room Controller.

Communication Networks

Disabled Unused Communication Networks

☐

BACnet/MSTP and Modbus/RTU are disabled by default and should be left disabled on the Viconics Room Controller if they are not used.

BACnet and Modbus can be disabled in the Network menu for the Viconics Room Controller.

NOTICE

NOT A SECURITY SYSTEM

While the Viconics Room Controller supports various sensors (PIR Motion, Door/Window, Water Leak), any alarming or notifications are best effort only. The Viconics Room Controller is NOT a security system, and no guarantees are given that an alarm will be generated or delivered to the Building Management System (BMS) or higher-level systems.

Failure to follow these instructions may lead to system failure.

Wi-Fi

Networks

- IP networks should be carefully planned and managed to minimize risks:
 - Reference: [Guidance on Implementing a Cybersecure BMS Architecture with EcoStruxure Building Operation](#).
 - Use VLANs and firewalls to separate networks.
 - Separate building control networks from networks or devices that:
 - Are critical systems.
 - Contain payment or private data.
 - Are publicly accessible (e.g., to guests or staff).
 - Limit or disable external access to building control networks.

Viconics Room Controller

- Recommendations:
 - Wi-Fi is disabled by default and should only be enabled when required.
 - Regularly update your TRC firmware to ensure the latest Wi-Fi security enhancements are in use.
 - TRC supports the following security protocols:
 - WPA2-personal
 - WPA3-personal (Recommended).
 - TRC does not support connecting to Wi-Fi networks using the following insecure security protocols:
 - No security
 - WEP
 - WPA
 - When a TRC is removed from a Wi-Fi network, ensure all security material is removed by performing:
 - "Disconnect and forget" from the Wi-Fi menu, or
 - Factory reset:
 - Full factory reset via reset pin, or
 - Software factory reset via Device info menu, with 'Network' selected.
 - Wi-Fi can be disabled and re-enabled in the Network menu. Disabling Wi-Fi does not remove network information from the TRC.
 - All wireless networks are vulnerable to interference and jamming, which can block or disrupt communication. Carefully consider if wireless communications are appropriate for your application.

BACnet/IP

- BACnet/IP relies on security of the IP network:
 - The device is intended to operate on a private IP network, without external connectivity, or protected by security aware device(s).
 - Use VLANs and firewalls to separate the BACnet/Ip network.
 - Prevent access to the network by authorized people and devices by physically protecting IP cabling and managing wireless network access.
 - Monitor your network to check for unexpected devices or traffic.
 - Do not enable BACnet/Ip on a public network.

NOTICE

UNAUTHORIZED ACCESS

It is very important to plan and manage the BACnet/IP network according to the above guidelines.

Failure to follow these instructions may lead to unintended access to the Room Controller.

Ping

- Ping is a useful debugging tool for IP devices, but it can also be used by attackers to perform DDoS attacks to overwhelm a device and attempt to disable it.

To prevent or reduce ping attacks, it is recommended to:

- Use a firewall to shield your network from malicious or unnecessary network traffic.
- Block ICMP ping in your firewalls. This prevents pings from external devices entering your network.
- Add filters to your firewall or router to drop packets from unknown sources.
- Use network monitoring software to detect unusual traffic patterns on your network.

Zigbee

- ☐ ZigBee is disabled by default and should only be enabled when required.

ZigBee sensors that are no longer used should be removed from the TRC.

ZigBee networks configured for “normal” security are vulnerable to sniffing attacks while Permit Join is active. Ensure Permit Join is only activated when necessary, then deactivate immediately afterwards.

All wireless networks are vulnerable to interference and jamming, which can block or disrupt communication. Carefully consider if wireless communications are appropriate for your application.

User Management

Best Practices

- ☐ Accounts should not be shared between users. Unique accounts should be created for each user.
- ☐ When a user is no longer needed (e.g., employee leaves), their account should be removed.
- ☐ User accounts should be created with roles allowing the least privileges required to perform their tasks.

Roles	Administrator	Technician
Factory Reset via Menu	✓	✗
General HVAC/device configuration	✓	✓
Lua – Enable remote device access	✓	✗
Manage users	✓	✗
Test terminals	✓	✓
USB access	✓	✗
View status/service information	✓	✓

- ☐ Passwords should not be obvious or repeated on many devices.
- ☐ Do not use 1234, or the street number of the site.
- ☐ Segment devices by area, do not use the same passwords on all devices.
- ☐ Wipe screen after use to avoid fingerprints from password entry remaining on the screen.
- ☐ Consider regional privacy requirements when creating user and display names, as user names will appear in event logs.
- ☐ Ensure user names are unique to help ensure clear traceability. For example, avoid creating both “User1” and “User 1”.
- ☐ Regularly delete the account or downgrade the role of users who no longer need access to the device.
- ☐ Update passwords regularly.

Other Scenarios

- ☐ If shared accounts are used (e.g., for a maintenance team in a large hotel), shared accounts should not have Admin privileges.

Impacts of Shared/Common Passwords

- ☐ Shared accounts make it unclear who accessed the devices; if someone acts in bad faith, it is not possible to detect who it was.
- ☐ It is difficult to track who knows the common password, and hence when it should be changed.
- ☐ If the password is disclosed externally, all users of the shared account will be affected by the required password change.

Store Administrator Passwords Securely

- ☐ If all administrator passwords are lost, then the device must be factory reset manually by holding the reset button while powering on the device.

For more information, refer to the [Viconics Room Controller Installation Sheet](#).

Log Files

The Viconics Room Controller contains two log files:

- System Log: Status of the system, including any errors.
- Audit Log: Record of changes made to the system, and by whom.

If unexpected issues occur, log files should be reviewed to determine the cause.

NOTICE
<p>CONFIDENTIAL DATA IN LOG FILES</p> <p>Log files may contain private or confidential data:</p> <ul style="list-style-type: none">• Encrypt log files before transmitting them.• Ensure log files are removed when decommissioning devices. <p>Failure to follow these instructions may lead to the unauthorized sharing of private or confidential information.</p>

Firmware Updates

NOTICE
<p>UNAUTHORIZED ACCESS</p> <p>The Viconics Room Controller firmware should be updated regularly to ensure the latest security improvements are applied.</p> <p>Failure to follow these instructions may result in unauthorized access to the device.</p>

Lua

NOTICE
<p>UNAUTHORIZED ACCESS</p> <p>Lua scripts allow customization of the device behavior, but come with risks:</p> <ul style="list-style-type: none">• Only use scripts that are required for your device or site.• Only use scripts that you understand or are from a trusted source.• Remove scripts that are no longer required.• Check scripts contain only the code you need and meet the recommendations of the Lua4RC Programming Guide.• Carefully review and test scripts before deploying to sites. <p>Lua scripts can read and write data points on remote BACnet devices:</p> <ul style="list-style-type: none">• Interacting with remote devices increases the scope of the Lua script and hence the risk of unintended behavior.• Lua access to remote devices is disabled by default. If required, Remote Device Access must be enabled by an Admin in the Lua/Status menu.• Lua access to remote devices should only be enabled if required. <p>Excessive writing of non-volatile priority levels may wear out the device's EEPROM memory. Refer to the Lua4RC Programming Guide for more information.</p> <p>Failure to follow these instructions may result in poorly-written or malicious Lua scripts, which may damage the device or result in unintended behavior.</p>

Decommissioning

To decommission a device:

1. Factory reset:
 - Launch a factory reset to remove all data:
 - a. Log in as an administrator.
 - b. Tap on Device Info, then Factory Reset, ensuring all categories are selected.
 - Or perform a physical factory reset by holding the reset button while powering on the device. For more information, refer to the [Viconics Room Controller Installation Sheet](#).
2. Refer to the End-of-Life Instruction (EoLi) document for information on how to recycle or dispose of the product.

NOTICE

DECOMMISSIONING A DEVICE

It is important to decommission a device properly to ensure that no confidential data is left on it.


Failure to follow these instructions may lead to the unauthorized sharing of private or confidential information.

Reporting an Incident or Vulnerability

Please report any cybersecurity incident or vulnerability via the Cybersecurity Support Portal on www.viconics.com.

The Schneider Electric Security Operations Center (SOC) operates 24 hours a day, 7 days a week, year-round, and is staffed with security analysts who receive and triage your reports.

Appendix C: Standby Screen

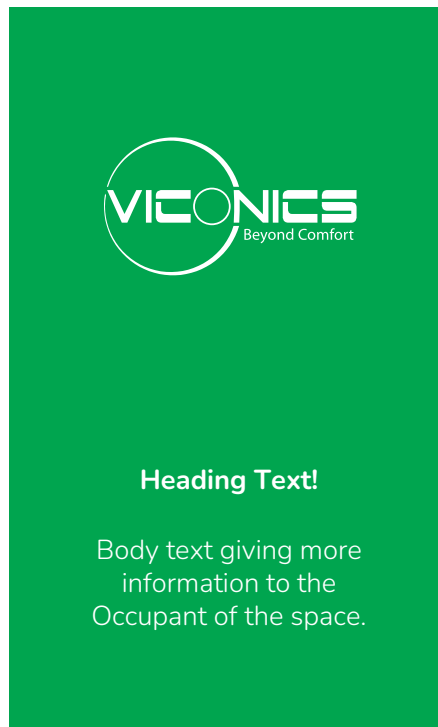

The Room Controller supports the display of a standby screen with a full screen image supplied by the user, which can be loaded via: USB or BACnet.

The Standby Screen is enabled when a custom image is selected via the Preferences/Display menu, or on BACnet.

- BACnet ID = MV32

Size and format:


- Resolution: 480 x 800 pixels
- Formats:
 - 24 bit-per-pixel bitmap
 - Jpg

NOTE: JPG support would be nice to have if possible, but is not mandatory.

The text overlay has 3 properties:

- Heading Text
 - Maximum length: 64 characters
 - Value: Input Characters: English
 - Displayed if string is not empty
 - BACnet ID = CSV41
- Body Text
 - Maximum length: 160 characters
 - Value: Input Characters: English
 - Displayed if string is not empty
 - BACnet ID = CSV42
- Text Color
 - White (Default)
 - Black
 - BACnet ID = MV190

Appendix D: Notifications

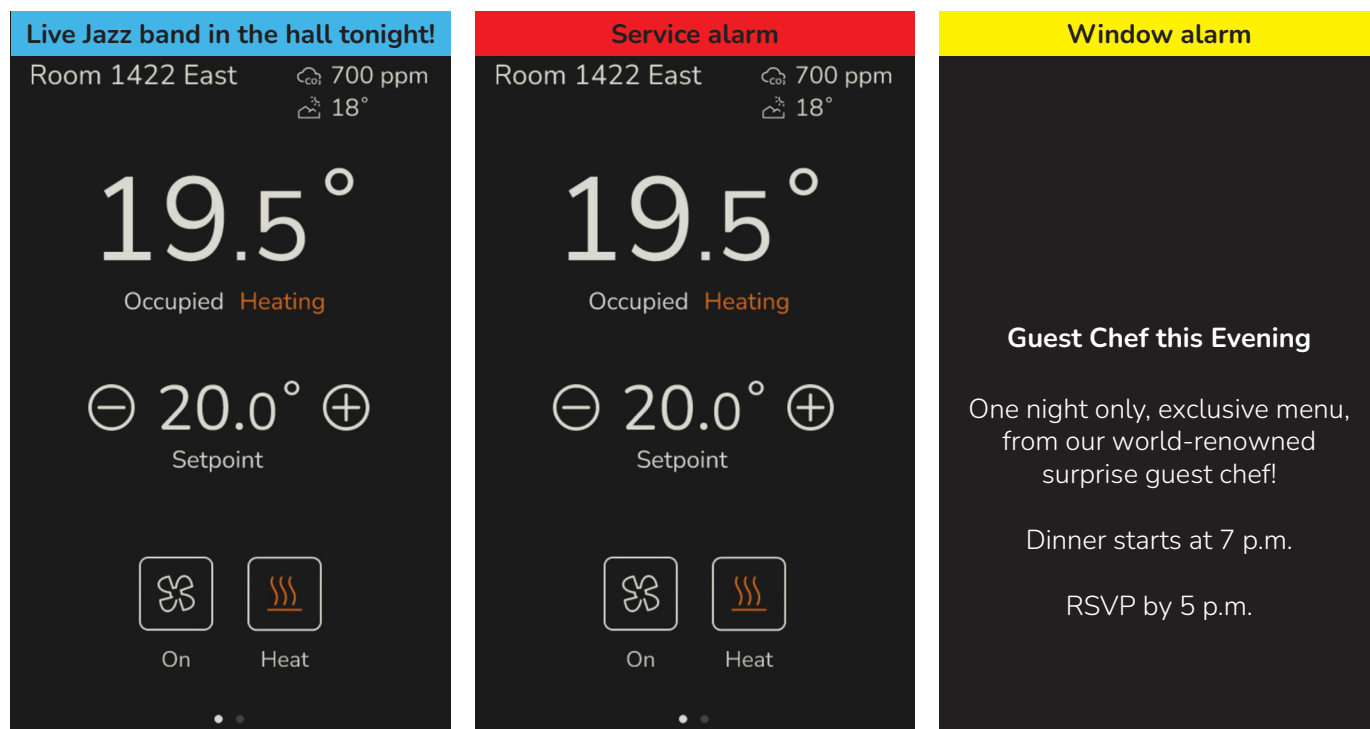

The Room Controller supports the option of displaying notifications on the screen.

Configuration: BACnet ID = MV187

- All (default): Custom and built-in notifications are displayed.
- Custom Only:
 - Custom notifications are displayed.
 - Built-in notifications are not displayed.
- Disabled: No notifications are displayed.

4 types:

- Red (Critical)
- Yellow (Warning)
- Green (Ok)
- Blue (Informative)

Custom notifications:

- Type
 - BACnet ID = MV186
- Text
 - BACnet ID = CSV1
- Settable via BACnet only

