



PIR Ready VT7300 Series 24 VAC Low Voltage Fan Coil Terminal Equipment Terminal Equipment Controller

Installation Guide

For Commercial and Lodging HVAC
Fan Coil Applications

September 2019 / 028-0183-09

CONTENTS

| | |
|--|----|
| Safety Information | 2 |
| Before You Begin | 3 |
| Installation | 5 |
| Configurable BI/UI Inputs Overview | 6 |
| Model Chart | 8 |
| Terminal, Identification and Function | 9 |
| User Interface | 17 |
| Installer Configuration Parameter Menu | 20 |
| Specifications | 34 |
| Drawing & Dimensions | 35 |

NOTICE

IMPORTANT NOTICE RELATED TO PRODUCT PART NUMBERS

For the latest model and part numbers, please refer to "VT8000 and VT7000 Series Room Controllers Catalog, version 10" (028-6100-08), which can be found on <http://www.viconics.com/>.

This document contains information on active and retired products. The latter are no longer sold by Viconics Technologies or its partners.

For additional information on 7000 Series Room Controllers and a list of replacement part numbers, please visit <http://www.viconics.com/>.

Failure to follow these instructions can result in confusion or order delays.



SAFETY INFORMATION

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in death** or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in death** or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury**

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

BEFORE YOU BEGIN

Loss of Control

WARNING

LOSS OF CONTROL

- Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and over travel stop.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of anticipated transmission delays or failures of the link.¹
- Each implementation of equipment utilizing communication links must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

California Proposition 65

WARNING

CALIFORNIA PROPOSITION 65

This product can expose you to chemicals including Lead and Bisphenol A (BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Failure to follow these instructions can result in birth defects or other reproductive harm.

Electrostatic Discharge

NOTICE

STATIC SENSITIVE COMPONENTS

Circuit boards and option cards can be damaged by static electricity. Observe the electrostatic precautions below when handling controller circuit boards or testing components.

Failure to follow these instructions can result in equipment damage.

Observe the following precautions for handling static-sensitive components:

- Keep static-producing material such as plastic, upholstery, and carpeting out of the immediate work area.
- Store static-sensitive components in protective packaging when they are not installed in the drive.
- When handling a static-sensitive component, wear a conductive wrist strap connected to the component or drive through a minimum of 1 megohm resistance.
- Avoid touching exposed conductors and components leads with skin or clothing.

¹ For additional information about anticipated transmission delays or failures of the link, refer to NEMA ICS 1.1 (latest edition), *Safety Guidelines for the Application, Installation and Maintenance of Solid State Control* or its equivalent.

Installation

NOTICE

INSTALLATION

- The system must be installed correctly by a qualified technician.
- If replacing an existing Room Controller, label wires before removal of Controller.
- Electronic controls are static sensitive devices. Discharge yourself correctly before manipulating and installing Room Controller.
- A short circuit or wrong wiring may permanently damage Room Controller or equipment.
- All Room Controllers are designed for use as operating controls only and are not safety devices. These instruments have undergone rigorous tests and verification prior to shipping to ensure proper and reliable operation in the field. Whenever a control failure could lead to personal injury and/or loss of property, it becomes the responsibility of the user/installer/electrical system designer to incorporate safety devices (such as relays, flow switch, thermal protections, etc.) and/or an alarm system to protect the entire system against such catastrophic failures. Tampering with the devices or unintended application of the devices will result in a void of warranty.
- This device must be installed to provide a separation distance of at least 8in (20cm) from all persons and must not be located or operating in conjunction with any other antenna or transmitter.
- Refer to the Room Controller User Interface Guide for information on how to configure the Room Controller.

Failure to follow these instructions can result in equipment damage.

Location

NOTICE

LOCATION

- Do not install on an exterior wall.
- Do not install behind a door.
- Do not install in areas with direct heat source.
- Do not install near any air discharge grill.
- Do not install in areas exposed to direct sunlight.
- Ensure Room Controller has sufficient natural air circulation.
- Ensure wall surface is flat and clean.
- Ensure external thermal sensor wirings are away from noisy electrical sources.
- Install 1.3 to 1.5 meter (52 to 60 inches) above the floor.
- Perform preventive maintenance on the damper and Variable Air Volume (VAV) box, according to the supplier documentation.

Failure to follow these instructions can result in equipment damage.

Cleaning the Room Controller

NOTICE

CLEANING THE ROOM CONTROLLER

- Use a soft, pre-moistened lint-free cloth for cleaning.
- Avoid getting moisture in openings.
- Do not spray anything directly on the Room Controller or use compressed air.
- Do not use caustic/corrosive products, ammonia, solvents or any cleaning product containing alcohol or grit.
- Never use tools directly on the touchscreen.
- Never use paint on the Room Controller.
- Do not drop or crush the Room Controller, or allow it to come into contact with liquids.
- Do not use a damaged device (such as one with a cracked screen).

Failure to comply with these recommendations will result in damage to the unit and void the manufacturer's warranty.

INSTALLATION

Remove the security screw on the bottom of the Fan Coil Terminal Equipment Controller cover.

- Open unit by pulling on the bottom side of Fan Coil Terminal Equipment Controller (Fig. 1).
- Remove wiring terminals from sticker.
- Please read the FCC ID and IC label installed in the cover upon removal of cover for the wireless products.

Location

1. Should not be installed on an outside wall.
2. Must be installed away from any direct heat source.
3. Should not be installed near an air discharge grill.
4. Should not be affected by direct sun radiation.
5. Nothing should restrict vertical air circulation to the Fan Coil Terminal Equipment Controller.

Installation

1. Swing open the Fan Coil Terminal Equipment Controller PCB to the left by pressing the PCB locking tabs (Fig. 2).
2. Pull out cables 6" out from the wall.
3. Wall surface must be flat and clean.
4. Insert cable in the central hole of the base.
5. Align the base and mark the location of the two mounting holes on the wall. Install proper side of base up.
6. Install anchors in the wall.
7. Insert screws in mounting holes on each side of the base (Fig. 2).
8. Gently swing back the circuit board on the base and push on it until the tabs lock it.
9. Strip each wire 1/4 inch from end.
10. Insert each wire according to wiring diagram.
11. Gently push excess wiring back into hole (Fig. 3).

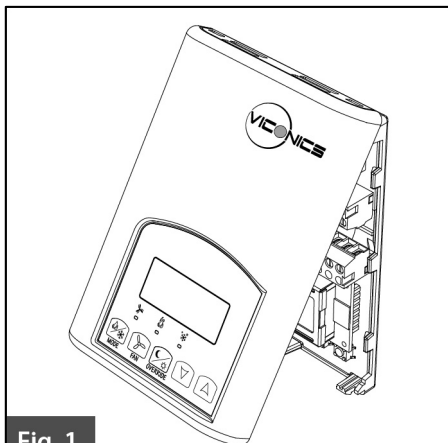


Fig. 1

Location of PCB retaining tabs

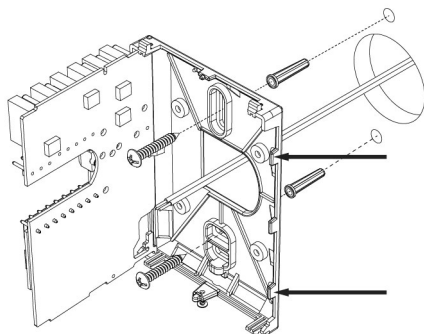


Fig. 2

Re-install terminal blocks

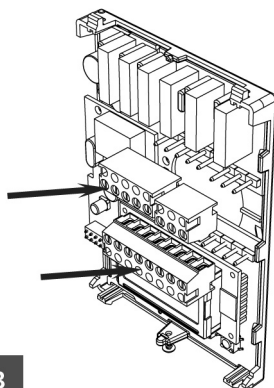


Fig. 3

12. Re-Install wiring terminals in their correct locations (Fig. 3).
13. Re-install the cover (top side first) and gently push extra wire length back into the hole in the wall.
14. Install security screw.



- Anti-short cycling can be set to 0 minutes for equipment that possesses their own anti cycling timer. Do not use that value unless the equipment is equipped with such internal timer. Failure to do so can damage the equipment.

CONFIGURABLE BI/UI INPUTS OVERVIEW

Binary input #1 can be configured for the following functions:

1. **(None):** No function will be associated with the input
2. **(Rem NSB):** remote NSB timer clock input. The scheduling will now be set as per the binary input. It provides low cost setback operation via a dry contact
Contact opened = Occupied
Contact closed = Unoccupied
3. **(Motion NO) and (Motion NC):** Advanced PIR occupancy functions using a normally open (NO) or normally closed (NC) remote PIR motion sensor. Occupancy mode is now set as per applied PIR function and configuration. Application information and examples are available on document: *APP-PIR-Guide-Exx*. This document will provide the installers and system designers with detailed examples on applications, parameter configuration information, sequence of operation, troubleshooting and diagnostic help required for the proper usage of the PIR accessory covers
4. **(Window) EMS:** Forces the system to disable any current heating or cooling action by the Terminal Equipment Controller. The mode stays the same and the current setpoints are the same occupied setpoints. Only the outputs are disabled. There is a Door/Window alarm displayed on the Terminal Equipment Controller to indicate to the local tenant that the door/window needs to be closed for cooling or heating to resume. Use NC contact.
Contact opened = System disabled with local Window alarm
Contact closed = System enabled

Binary input #2 can be configured for the following functions:

1. **(None):** No function will be associated with the input
2. **(Door Dry) Door contact & Motion detector:** This configuration is only functional if binary input #1 is set to **Motion NO** or **Motion NC** or a **PIR accessory cover** is used. With this sequence enabled, the occupancy is now dictated through those 2 inputs. Any motion detected will set the zone to occupied status. The zone will remain permanently in occupied mode until the door contact switch opens momentarily. The Terminal Equipment Controller will then go in stand-by mode. If more movements are detected, the occupied mode will resume. While the door is opened, any movements detected by the remote PIR sensor or the PIR accessory cover will be ignored. Use a Normally Closed contact switching device.
Contact opened = Door opened
Contact closed = Door closed

3. **(RemOVR):** temporary occupancy remote override contact. This function disables the central button override function on the Terminal Equipment Controller. The override function is now controlled by a manual remote momentarily closed contact. When configured in this mode, the input operates in a toggle mode. It is now possible to toggle between unoccupied & occupied setpoints for the amount of time set by parameter (TOccTime) temporary occupancy time.
4. **(Filter):** a backlit flashing Filter alarm will be displayed on the Terminal Equipment Controller LCD screen when the input is energized. It can be tied to a differential pressure switch that monitor filters
 Contact opened = No alarm
 Contact closed = Alarm displayed
5. **(Service):** a backlit flashing Service alarm will be displayed on the Terminal Equipment Controller LCD screen when the input is energized. It can be tied in to the AC unit control card, which provides an alarm in case of malfunction.
 Contact opened = No alarm
 Contact closed = Alarm displayed

Universal input #3 can be configured for the following functions:

1. **(None):** No function will be associated with the input
2. **(COC/NH) Change over dry contact. Normally Heat:** Used for hot / cold air / water change over switching in 2 pipe systems.
 Contact closed = Cold air / water present
 Contact opened = Hot air / water present
Only used and valid if system is setup as 2.0. Parameter (Out1Conf) set as 2.0.
3. **(COC/NC) Change over dry contact. Normally Cool:** Used for hot / cold air / water change over switching in 2 pipe systems.
 Contact closed = Hot air / water present
 Contact opened = Cold air / water present
Only used and valid if system is setup as 2.0. Parameter (Out1Conf) set as 2.0.
4. **(COS) Change over analog sensor:** Used for hot / cold air / water change over switching in 2 pipe systems.
Only used and valid if system is setup as 2.0. Parameter (Out1Conf) set as 2.0.
 If temperature is > 77 °F = Hot air / water present
 If temperature is < 75 °F = Cold air / water present
5. **(SS) Supply air sensor monitoring:** Used for supply air temperature monitoring.
 Only used for network reporting of the supply air temperature. Has no internal function in the Terminal Equipment Controller.

MODEL CHART

Product Matrix Selector For The VT7300 Series FCU Controllers

Please refer to the following matrix when ordering controllers:

| VT73 5 5 C 5500E | | | | | |
|------------------|--|---|--|---|------------------------------------|
| Step 1 MODEL | Step 2 HUMIDITY SENSOR AND CONTROL | Step 3 CENTER KEY FUNCTION | Step 4 COMPATIBILITY | Step 5 PIR OPTIONS | Step 6 COMMUNICATION OPTIONS |
| | 0 No humidity sensor | 0 Override, for commercial applications | C Floating or on-off digital control outputs | 50 PIR ready but PIR cover not included | B BACnet MS/TP |
| | 5 Internal humidity sensor | 5 °C/°F, for hotels/ lodging applications | F Analog 0-10 VDC control outputs | 55 Factory assembled with PIR cover | E Echelon |
| | | | | | W Zigbee wireless |
| | | | | | NONE Network Ready |

EXAMPLE:

| VT735 5 C 5000B | | | | | |
|-----------------|--|--|--|--|----------------------------------|
| | | | | | BACnet MS/TP communicating |
| | | | | | Factory installed PIR cover |
| | | | | | Floating outputs |
| | | | | | For hotels/ lodging applications |
| | | | | | Internal humidity sensor |

Network ready

- All Viconics VT7300 series Terminal Equipment Controllers are designed for stand-alone (Network Ready) operation.
- They can be fully integrated into your choice of automation systems using the available communication adapter options.
- If required, stand-alone (Network Ready) Terminal Equipment Controllers can be field retrofitted with the following communication adapters:
 - VCM7000V5000W, Terminal Equipment Controller wireless communication adapter
 - VCM7300V5000B, Terminal Equipment Controller BACnet™ MS-TP communication adapter
 - VCM7300V5000E, Terminal Equipment Controller Lontalk™ communication adapter

TERMINAL, IDENTIFICATION AND FUNCTION


Terminal identification

| Viconics Part Numbers | VT73xxC5x00(x) | Viconics Number | VT73xxF5x00(x) |
|---------------------------|--|---------------------------|-------------------|
| Description / Application | 2 & 4 Pipe Floating 2 & 4 Pipe On/Off | Description / Application | 2 & 4 Pipe Analog |
| Internal Temperature | X | Internal Temperature | X |
| Internal Humidity | Model Dependent | Internal Humidity | Model Dependent |
| 1- High Fan Speed | Fan-H | 1- High Fan Speed | Fan-H |
| 2- Medium Fan Speed | Fan-M | 2- Medium Fan Speed | Fan-M |
| 3- Low Fan Speed | Fan-L | 3- Low Fan Speed | Fan-L |
| 4- 24 V~ Hot | 24 V~ Hot | 4- 24 V~ Hot | 24 V~ Hot |
| 5- 24 V~ Com | 24 V~ Com | 5- 24 V~ Com | 24 V~ Com |
| 6- Aux BO 5 | BO 5-Aux | 6- Aux BO 5 | BO 5-Aux |
| 7- Aux BO 5 | BO 5-Aux | 7- Aux BO 5 | BO 5-Aux |
| 8- BO 3 Open Heat | BO 3 | | |
| 9- BO 4 Close Heat | BO 4 | 9- AO 2 Heat | AO 2 |
| 10- BO 1 Open Cool | BO 1 | 10- AO 1 Cool | AO 1 |
| 11- BO 2 Close Cool | BO 2 | Not used Blank | Blank |
| 12- BI #1 | BI 1 | 12- BI #1 | BI 1 |
| 13- RS | RS | 13- RS | RS |
| 14- Scom | Scom | 14- Scom | Scom |
| 15- BI #2 | BI 2 | 15- BI #2 | BI 2 |
| 16- UI #3 COS / COC /SS | UI 3 | 16- UI #3 COS / COC /SS | UI 3 |

Wiring


Power & Fan (All models)

24 V~ transformer relay pack
3 speed 2 speed Single speed

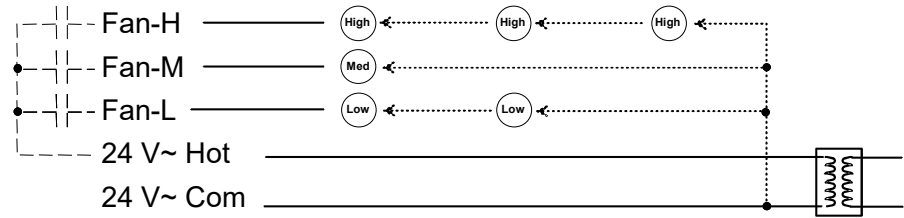


Auxiliary output (All models)


- Dry contact to end device 24 V~ maximum

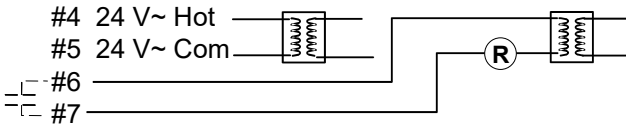

- 24 VAC power to relay

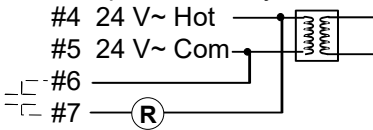


Remote inputs (All models)

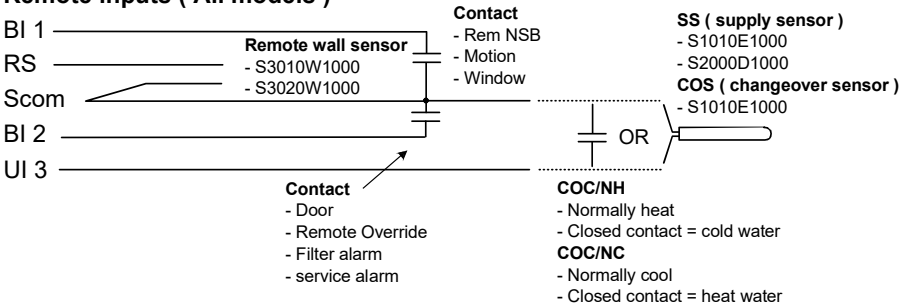


Note:


If one or multiple sensor(s) is/are connected into the RS terminal, the internal temperature sensor is automatically disabled. Disconnecting the sensor(s) in RS terminal will re-activate the internal sensor.

Main outputs wiring


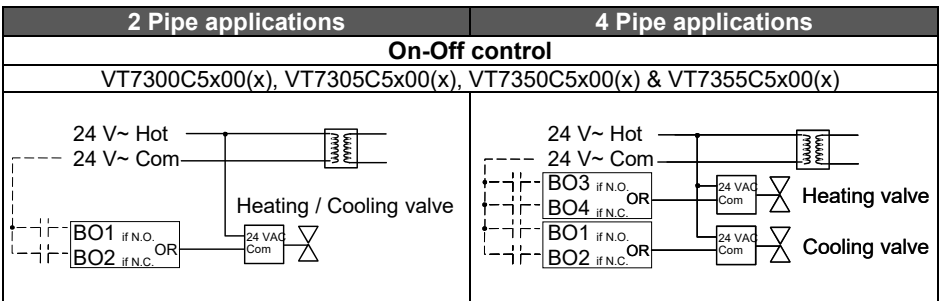


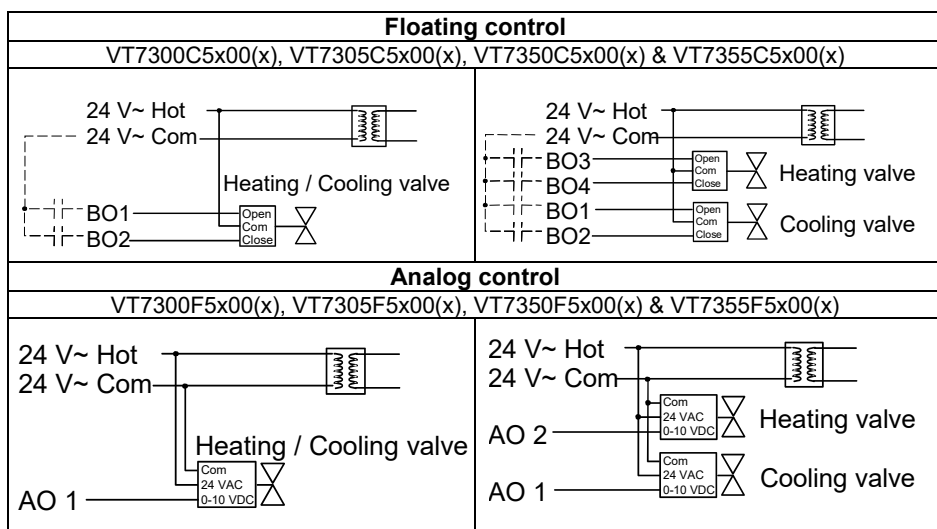

Typical applications

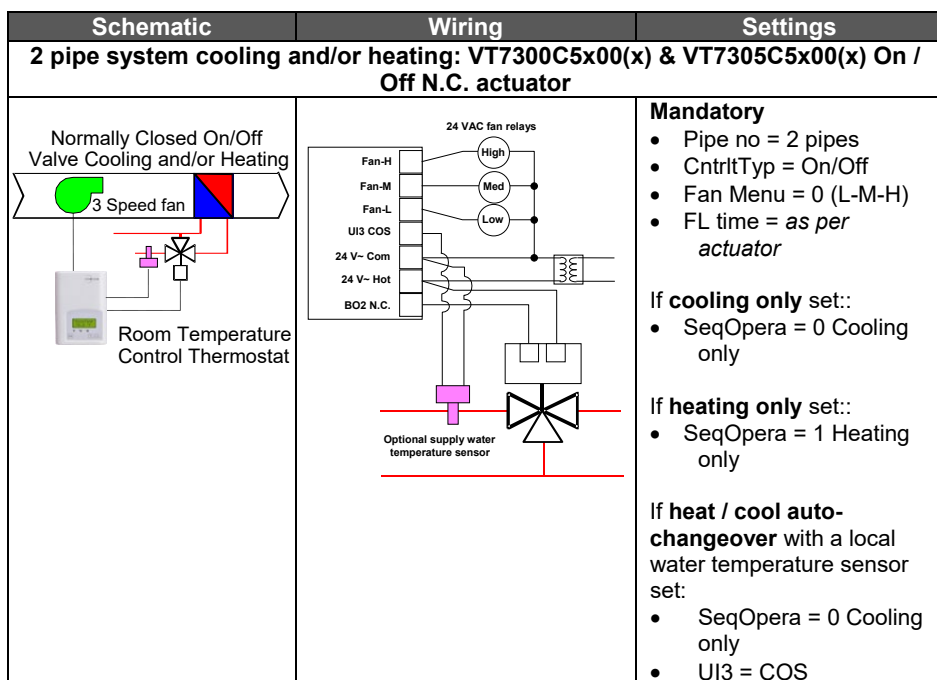

2 pipe system cooling and/or heating: VT7300C5x00(x) & VT7305C5x00(x) Floating actuator

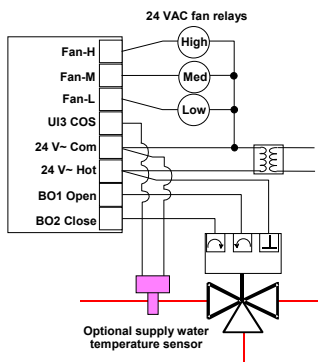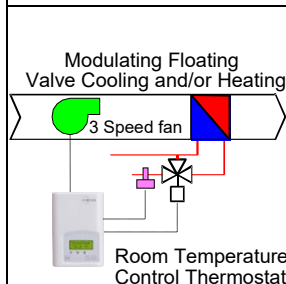

Mandatory

- Pipe no = 2 pipes
- CntrlTyp = Floating
- Fan Menu = 0 (L-M-H)
- FL time = *as per actuator*

If cooling only set::

- SeqOpera = 0 Cooling only



If heating only set::

- SeqOpera = 1 Heating only

If heat / cool auto-changeover with a local water temperature sensor set:

- SeqOpera = 0 Cooling only
- UI3 = COS

2 pipe system cooling and/or heating: VT7300F5x00(x) & VT7305F5x00(x) Analog actuator

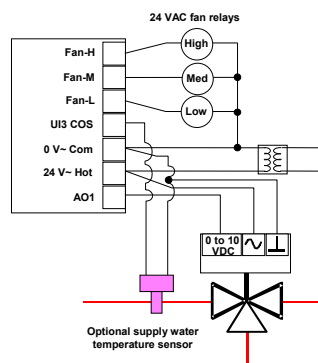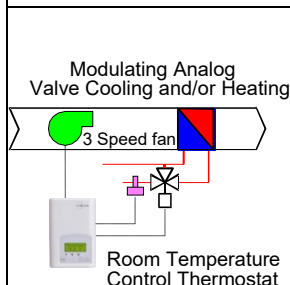

Mandatory

- Pipe no = 2 pipes
- Fan Menu = 0 (L-M-H)
- RA/DA = *as per actuator*

If cooling only set::

- SeqOpera = 0 Cooling only


If heating only set::

- SeqOpera = 1 Heating only


If heat / cool auto-changeover with a local water temperature sensor set:

- SeqOpera = 0 Cooling only
- UI3 = COS


4 pipe system cooling and heating: VT7300C5x00(x) & VT7305C5x00(x) On / Off N.C. actuators

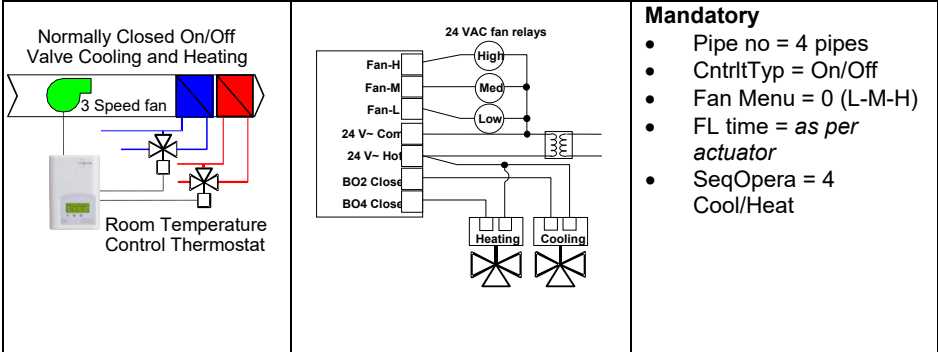



4 pipe system cooling and heating: VT7300C5x00(x) & VT7305C5x00(x) Floating actuators

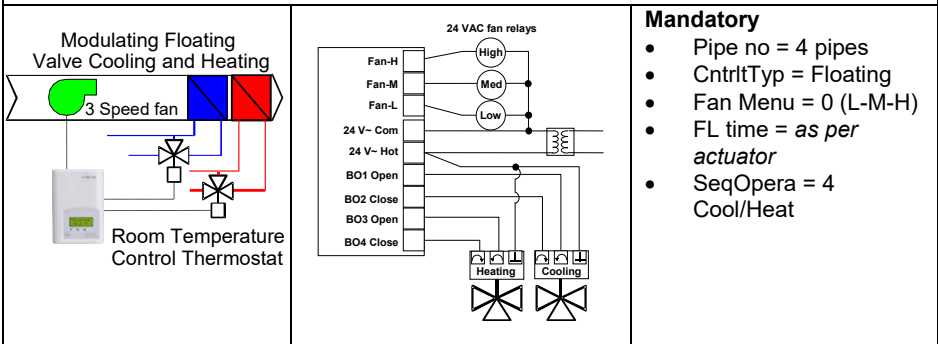

4 pipe system cooling and heating: VT7300F5x00(x) & VT7305F5x00(x) Analog actuators

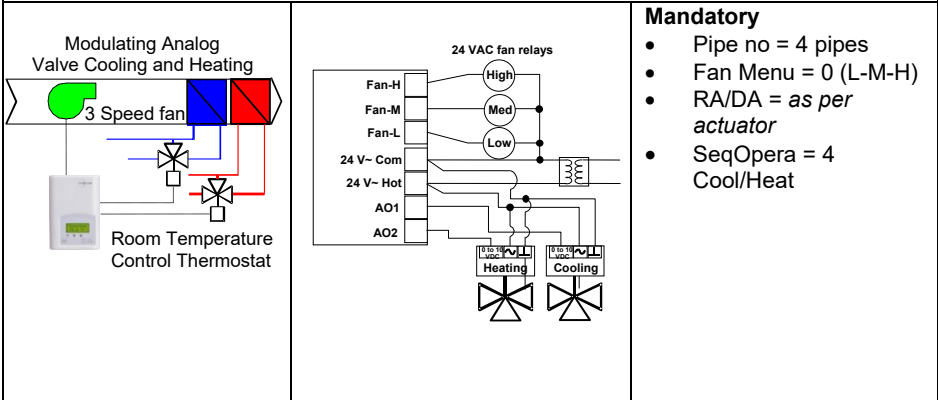

2 pipe system cooling or heating with reheat: VT7300C5x00(x) & VT7305C5x00(x) Floating actuator

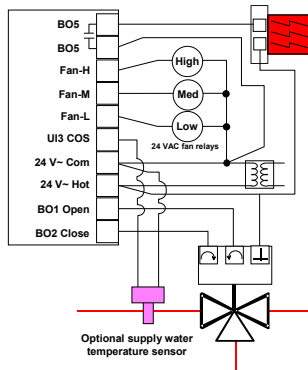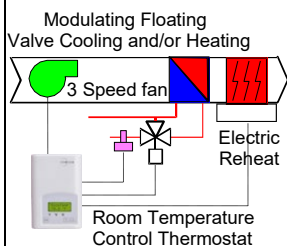

Mandatory

- Pipe no = 2 pipes
- CntrlTyp = Floating
- Fan Menu = 0 (L-M-H)
- FL time = *as per actuator*
- SeqOpera = 2 Cool/Reheat
- UI3 = COS

Remote sensor accessories

| Model no. | Description |
|------------|---|
| S3010W1000 | Wall mounted temperature sensor |
| S3020W1000 | Wall mounted temperature sensor with override button and occupancy status LED |
| S2060A1000 | Averaging temperature sensor |
| S2000D1000 | Duct mounted temperature sensor |



S3020W1000 WALL MOUNTED SENSOR

Remote mount temperature sensors use 10K type 2 NTC thermistors.

Features:

- Each sensor can be configured for various averaging combinations
- Optional occupancy led
- Optional override key


If one or multiple sensor(s) is/are connected into the RS terminal, the internal temperature sensor is automatically disabled. Disconnecting the sensor(s) in RS terminal will re-activate the internal sensor.

Wiring example of single remote room sensor:

VT7300 Series

S3020W1000
Remote wiring 1 sensor
S2=On, S3=On

S3010W1000
Remote wiring 1 sensor
S2=On, S3=On

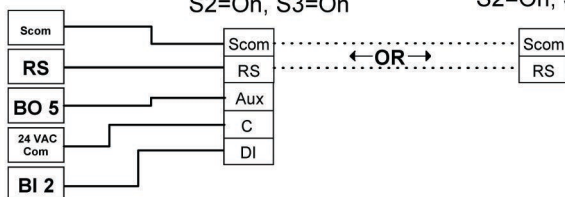

Dip switch setting for:
1 sensor


S2-1 = ON
S2-2 = ON

Wiring examples of 2 remote room sensors for averaging applications:

VT7300 Series 1 x S3010W1000 and 1 x S3020W1000

Remote wiring 2 sensors


S1=On, S2=Off

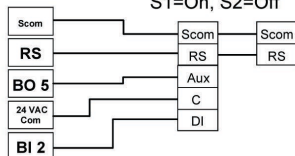

VT7300 Series 2 x S3020W1000

Remote wiring 2 sensors


S2=On, S3=Off

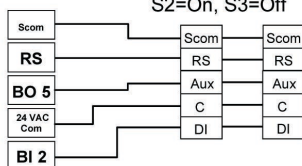

VT7300 Series 2 x S3010W1000

Remote wiring 2 sensors

S2=On, S3=Off



Notes for averaging applications:

- S3010W1000 and S3020W1000 can be mixed matched.
- S3010W1000 and S3020W1000 are to be wired in parallel.
- Respect the dip switch setting in each remote sensor.

Dip switch setting for:
2 sensors




S2-1 = OFF
S2-2 = ON

Wiring examples of 3 remote room sensors for averaging applications:

VT7300 Series 2x S3010W1000 and 1 x S3020W1000

Remote wiring 3 sensors


S2=Off, S3=Off

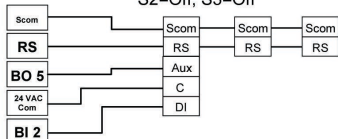

VT7300 Series 3x S3010W1000

Remote wiring 3 sensors

S2=Off, S3=Off



Dip switch setting for:
3 sensors



S2-1 = OFF
S2-2 = OFF

Temperature vs. resistance chart for 10 Kohm NTC thermistor ($R_{25^{\circ}\text{C}} = 10\text{K}\Omega \pm 3\%$, $B_{25/85^{\circ}\text{C}} = 3975\text{K} \pm 1.5\%$)

| °C | °F | Kohm | °C | °F | Kohm | °C | °F | Kohm | °C | °F | Kohm | °C | °F | Kohm |
|-----|-----|----------|-----|----|---------|----|----|---------|----|----|---------|----|-----|--------|
| -40 | -40 | 324.3197 | -20 | -4 | 94.5149 | 0 | 32 | 32.1910 | 20 | 68 | 12.4601 | 40 | 104 | 5.3467 |
| -35 | -31 | 234.4009 | -15 | 5 | 71.2430 | 5 | 41 | 25.1119 | 25 | 77 | 10.0000 | 45 | 113 | 4.3881 |
| -30 | -22 | 171.3474 | -10 | 14 | 54.1988 | 10 | 50 | 19.7390 | 30 | 86 | 8.0694 | 50 | 122 | 3.6202 |
| -25 | -13 | 126.6109 | -5 | 23 | 41.5956 | 15 | 59 | 15.6286 | 35 | 95 | 6.5499 | 55 | 131 | 3.0016 |

Status display

The VT7300 series wall-mount Terminal Equipment Controller features a two-line, eight-character display. There is a low level backlight level that is always active and can only be seen at night.

When left unattended, the Terminal Equipment Controller has an auto scrolling display that shows the actual status of the system. There is an option in the configuration menu to lockout the scrolling display and to only present the room temperature and conditional outdoor temperature to the user. With this option enabled, no local status is given of mode, occupancy and relative humidity.

Each item is scrolled one by one with the back lighting in low level mode. Pressing any key will cause the back light to come on to high level. When left unattended for 10 seconds after changes are made, the display will resume automatic status display scrolling.

To turn on the back light to high level, press any key on the front panel. The back lit display will return to low level when the Terminal Equipment Controller is left unattended for 45 seconds.

Sequence of auto-scroll status display:

| ROOM & HUMIDITY | SYSTEM MODE | SCHEDULE STATUS | OUTDOOR TEMPERATURE | ALARMS |
|---------------------------------------|------------------|-----------------|-------------------------|---------|
| x.x °C or °F XX % RH | Sys mode auto | Occupied | Outdoor x.x °C or °F | Service |
| If humidity display enabled | Sys mode cool | Stand-By | Network value only | Filter |
| RoomTemp x.x °C or °F | Sys mode heat | Unoccup | n/a | Window |
| If humidity display is not enabled | Sys mode off | Override | n/a | |

% RH display is conditional to:

(Humidity display is model and configuration dependent)

- Model with RH sensor built in
- Display function can be enabled with RH display parameter. Displayed range is 10 to 90 % RH

Outdoor air temperature

- Display is only enabled when outdoor air temperature network variable is received.

Occupancy status

- Occupied, Stand-By, Unoccupied and Override status are displayed on the scrolling display.




Alarms

- If alarms are detected, they will automatically be displayed at the end of the scrolling status display.
- When an alarm message is displayed, the backlit screen will illuminate at the same time as the message and shut off during the rest of the status display.
- A maximum of two alarms can appear at any given time. The priority for the alarms are as follows:


| | |
|---------|--|
| Service | Indicates that there is a service alarm as per one of the configured binary inputs (BI2) |
| Filter | Indicates that the filters are dirty as per one of the configured binary inputs (BI2) |
| Window | Indicates that the outside window or door is opened and that the Terminal Equipment Controller has cancelled any cooling or heating action (BI1) |

Three status LED's on the Terminal Equipment Controller cover are used to indicate the status of the fan (any speed), a call for heat, or a call for cooling.

Fan coil models

| | |
|--|---|
| When any of the fan speeds are ON , the FAN LED will illuminate |  |
| When heating & reheat is ON , the HEAT LED will illuminate |  |
| When cooling is ON , the COOL LED will illuminate |  |



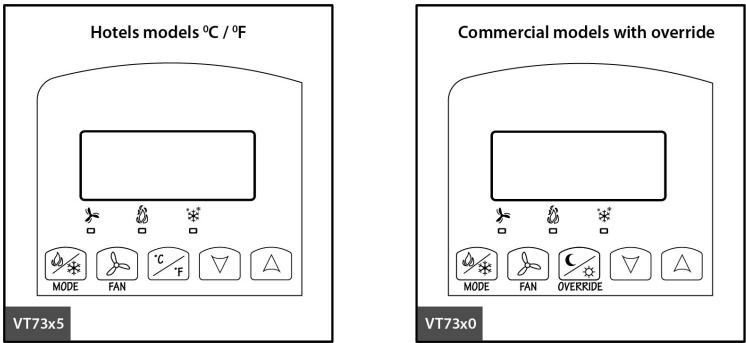



USER INTERFACE



Unoccupied mode override

An Override can be made on commercial models during an unoccupied period. If the Override option is enabled in the lockout configuration, pressing the middle override button will resume occupied setpoints for a time specified by the parameter “ToccTime”.

Local keypad interface

| | |
|--|--|
|  | <ul style="list-style-type: none">▪ Is used to toggle between the different system modes available as per sequence and menu selected.▪ Repetitively pressing the button will toggle between all the available modes.▪ Available menus are dependent on selected sequence of operation. |
|  | <ul style="list-style-type: none">▪ Is used to toggle between the different fan modes available as per the sequence and menu selected▪ Repetitively pressing the button will toggle between all the available modes▪ Available menus are dependent on selected sequence of operation and menu selected for Fan |
|  | <ul style="list-style-type: none">▪ Hotel and lodging applications. Toggles the local user temperature scale between °F and °C |
|  | <ul style="list-style-type: none">▪ Commercial and institutional applications. Set a local unoccupied timed override to occupied mode |
|  | <ul style="list-style-type: none">▪ In cooling mode only the cooling setpoint is displayed,▪ In heating mode only the heating setpoint is displayed▪ In auto mode, (See below) |
|  | <ul style="list-style-type: none">▪ In cooling mode only the cooling setpoint is displayed,▪ In heating mode only the heating setpoint is displayed▪ In auto mode, (See below) |

- Any setpoint change can be permanent or temporary based on configuration parameter (Setpoint Type)
- Any setpoint written through the network, will be permanent and cancel any active temporary setpoints
- Lockouts of access to certain functions is made with configuration parameter (lockout)

Dual occupied setpoints adjustment

(Local occupied setpoint adjustment when “Stp Func” = Dual Stp)

| COOLING MODE | HEATING MODE | OFF MODE | AUTO MODE <ul style="list-style-type: none">▪ Setpoint presented to user is the setpoint from the last action taken by the Terminal Equipment Controller or the one currently in use.▪ If the other setpoint is the one desired, then the MODE button is used to toggle between the current displayed one and the other. |
|-----------------------|-----------------------|--------------------------|--|
| Cool XX.X °F or °C | Heat XX.X °F or °C | No access to setpoint | Cool XX.X °F or °C or Heat XX.X °F or °C Toggle to (Heat or Cool)with MODE button |

- Heat/Cool setpoint toggle with MODE button to be active only in AUTO mode.
- If cooling, heating or off mode is active, function is disabled.

Single occupied setpoints adjustment

(Local occupied setpoint adjustment when “Stp Func” = Atch Stp)

| COOLING MODE | HEATING MODE | OFF MODE | AUTO MODE <ul style="list-style-type: none"> Setpoint presented to user is the setpoint from the last action taken by the Terminal Equipment Controller or the one currently in use. Both heating and cooling setpoints are changed simultaneously while respecting the minimum configured deadband If the other setpoint is the one desired, then the MODE button is used to toggle between the current displayed one and the other. |
|-----------------------|-----------------------|--------------------------|---|
| Cool XX.X °F or °C | Heat XX.X °F or °C | No access to setpoint | Cool XX.X °F or °C and Heat XX.X °F or °C Both heating & cooling setpoints change simultaneously Toggle from (Heat or Cool) using the system MODE button |

Unoccupied and stand-by setpoints adjustments

Setting of the stand-by and unoccupied setpoints is done through the network or through configuration setup only.

Mode button menu sequence

Modes presented to the user are dependent on the sequence of operation selected.

Default mode is shown in bold when sequence of operation parameter is changed.

The available mode can only be changed through the network since there is no local mode access

Sequence of operations

| SEQUENCE SELECTED | MODE MENU |
|--|---------------------------------|
| 0 = Cooling Only | Off - Cool |
| 1 = Heating Only | Off - Heat |
| 2 = Cooling With Electric Reheat | Off – Auto – Heat – Cool |
| 3 = Heating With Electric Reheat | Off - Heat |
| 4 = Cooling and Heating (2 modulating outputs) | Off – Auto – Heat – Cool |
| 5 = Cooling / Heating (2 modulating outputs) with reheat | Off – Auto – Heat – Cool |

Available fan button menu sequences

| FAN BUTTON MENU CONFIGURATION | MENU PRESENTED ARE DEPENDENT ON MODEL USED AND SEQUENCE OF OPERATION SELECTED | DEFAULT VALUE WHEN SEQUENCE TOGGLED |
|-------------------------------|---|-------------------------------------|
| 0 Low-Med-High | 3 Speed configuration using 3 fan relays (L-M-H) | High |
| 1 Low-High | 2 Speed configuration using 2 fan relays (L-H) | High |
| 2 Low-Med-High-Auto | 3 Speed configuration with Auto fan speed mode using 3 fan relays (L-M-H-A) | High |
| 3 Low-High-Auto | 2 Speed configuration with Auto fan speed mode using 2 fan relays (L-H-A) | High |
| 4 On-Auto | Single Speed configuration. Auto is for Fan on demand / On is On all the time | Auto |

Auto speed fan mode is also offered in heating mode applications; it will not have any effect on dehumidification. It will strictly be used for noise comfort issues.

Auto Speed Fan Mode operation for sequences 2 and 3 is dependent on Auto Fan parameter. When Auto Fan is set to:






- AS (Default) = Auto Speed during occupied periods. Fan is always on during occupied periods. Low, medium and high speeds operate on temperature offset from set point.
- AS AD = Auto Speed / Auto Demand during occupied periods.
 - Medium and high speeds operate on temperature offset from set point. Low speed operates on demand and will shut down when no demand is present.

INSTALLER CONFIGURATION PARAMETER MENU

Configuration can be done through the network or locally at the Terminal Equipment Controller.

- To enter configuration, press and hold the middle button (°C/°F or Override) for 8 seconds.
- If a password lockout is active, "Password" is prompted. Enter password value using the "up" and "down" arrows and press the middle button again to gain access to all configuration properties of the Terminal Equipment Controller. Entering a wrong password will prevent local access to the configuration menu.
- Press the same middle button repetitively to scroll between all the available parameters.
- Use the up and down key to change the parameter to the desired value.
- To acknowledge and save the new value, press the middle button again.
- The next parameter will now be displayed.

Configuration interface

| | |
|--|---|
|  | Re-starts the configuration parameter list from the beginning |
|  | Enters the configuration mode. Press and hold for 8 seconds |
|  | Pressing repetitively will individually scroll all the available parameters |
|  | Adjust / rotate parameter value down |
|  | Adjust / rotate parameter value up |

| CONFIGURATION PARAMETERS DEFAULT VALUE | SIGNIFICANCE AND ADJUSTMENTS |
|--|--|
| PswrdSet Configuration parameters menu access password Default value = 0 Range is: 0 to 1000 | This parameter sets a password access to prevent unauthorized access to the configuration menu parameters. A default value of “0” will not prompt a password or lock the access to the configuration menu. Range is: 0 to 1000 |
| Com Addr Terminal Equipment Controller networking address Default value = 254 Range is: 0 to 254 | Conditional parameter to BACnet™ MS-TP models VT73xxX5x00B Conditional parameter to Wireless models VT73xxX5x00W <ul style="list-style-type: none">For BACnet™ MS-TP models, the valid range is from 1 to 127. Default value of 254 disables BACnet™ communication for the Terminal Equipment Controller.For wireless models, the valid range is 0 to 254 with a maximum of 30 Terminal Equipment Controller per VWG |

| | |
|--|---|
| <p>PAN ID Personal Area Network Identification Default value = 0 Range is: 0 to 500</p> | <p>Conditional parameter to Wireless models VT73xxX5x00W</p> <p>This parameter will only appear when a wireless network adapter is present. If the Terminal Equipment Controller is installed as a stand-alone (Network Ready) unit or with a BACnet™ or Echelon™ adapter, this parameter will not be used or displayed.</p> <p>This parameter (Personal Area Network Identification) is used to link specific Terminal Equipment Controllers to a single specific Viconics wireless gateway (VWG). For every Terminal Equipment Controller reporting to a gateway (maximum of 30 Terminal Equipment Controllers per gateway), be sure you set the <i>SAME</i> PAN ID value both on the gateway and the Terminal Equipment Controller(s).</p> <p>The default value of 0 is <i>NOT</i> a valid PAN ID. The valid range of available PAN ID is from 1 to 500.</p> <p>Range 1 to 250 for centralized networked applications using a VWG or a Jace with the wireless stat driver</p> <p>Range 251 to 500 is for stand-alone (Network Ready) applications where no VWG or Jace with the wireless stat driver is used.</p> |
| <p>Channel Channel selection Default value = 10 Range is: 10 to 26</p> | <p>Conditional parameter to Wireless models VT73xxX5x00W</p> <p>This parameter will only appear when a wireless network adapter is present. If the Terminal Equipment Controller is installed as a stand-alone (Network Ready) unit or with a BACnet™ or Echelon™ adapter, this parameter will not be used or displayed.</p> <p>This parameter (Channel) is used to link specific Terminal Equipment Terminal Equipment Controllers to specific Viconics wireless gateway(s) (VWG). For every Terminal Equipment Terminal Equipment Controller reporting to a gateway (maximum of 30 Terminal Equipment Controllers per gateway), be sure you set the <i>SAME</i> channel value both on the gateway and the Terminal Equipment Controller(s).</p> <p><i>Viconics recommends using only the usage of channels 15 and 25 only.</i></p> <p>The default value of 10 is <i>NOT</i> a valid channel. The valid range of available channel is from 11 to 26</p> |

| | |
|--|--|
| <p>Get From Terminal Equipment Controller Get From another device configuration utility Default value = 0 Range is: 0 to 254</p> | <p>Conditional parameter to Wireless models VT73xxX5x00W</p> <p>Entering a MAC address enables an automatic routine that automatically fetches all the required configuration properties of the current device from another already configured device and copies the same required configured property values.</p> <p>If a value other than the default value of 255 is entered, user will then be prompted to exit the Configuration Menu thus leaving all other parameter configuration to be copied from the referenced Terminal Equipment Controller MAC address.</p> <p>Ex.: If you are currently configuring MAC12 and the settings <u>matches exactly</u> the settings of ZN MAC5, then enter 5 as the current parameter value.</p> <ul style="list-style-type: none"> ▪ If the process is successful and all required configuration properties have been copied, the value will revert back to 255 ▪ If the process is <i>NOT</i> successful and all required configuration properties have NOT been copied (either the reference device is <i>NOT</i> the same model number or is offline or does not exists) the value will revert back to 254 to indicate the failure of the process <p>Leaving the Get From parameter to 255 means that every configuration parameters will be set manually.</p> |
|--|--|

| | |
|--|---|
| <p>BI 1 Binary input no.1 configuration Default value = None</p> | <p>(None): No function will be associated with the input. Input can be used for remote network monitoring.</p> <p>(Rem NSB): remote NSB timer clock input. The scheduling will now be set as per the binary input. It provides low cost setback operation via a dry contact</p> <ul style="list-style-type: none"> ▪ Contact opened = Occupied ▪ Contact closed = Unoccupied <p>(Motion NO) or (Motion NC): Advanced PIR occupancy functions using a Normally Open (NO) or Normally Closed (NC) remote PIR motion sensor. Occupancy mode is now set as per applied PIR function and configuration. Application information and examples are available in document: <i>APP-PIR-Guide-Exx</i>. This document will provide the installers and system designers with detailed examples on applications, parameter configuration information, sequence of operation, troubleshooting and diagnostic help required for the proper usage of the PIR accessory covers</p> <p>(Window) EMS: Forces the system to disable any current heating or cooling action by the Terminal Equipment Controller. The mode stays the same and the current setpoints are the same Occupied setpoints. Only the outputs are disabled. There is a Door/Window alarm displayed on the Terminal Equipment Controller to indicate to the local tenant that the door/window needs to be closed for cooling or heating to resume.</p> <ul style="list-style-type: none"> ▪ Contact opened = Window Opened ▪ Contact closed = Window Closed <p>*These settings will disable the local override function on the Terminal Equipment Controller</p> |
|--|---|

BI 2

Binary input no.2 configuration
Default value = **None**

(None): No function will be associated with the input
(Door Dry) Door contact & Motion detector: This configuration is only functional if binary input #1 is set to **Motion NO** or **Motion NC** or a **PIR accessory cover** is used.

With this sequence enabled, the occupancy is now dictated through those 2 inputs. Any motion detected will set the zone to occupied status. The zone will remain permanently in occupied mode until the door contact switch opens momentarily. The Terminal Equipment Controller will then go in stand-by mode. If more movements are detected, the occupied mode will resume. While the door is opened, any movements detected by the remote PIR sensor or the PIR accessory cover will be ignored. Use a Normally Closed contact switching device.

Contact opened = Door opened

Contact closed = Door closed

(RemOVR): temporary occupancy remote override contact. This function disables the central button override function on the Terminal Equipment Controller. The override function is now controlled by a manual remote momentarily closed contact. When configured in this mode, the input operates in a toggle mode.

It is now possible to toggle between unoccupied & occupied setpoints for the amount of time set by parameter (TOccTime) temporary occupancy time.

(Filter): a backlit flashing **Filter** alarm will be displayed on the Terminal Equipment Controller LCD screen when the input is energized. It can be tied to a differential pressure switch that monitor filters






























Contact opened = No alarm

Contact closed = Alarm displayed

(Service): a backlit flashing **Service** alarm will be displayed on the Terminal Equipment Controller LCD screen when the input is energized. It can be tied in to the AC unit control card, which provides an alarm in case of malfunction.


- Contact opened = No alarm
- Contact closed = Alarm displayed

| | |
|--|---|
| <p>UI3 Universal input no.3 configuration Default value = None</p> | <p>(None): No function will be associated with the input</p> <p>(COC/NH) Change over dry contact. Normally Heat: Used for hot / cold water or air change over switching in 2 pipe systems. Contact closed = Cold water or air present Contact opened = Hot water or air present Only used and valid if system is setup as 2 pipes. Parameter (Pipe No) set as 2 pipes.</p> <p>(COC/NC) Change over dry contact. Normally Cool: Used for hot / cold water or air change over switching in 2 pipe systems. Contact closed = Hot water present Contact opened = Cold water present Only used and valid if system is setup as 2 pipes. Parameter (Pipe No) set as 2 pipes.</p> <p>(COS) Change over analog sensor: Used for hot / cold water or air change over switching in 2 pipe systems. Only used and valid if system is setup as 2 pipes. Parameter (Pipe No) set as 2 pipes. If water temperature is > 78 °F = Hot water present If water temperature is < 75 °F = Cold water present</p> <p>(SS) Supply air sensor monitoring: Used for supply air temperature monitoring. Only used for network reporting of the supply air temperature. Has no internal function in the Terminal Equipment Controller.</p> |
| <p>MenuScro Menu scroll Default value = On = Scroll active</p> | <p>Removes the scrolling display and displays the room temperature/humidity to the user. With this option enabled, no mode, schedule and outdoor temperature status is given.</p> <ul style="list-style-type: none"> ▪ On = Scroll active ▪ Off = Scroll not active |
| <p>AutoMode Enables Auto menu for Mode button Default value = On</p> | <p>Enables Auto function for the mode button For sequences 2, 4 & 5 only</p> <ul style="list-style-type: none"> ▪ On = Auto active (Off-Cool-Heat-Auto) ▪ Off = auto not active (Off-Cool-Heat) |
| <p>C or F Sets scale of the Terminal Equipment Controller Default value = °F</p> | <ul style="list-style-type: none"> ▪ °F for Fahrenheit scale ▪ °C for Celsius scale <p>On hotel models, this sets the default value when the Terminal Equipment Controller powers up</p> |

| | | | | |
|--|---|--|---|---|
| %RH disp Local %RH Display Default value = Off Models with Humidity sensor only | Conditional parameter to Humidity models VT735xX5x00(X) Enables the display of humidity value below the room temperature value on the display <ul style="list-style-type: none">▪ On = Display %RH▪ Off = No display of %RH | | | |
| Lockout Keypad lockout levels Default value = 0 No lock | | | | |
| USER KEY FUNCTIONS | | | | |
| LEVEL |  MODE |  FAN |  OVERRIDE |   |
| 0 |  |  |  |  |
| 1 |  |  |  |  |
| 2 |  |  |  |  |
| 3 |  |  |  |  |
| 4 |  |  |  |  |
| 5 |  |  |  |  |
| Pipe No System type installation Number of pipes Default is: 4.0 Pipes | Defines the type of system installed 2.0 Pipes, will limit the number of sequences of operation available from 0 to 4 Will enable heat/cool operation from the same output 4.0 Pipes, can access all the sequences of operation from 0 to 2 Will enable heat/cool operation from different output | | | |
| CntrlTyp Control type for Triac models Default is: Floating | Defines the type of control output for the type of valves installed VT7350C10xx, VT7300C10xx, VT7355C10xx and VT7305C10xx only On/Off is for normally opened or normally closed 24 VAC 2 position valves Floating is for modulating 3 wires control of 24 VAC floating valves | | | |
| SeqOpera Sequence of operation Default is: Sequence #1 | Selects the initial sequence of operation required by the installation type and the application | | | |

| | SYSTEM = 2 PIPES | SYSTEM = 4 PIPES |
|---|---|--|
| 0 = Cooling Only | Off - Cool | 0 = Cooling Only |
| 1 = Heating Only | Off - Heat | 1 = Heating Only |
| 2 = Cooling With Electric Reheat | Off – Auto – Heat – Cool | 2 = Cooling With Electric Reheat |
| 3 = Heating With Electric Reheat | Off - Heat | 3 = Heating With Electric Reheat |
| 4 = Cooling and Heating (2 modulating outputs) | Off – Auto – Heat – Cool | 4 = Cooling and Heating (2 modulating outputs) |
| 5 = Cooling / Heating (2 modulating outputs) with reheat | Off – Auto – Heat – Cool | 5 = Cooling / Heating (2 modulating outputs) with reheat |
| | <p>For 2 Pipe output applications, the system access is limited if RUI 1 is configured for local changeover COS, COC/NC or COC/NC. The current water temperature detected by the RUI 1 then limits the system mode available for the local configuration or network write.</p> <p>For sequence 2 & 3, set PulsedHt to On to enable pulsed electric reheat applications with VR7300B & E</p> | |
| Fan Menu Mode button menu configuration Default is: Menu #4 | Menu displayed are dependent on model used and sequence of operation selected Auto Mode operation for sequences 2 and 3 is dependent on Auto Fan parameter | |
| 0 = Low-Med-High | 3 Speed configuration using 3 fan relays (L-M-H) | |
| 1 = Low-High | 2 Speed configuration using 2 fan relays (L-H) | |
| 2 = Low-Med-High-Auto | 3 Speed configuration with Auto fan speed mode using 3 fan relays (L-M-H-A) | |
| 3 = Low-High-Auto | 2 Speed configuration with Auto fan speed mode using 2 fan relays (L-H-A) | |
| 4 = On-Auto | Single Speed configuration. Auto is for Fan on demand / On is On all the time | |
| DHumiLCK Dehumidification lockout Default value: On = Authorized | Conditional parameter to Humidity models VT735xX5x00(X) Typically toggled via the network. This variable enables or disables dehumidification based on central network requirements from the BAS front end <ul style="list-style-type: none"> On = Dehumidification Authorized Off = Dehumidification Not Authorized | |
| %RH set Dehumidification setpoint Default is 50 % RH | Conditional parameter to Humidity models VT735xX5x00(X) Used only if dehumidification sequence is enabled: Range is: 30-95% RH | |

| | |
|---|---|
| DehuHyst Dehumidification Hysteresys Default = 5 % RH | Conditional parameter to Humidity models VT735xX5x00(X) Humidity control hysteresis. Used only if dehumidification sequence is enabled: Range is: 2 to 20% RH |
| DehuCool Maximum Dehumidification Cooling output Default = 100 % | Conditional parameter to Humidity models VT735xX5x00(X) Maximum cooling valve position when dehumidification is enabled. This can be used to balance smaller reheat loads installed relative to the capacity of the cooling coil. Range is: 20 to 100 % |
| St-By TM Stand-by Timer value Default = 0.5 hours | Time delay between the moment when the PIR sensor detected the last movement in the area and the time when the Terminal Equipment Controller stand-by mode and setpoints become active. Range is: 0.5 to 24.0 hours in 0.5hr increments |
| Unocc TM Unoccupied Timer value Default = 0.0 hours | Time delay between the moment when the Terminal Equipment Controller toggles to stand-by mode and the time when the Terminal Equipment Controller unoccupied mode and setpoints become active. The factory value or 0.0 hours: Setting this parameter to its default value of 0.0 hours disables the unoccupied timer. This prevents the Terminal Equipment Controller to drift from stand-by mode to unoccupied mode when PIR functions are used Range is: 0.0 to 24.0 hours in 0.5hr increments |
| St-By HT Stand-by heating setpoint Default value = 69 °F | The value of this parameter should reside between the occupied and unoccupied heating setpoints and make sure that the difference between the stand-by and occupied value can be recovered in a timely fashion when movement is detected in the zone. Stand-by heating setpoint range is: 40 to 90 °F (4.5 to 32.0 °C) |
| St-By CL Stand-by cooling setpoint limit Default value = 78 °F | The value of this parameter should reside between the occupied and unoccupied cooling setpoints and make sure that the difference between the stand-by and occupied value can be recovered in a timely fashion when movement is detected in the zone. Stand-by cooling setpoint range is: 54 to 100 °F (12.0 to 37.5 °C) |
| Unocc HT Unoccupied heating setpoint Default value = 62 °F | Unoccupied heating setpoint range is: 40 to 90 °F (4.5 to 32.0 °C) |

| Unocc CL Unoccupied cooling setpoint limit Default value = 80 °F | Unoccupied cooling setpoint range is: 54 to 100 °F (12.0 to 37.5 °C) | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|-------------------|-------------------|-------------------|---|-----|-------|---|-----|-------|---|-----|-------|---|-----|-------|---|-----|-------|---|-----|-------|---|-----|-------|----|------|-------|
| Heat max Maximum heating setpoint limit Default value = 90 °F (32 °C) | Maximum occupied & unoccupied heating setpoint adjustment. Heating setpoint range is: 40 to 90 °F (4.5 to 32.0 °C) | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Cool min Minimum cooling setpoint limit Default value = 54 °F (12 °C) | Minimum occupied & unoccupied cooling setpoint adjustment. Cooling setpoint range is: 54 to 100 °F (12.0 to 37.5 °C) | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Pband Proportional band setting Default = 3 | <p>Adjust the proportional band used by the Terminal Equipment Controller PI control loop.</p> <div> Note that the default value of 3.0 °F (1.2 °C) gives satisfactory operation in most normal installation cases. The use of a proportional band different than the factory one is normally warranted in applications where the Terminal Equipment Controller location is problematic and leads to unwanted cycling of the unit. A typical example is a wall mounted unit where the Terminal Equipment Controller is installed between the return and supply air feeds and is directly influenced by the supply air stream of the unit.</div> <table><tr><th>VALUE</th><th>°F SCALE PBAND</th><th>°C SCALE PBAND</th></tr><tr><td>3</td><td>3 F</td><td>1.2 C</td></tr><tr><td>4</td><td>4 F</td><td>1.7 C</td></tr><tr><td>5</td><td>5 F</td><td>2.2 C</td></tr><tr><td>6</td><td>6 F</td><td>2.8 C</td></tr><tr><td>7</td><td>7 F</td><td>3.3 C</td></tr><tr><td>8</td><td>8 F</td><td>3.9 C</td></tr><tr><td>9</td><td>9 F</td><td>5.0 C</td></tr><tr><td>10</td><td>10 F</td><td>5.6 C</td></tr></table> | VALUE | °F SCALE PBAND | °C SCALE PBAND | 3 | 3 F | 1.2 C | 4 | 4 F | 1.7 C | 5 | 5 F | 2.2 C | 6 | 6 F | 2.8 C | 7 | 7 F | 3.3 C | 8 | 8 F | 3.9 C | 9 | 9 F | 5.0 C | 10 | 10 F | 5.6 C |
| VALUE | °F SCALE PBAND | °C SCALE PBAND | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | 3 F | 1.2 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 4 F | 1.7 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | 5 F | 2.2 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | 6 F | 2.8 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | 7 F | 3.3 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | 8 F | 3.9 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | 9 F | 5.0 C | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | 10 F | 5.6 C | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | |
|--|--|
| Set Type Temporary setpoint enable Default is : Permnet Enables temporary setpoints feature to any change of occupied or unoccupied setpoint. | Temporar: (temporary) Local changes to the heating or cooling setpoints by the user are temporary. They will remain effective for the duration specified by "ToccTime". Setpoints will then revert back to their default value after internal timer "ToccTime" expires. To change setpoints permanently, revert this variable to No or write setpoints through the network. Any setpoints written through the network will be permanent and saved to EEPROM. Permnet: (permanent) Any change of occupied or unoccupied setpoints through the keypad by the user are permanent and saved to & EEPROM |
| SptFunc Local setpoint settings Default value = Dual Stp | Set the local setpoint interface for the user <ul style="list-style-type: none"> ▪ Dual Stp (Dual Occupied Setpoints Adjustment) ▪ AttchStp (Single Occupied Setpoint Adjustment) |
| ToccTime Temporary occupancy time Default value = 2 hours | Temporary occupancy time with occupied mode setpoints when override function is enabled. When the Terminal Equipment Controller is in unoccupied mode, function is enabled with either the menu or UI2 configured as remote override input. Range is: 0,1, 2, 3, 4, 5, 6, 7, 8, 9, 10, & up to 24 hours |
| Deadband Minimum deadband Default value = 2.0 °F (1.0 °C) | The minimum deadband value between the heating and cooling setpoints. When modified, it will take effect only when any of the setpoints are modified again. Range is: 2, 3, 4 or 5 °F, 1.0 °F increments (1.0 to 2.5 °C, 0.5 °C increments) |
| Cal RS Room temperature sensor calibration Default value = 0.0 °F or °C | Offset that can be added/subtracted to the actual displayed room temperature Range is: ± 5.0 °F, 1.0 °F increments (± 2.5 °C, 0.5 °C increments) |
| Cal RH Humidity sensor calibration Default value = 0 %RH | Offset that can be added/subtracted to the actual displayed humidity by ± 15.0 %RH. Range is : ± 15.0 %RH |

| | |
|---|---|
| <p>aux cont Auxiliary contact function & configuration Default value = 0 Not Used</p> | <p>0 Aux contact function used for reheat <u>IF SEQUENCE IS SET TO REHEAT THROUGH NETWORK OR LOCAL</u>, Ignore this parameter.</p> <p>The output will directly follow the occupancy of the Terminal Equipment Controller 1 Auxiliary NO, Occ or St-By = Contact Closed / Unoccupied = Contact Opened 2 Auxiliary NC, Occ or St-By = Contact Opened / Unoccupied = Contact Closed</p> <p>Output to follow directly main occupancy and Fan on command Typically used for 2 position fresh air damper applications. 3 Auxiliary NO, Occ or St-By & Fan On = Contact Closed / Unoccupied & Fan On or Off = Contact Opened 4 Auxiliary NC, Occ or St-By & Fan On = Contact Opened / Unoccupied & Fan On or Off = Contact Closed</p> <p>Output to follow secondary network occupancy command 5 Auxiliary On/Off Control through auxiliary network command. The output can be commanded through the network for any required auxiliary functions through a separate & dedicated network variable.</p> |
| <p>Auto Fan Auto Fan Function Default value: AS</p> | <p>Auto Speed Fan Mode operation for Fan Sequences 2 and 3 AS = Auto Speed during occupied periods. Fan is always on during occupied periods.</p> <p>AS AD = Auto Speed / Auto Demand during occupied periods.</p> |
| <p>FL time For floating models VT73xxC5x00(x) only Default value: 1.5 minutes</p> | <p>Floating actuator timing Maximum stroke time of floating valve actuator.</p> <p>Range is: 0.5 to 9.0 minutes in 0.5 minutes increment</p> |
| <p>cph On/Off devices cycles per hour For On/Off models & sequences VT73xxC5x00(x) only Default value = 4 C.P.H.</p> | <p>Will set the maximum number cycles per hour under normal control operation. It represents the maximum number of cycles that the equipment will turn ON and OFF in one hour. Note that a higher C.P.H will represent a higher accuracy of control at the expense of wearing mechanical components faster.</p> <p>Range is: 3, 4, 5, 6, 7 & 8 C.P.H.</p> |
| <p>RA/DA For Analog models VT73xxF5x00(x) only Default value: DA signal</p> | <p>Reverse acting or Direct acting signal for Analog output signals DA = Direct acting, 0 to 100 % = 0 to 10 VDC RA = Reverse acting, 0 to 100 % = 10 to 0 VDC</p> |

| | |
|--|---|
| Reheat Default value: 0 = 15 minute | Sets the reheat output time base Valid only if reheat sequences are enabled 0 = 15 minutes 1 = 10 seconds for Solid state relays |
| UI3 dis Display UI3 value. | Used as diagnostic / service help to troubleshoot and diagnose sensor operation Supply or change over temperature when UI3 is configured as an analog input (SS or COS) |

SPECIFICATIONS



| | |
|--|--|
| Terminal Equipment Controller power requirements: | 19-30 VAC 50 or 60 Hz; 2 VA Class 2 |
| Operating conditions: | 0 °C to 50 °C (32 °F to 122 °F) 0% to 95% R.H. non-condensing |
| Storage conditions: | -30 °C to 50 °C (-22 °F to 122 °F) 0% to 95% R.H. non-condensing |
| Temperature sensor: | Local 10 K NTC thermistor |
| Temperate sensor resolution: | ± 0.1 °C (± 0.2 °F) |
| Temperature control accuracy: | ± 0.5 °C (± 0.9 °F) @ 21 °C (70 °F) typical calibrated |
| Humidity sensor and calibration | Single point calibrated bulk polymer type sensor |
| Humidity sensor precision | Reading range from 10-90% R.H. non-condensing 10 to 20% precision is 10% 20 to 80% precision is 5% 80 to 90% precision is 10% |
| Humidity sensor stability | Less than 1.0% yearly (typical drift) |
| Dehumidification setpoint range | 30 to 95% R.H. |
| Contact output rating | Triac output: 30 VAC, 1 Amp. Maximum, 3 Amp. In-rush. Analog: 0 to 10 VDC into 2KΩ resistance min. |
| Occ, Stand-By and Unocc cooling setpoint range: | 12.0 to 37.5 °C (54 to 100 °F) |
| Occ, Stand-By and Unocc heating setpoint range: | 4.5 °C to 32 °C (40 °F to 90 °F) |
| Room and outdoor air temperature display range: | -40 °C to 50 °C (-40 °F to 122 °F) |
| Proportional band for room temperature control: | Cooling & Heating: Default: 1.8°C (3.2°F) |
| Binary inputs: | Dry contact across terminal BI1, BI2 & UI3 to Scom |
| Wire gauge: | 18 gauge maximum, 22 gauge |
| Approximate shipping weight: | 0.75 lb (0.34 kg) |
| Agency Approvals all models: | UL: UL 873 (US) and CSA C22.2 No. 24 (Canada), File E27734 with CCN XAPX (US) and XAPX7 (Canada) Industry Canada: ICES-003 (Canada) |
| Agency Approvals all models: | FCC: Compliant to CFR 47, Part 15, Subpart B, Class A (US) CE : EMC Directive 89/336/EEC (Europe Union) C-Tick: AS/NZS CISPR 22 Compliant (Australia / New Zealand) Supplier Code Number N10696 |
| Agency Approvals Wireless models: | FCC: Compliant to: Part 15, Subpart C |

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.



Please check with your local government for instruction on disposal of this product.

DRAWING & DIMENSIONS

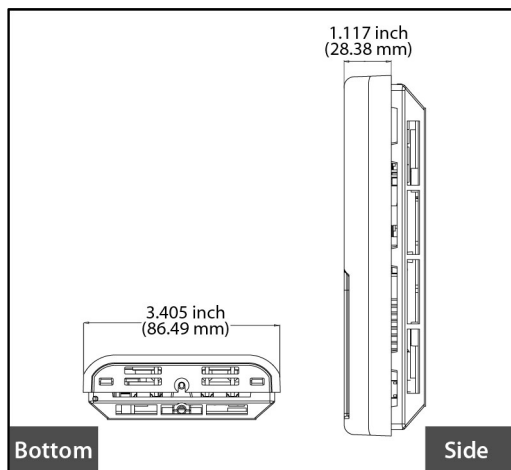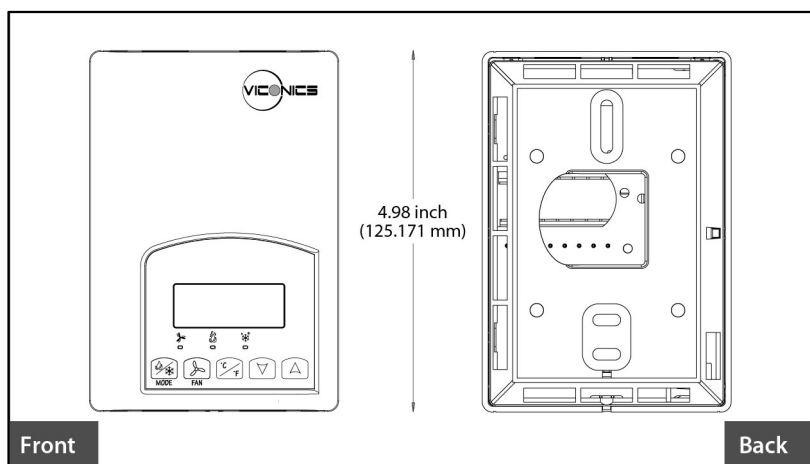

Viconics Technologies Inc.

7262 Marconi Street | Montreal | Quebec | Canada | H2R 2Z5

Tel.: (514) 313-8885 | Toll free: 1 (800) 563-5660

sales@viconics.com | www.viconics.com